



<u>KEY NO.</u>	<u>DESCRIPTION</u>	<u>PART NO.</u>	<u>KEY NO.</u>	<u>DESCRIPTION</u>	<u>PART NO.</u>
<b>PREMIER 10</b>			<b>PREMIER 10</b>		
1	Space Washer	1195751	41	Screw(6 Req)	1221488
2	O-Ring	1195755	42	Bearing Retainer(2 Req)	1252612
3	Bearing Sleeve	1195758	43	Oscillation Mount	1252615
4	Ball Bearing	1195757	44	Idler Gear	1195767
5	Seal	1195761	45	Screw	1221496
6	Spool Shaft Washer	1195763	46	Gear Box	1252619
7	Spool Shaft	1252579	47	Screw(2 Req)	1221499
8	Screw	1195642	48	Switch Spring	1221500
9	Screw(2 Req)	1252582	49	Switch Lever	1221501
10	Washer(2 Req)	1252583	50	IAR Switch	1221502
11	Bail Arm	1252584	51	Clip	1221504
12	Ball Bearing(2 Req)	1252587	52	Screw	1221460
13	Line Roller	1252588	53	Stem Insert	1252622
14	Spacer	1252589	54	Stem	1252624
15	O-Ring	1195591	55	Guide Bar	1221428
16	Clip	1195592	56	Main Gear	1252627
17	Bail Holder	1252591	57	Shim	1195560
18	Bail Wire	1252593	58	Handle Assembly	1252631
19	Screw	1252594	59	Ball Bearing(2 Req)	1195641
20	Rotor Locking Plate	1195770	60	Oscillation Gear	1252634
21	Rotor Nut	1195643	61	Spacer	1195778
22	Screw(2 Req)	1221462	62	Screw	1195812
23	Bail Arm Cover	1252595	63	Screw	1195659
24	Pivot Lever	1195617	64	Oscillation Slider	1252635
25	Pivot Arm	1195619	65	Drag Knob	1252636
26	Bail Spring	1252598	66	Screw(4 Req)	1221524
27	Bail Trip Bar	1252599	67	Spool Top	1252639
28	Bushing(2 Req)	1221467	68	Spool	1252643
29	Rotor	1252600	69	Line Clip Spring	1252661
30	Bail Holder Cover	1252602	70	Line Clip	1221543
31	Screw(3 Req)	1195572	71	Key Washer(2 Req)	1252646
32	Bearing Holder Cover	1252604	72	Spool Washer	1252647
33	Ball Bearing(4 Req)	1181780	73	Drag Washer(2 Req)	1252648
34	Bearing Holder	1252605	74	O-Ring	1252649
35	Clutch Assembly	1195773	75	Spool Click Retainer	1252650
36	Clutch Spring	1252606	76	Spool Click	1252651
37	Pinion	1252607	77	Spool Bottom	1252652
38	Screw(4 Req)	1195720	78	Clip	1252653
39	Rotor Brake	1252610	79	Main Spool Assembly	1252654
40	Handle Screw Cover	1221484	80	Spare Spool Assembly(Not Shown)	1252658