



KEY NO.	DESCRIPTION	PART NO.	KEY NO.	DESCRIPTION	PART NO.
		<b>PREMIER 40</b>			<b>PREMIER 40</b>
1	Space Washer	1195751	41	Screw (6 Req)	1221488
2	O-Ring	1195755	42	Bearing Retainer (2 Req)	1260224
3	Bearing Sleeve	1195758	43	Screw	1195720
4	Ball Bearing	1195757	44	Oscillation Mount	1260226
5	Seal	1195761	45	Idler Gear	1195767
6	Spool Shaft Washer	1195763	46	Screw	1221496
7	Spool Shaft	1260209	46A	Washer (2 Req)	1252583
8	Screw	1195642	47	Gear Box	1260228
9	Screw (2 Req)	1221453	48	Screw (2 Req)	1221499
10	Bail Arm	1221454	49	Switch Spring	1221500
11	Ball Bearing (4 Req)	1195641	50	Switch Lever	1221501
12	Line Roller	1195620	51	IAR Switch	1221502
13	Spacer (2 Req)	1195778	52	Clip	1221504
14	O-Ring	1195591	53	Stem	1260230
15	Clip	1195592	54	Guide Bar (2 Req)	1260233
16	Bail Holder	1221456	55	Main Gear	1221510
17	Bail Wire	1260211	56	Shim	1195560
18	Screw	1221460	57	Handle Assembly	1260234
19	Rotor Locking Plate	1195770	58	Oscillation Gear	1195805
20	Rotor Nut	1195643	59	Screw	1195659
21	Screw (2 Req)	1221462	60	Screw	1195812
22	Bail Arm Cover	1260212	61	Oscillation Slider	1260236
23	Pivot Lever	1195617	62	Drag Knob	1221522
24	Bail Spring Bushing	1195619	63	Screw (4 Req)	1221524
25	Bail Spring	1195613	64	Spool Top	1221526
26	Bail Trip Bar	1260214	66	Spool	1260237
27	Bushing (2 Req)	1221467	67	Line Clip Spring	1195693
28	Rotor	1260215	68	Line Clip	1221543
29	Bail Holder Cover	1260217	69	Keyed Washer (3 Req)	1195739
30	Rotor Brake Linkage	1260221	70	Drag Washer (4 Req)	1195729
31	Rotor Brake Spring	1221475	71	Spool Washer	1260241
32	Rotor Brake Pad	1221476	72	O-Ring	1260243
33	Screw (3 Req)	1221477	73	Spool Click Retainer	1221554
34	Bearing Holder Cover	1260222	74	Spool Click	1221555
35	Ball Bearing (4 Req)	1181780	75	Spool Bottom	1260244
36	Bearing Holder	1252605	76	Clip	1251981
37	Clutch Spring	1221480	77	Spool Washer	1260245
38	Clutch Assembly	1195773	78	Spool Assembly	1260247
39	Pinion	1260219	79	Alum.spare spoolassy. (Not Shown)	1260251
40	Handle Screw Cover	1221484			