


## PLANE-R-BOOM

Key No.	Part Name	Part No.	Comp. No.
1	Side plate — swivel head (left)	C2038L	0235048
2	Bearing — pulley wheel (2 needed)	C2042	9010070
3	Pulley wheel — swivel head (right)	C2353	0269726
4	Side plate — swivel head	C2039R	0235045
5	Screw — swivel head (6 needed)	C2184	9370010
6	Swivel head assembly	C2043A	2250135
7	Upper boom	C2627A	2000811
8	Small knob	C2186A	0249900
9	Large knobs (4 needed)	C2484A	2048618
10	Base	C2423	0807329
11	Base plate	C2269	2200893
12	Allen screw (2 needed)	C2421	9340100
13	Lower boom	C2628A	2000810
14	Short boom (for C2790A-C2439A)	C2224A	0810367

## PLANE-R-REEL

Key No.	Part Name	Part No.	Comp. No.
1	Bolt — crank handle (3/8-18 x 2")	C2347	9280610
2	Handle — crank	C2031	0240590
3	Crank assembly	C2288A	2202306
4	Lock washer — crank handle bolt	C2348	9430180
5	Jam nut — crank handle bolt	C2349	9130240
1, 2, 4, & 5.	Handle — package assembly	C2411A	1040910
6	Cable reel	C2300	0274735
7	Set screw (half-dog 5/16-18 x 1")	C2265	9340130
8	Cover — clutch	C2662	1821482
9	Bearing — clutch shaft	C2024	9010010
10	Clutch shaft assembly	C2698A	1800756
11	Clutch pad	C2280	1264670
12	Wheel — ratchet	C2272	1067698
13	Shaft — ratchet	C2699A	1800767
14	Bearing — ratchet shaft	C2042	9010070
15	Clutch base	C2661	1821497
16	Clamp assembly	C2410A	1819345
17	Boom clamp (2 needed)	C2663	1819471
18	Bolt — boom clamp (4 needed)	C2621	9040280
19	Nut, clutch	C2432	9130450
20	Lock washer — clutch nut	RC2318	9430180

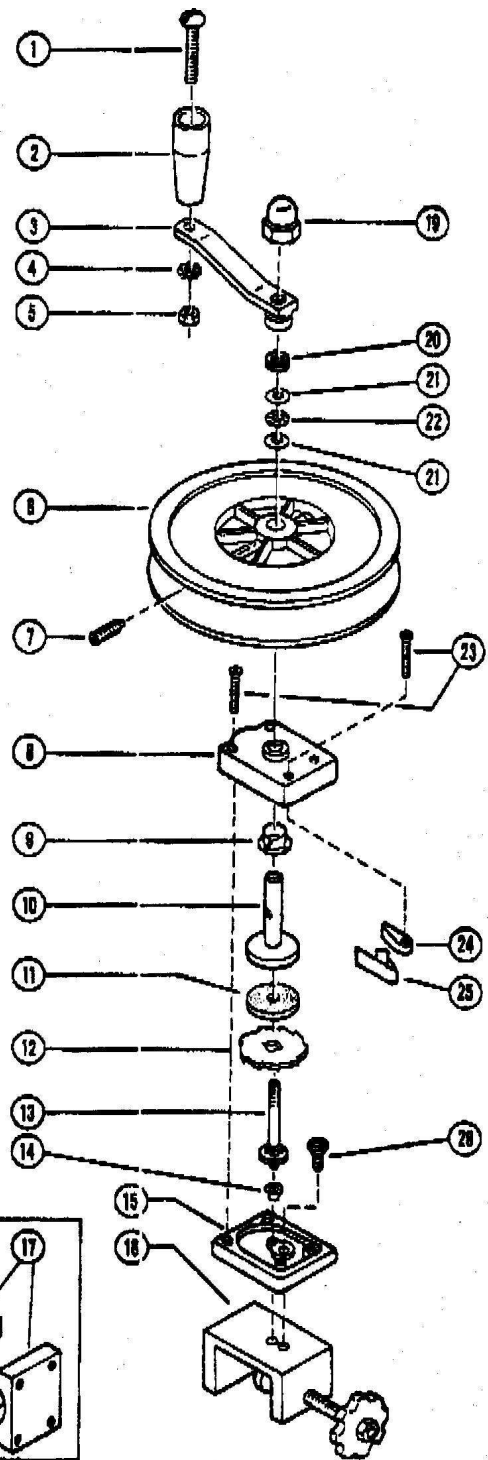

Key No.	Part Name	Part No.	Comp. No.
21	Race — thrust bearing (2 needed)	C2690	9010310
22	Thrust bearing	C2689	9010280
23	Screw — clutch cover (4 needed)	C2918	9370190
24	Dog ratchet	C2283	9100180
25	Spring — ratchet dog	C2282	9400070
26	Screw — clutch base	C2669	9280580