


SPINNING REEL 8150HRL

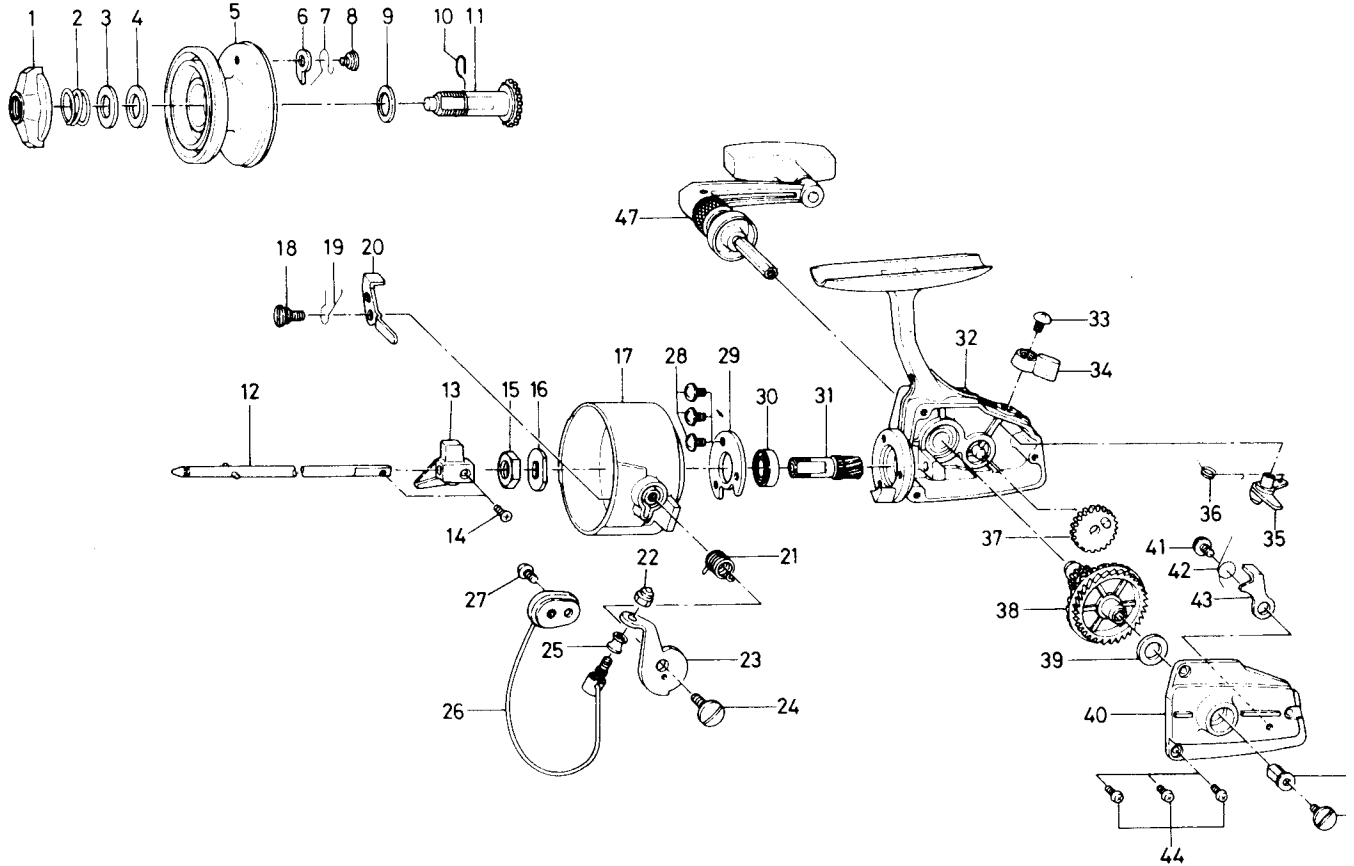

KEY NO. 1 ~ 11
6-731-4362

SPOOL ASSEMBLY

Key No.	Parts No.	Parts Name
1	441-5301	Drag knob
2	141-8721	Coil spring
3	373-6401	Disc washer
4	373-6501	Washer
5	513-4252	Spool
6	030-4101	Spool click claw
7	143-7431	Spool click claw spring
8	363-0711	Spool click claw spring screw
9	371-4902	Spool washer
10	142-7811	Spool metal leaf spring
11	720-0121	Spool metal
12	710-9721	Main shaft
13	481-0521	Oscillating slider
14	351-0311	Oscillating slider screw
15	341-9201	Rotor nut
16	375-3101	Rotor retaining washer
17	201-1322	Rotor
18	361-8202	Bail kick lever screw
19	143-4801	Bail kick lever spring
20	570-7111	Bail kick lever
21	141-0651	Bail spring
22	341-2701	Bail nut
23	231-0431	Arm lever
24	361-8532	Arm lever screw

Key No.	Parts No.	Parts Name
25	250-1921	Line roller
26	725-3331	Bail
27	351-6401	Bail holder screw
28	350-1931	Ball bearing ret. washer screw
29	633-5521	Ball bearing ret. washer
30	634-1301	Ball bearing
31	402-2201	Pinion gear
32	700-6908	Body
33	350-1931	Anti-reverse lever screw
34	541-3132	Anti-reverse lever
35	460-6821	Anti-reverse cam
36	142-2801	Anti-reverse cam spring
37	413-2601	Oscillating gear
38	413-0221	Drive gear
39	370-5100	Drive gear washer
40	062-8803	Body cover
41	351-7701	Anti-reverse claw screw
42	143-9601	Anti-reverse claw spring
43	111-3411	Anti-reverse claw
44	351-1101	Body cover screw
45	501-8501	Handle screw holder
46	B22-3401	Handle screw
47	746-1341	Handle