


SPINNING REEL **8650HRL**

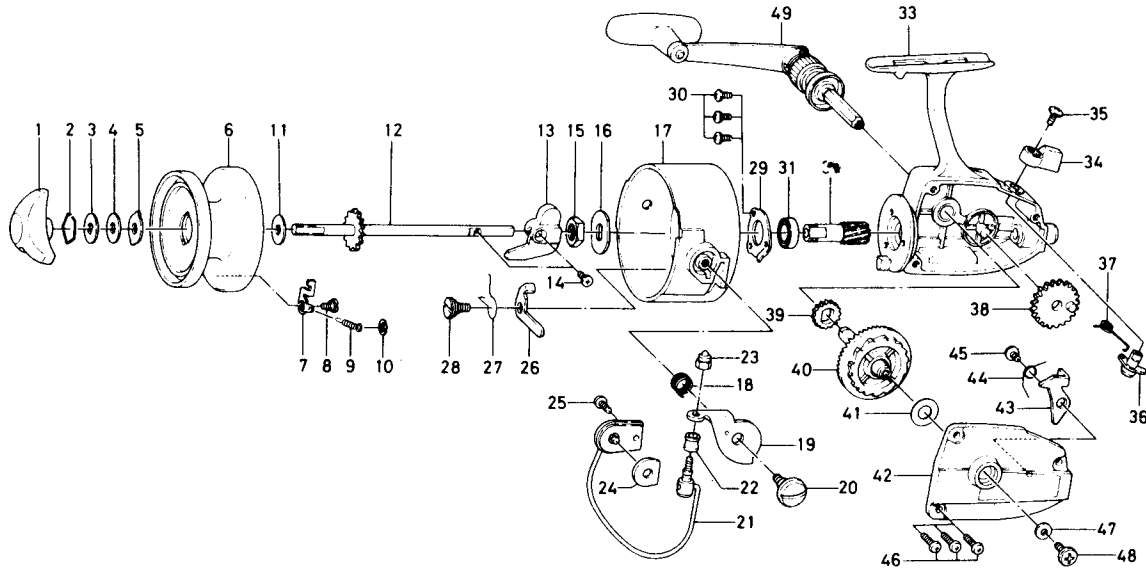

KEY NO. 2 ~ 10
6-734-2701

SPOOL ASSEMBLY

Key No.	Parts No.	Parts Name
1	005-1805	Drag knob
2	170-4001	Drag washer retainer
3	372-0801	Drag D washer
4	370-6901	Disc washer
5	375-5302	Drag A washer
6	734-2601	Spool
7	030-6802	Spool click claw
8	363-8401	Spool click claw screw
9	140-2221	Spool click claw spring
10	320-9701	Spool click claw spring retainer
11	371-2731	Spool washer
12	710-0711	Main shaft
13	480-6911	Oscillating slider
14	351-8901	Oscillating slider screw
15	340-8301	Rotor nut
16	372-4901	Rotor retaining washer
17	201-7314	Rotor
18	141-2801	Bail spring
19	230-8411	Arm lever
20	361-6413	Arm lever screw
21	725-0231	Bail
22	250-2821	Line roller
23	340-8501	Bail nut
24	210-4301	Balancer
25	351-6401	Bail holder screw

Key No.	Parts No.	Parts Name
26	570-6821	Bail kick lever
27	140-6231	Bail kick lever spring
28	363-1501	Bail kick lever screw
29	320-6201	Ball bearing ret. washer
30	351-6102	Ball bearing ret. washer screw
31	635-5001	Ball bearing
32	401-4901	Pinion gear
33	700-0427	Body
34	540-3711	Anti-reverse lever
35	350-1931	Anti-reverse lever screw
36	460-6821	Anti-reverse cam
37	142-2801	Anti-reverse cam spring
38	412-1411	Oscillating gear
39	401-1701	Oscillating pinion
40	412-1501	Drive gear
41	370-7500	Drive gear washer
42	705-0215	Body cover
43	110-8511	Anti-reverse claw
44	142-8001	Anti-reverse claw spring
45	350-2621	Anti-reverse claw screw
46	351-8501	Body cover screw
47	371-9521	Handle washer
48	351-3631	Handle screw
49	745-0541	Handle