


**SPINNING REEL EMBLEM-Z4500A / 5000A / 5500A**

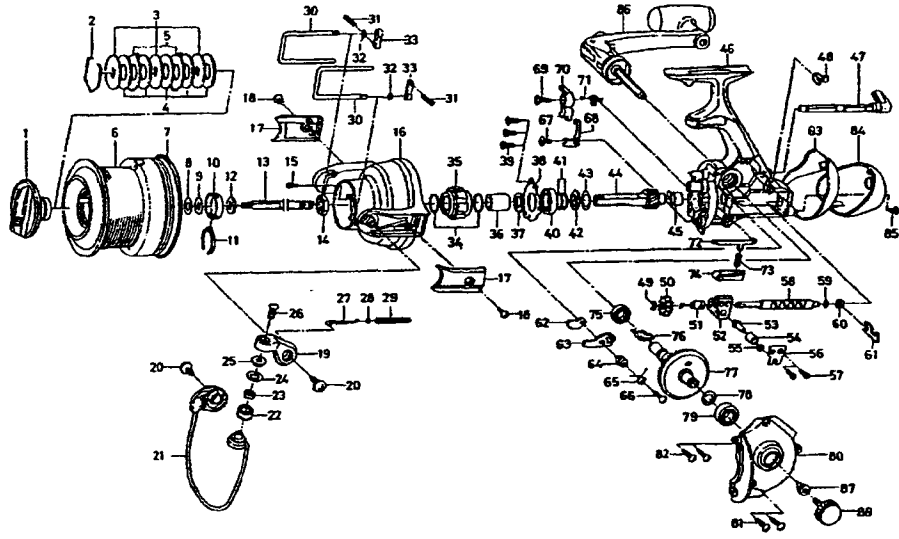

Key No.	Parts No.	Parts Name	Key No.	Parts No.	Parts Name
2-7	F88-1801	SPOOL	51	E39-3501	WORM SHAFT BUSH
1	F88-2201	DRAG KNOB	52	F97-2301	OSC SLIDER
2	F88-4001	DRAG WASHER RET	53	E26-4101	OSC PAWL
3	F88-1701	KEY WASHER	54	E26-4201	OSC PAWL BUSH
4	F75-5501	DRAG WASHER	55	375-0801	OSC PAWL WASHER
5	F75-5701	EARED WASHER	56	E26-4301	OSC SLIDER COVER
7	E40-2901	O RING	57	352-1505	OSC SLIDER COVER SCREW
8	E39-9201	SPOOL WASHER A	58	E54-1101	WORM SHAFT
9	F04-3401	SPOOL WASHER B	59	B41-1701	WORM SHAFT WASHER
10	F20-4001	CLICK LEAF SPRING HOLDER	60	E43-6101	WORM SHAFT COLLAR
11	B74-7701	SPOOL CLICK LEAF SPRING	61	E43-6201	WORM SHAFT RET
12	E26-7501	MAIN SHAFT WASHER	62	F87-9701	A/R PAWL PLT
13	F88-0201	MAIN SHAFT	63	F87-9801	A/R PAWL
14	B43-7608	ROTOR NUT	64	E26-2101	A/R PAWL COLLAR
15	E15-7502	ROTOR NUT LOCK SCREW	65	E43-6301	A/R PAWL SPRING A
16	F97-3401	ROTOR	66	B00-9701	A/R PAWL SCREW
17	E43-2811	BAIL SPRING COVER	67	B84-2102	A/R CLAW SCREW
18	E10-7403	BAIL SPRING COVER SCREW	68	F88-0401	A/R CLAW PLT
19	F47-2102	BAIL ARM	69	L06-6501	A/R CLAW SCREW B
20	E00-7603	BAIL ARM SCREW	70	F88-0501	A/R CLAW
21	F88-2301	BAIL	71	F88-0601	A/R CLAW SPRING
22	F45-4902	LINE ROLLER	72	F88-0701	PUSH BUTTON PLT
23	F05-5601	BALL BEARING A	73	F88-0801	PUSH BUTTON SPRING
24	F44-6202	LINE ROLLER WASHER	74	F88-0901	PUSH BUTTON
25	F44-6302	LINE ROLLER COLLAR	75	E45-3901	BALL BEARING C
26	F60-8903	LINE ROLLER SCREW	76	E26-4502	A/R PAWL SPRING B
27	E32-6701	BAIL SPRING SHAFT	77	F43-6101	DRIVE GEAR
28	E31-3901	BAIL SPRING WASHER	78	371-2824	DRIVE GEAR WASHER
29	E44-1301	BAIL SPRING	79	B54-6001	BALL BEARING D
30	E43-1302	LINE GUARD SHAFT	80	F88-0301	SIDE COVER
31	F06-3301	LINE GUARD SPRING	81	B00-9705	SIDE COVER SCREW A
32	B33-9801	LINE GUARD RET	82	B00-9701	SIDE COVER SCREW B
33	E39-6201	LINE GUARD PLT	83	F88-4501	WATER SHIELD
34	F88-1001	ROLLER CLUTCH RET	84	F88-4601	REAR COVER
35	F88-1101	ROLLER CLUTCH	85	E24-8103	REAR COVER SCREW
36	F70-9801	SPACING SLEEVE	86	F88-1301	HANDLE
37	F26-7702	BEARING WASHER	87	F40-9001	HANDLE COLLAR
38	F88-0101	BEARING RET	88	L00-9106	HANDLE LOCK SCREW
39	F21-2201	BEARING RET SCREW			
40	637-6101	BALL BEARING B			
41	372-7607	SPACER			
42	F88-0001	A/R RATCHET			
43	372-7603	PINION WASHER			
44	F87-9901	PINION GEAR			
45	E33-2101	PINION COLLAR			
46	F87-8001	BODY			
47	F88-9501	A/R LEVER			
48	F87-9501	A/R CAM SPRING			
49	320-5901	WORM SHAFT GEAR RET			
50	F43-6301	WORM SHAFT GEAR			

<b>EM-Z5000A Special Parts</b>		
Key No.	Parts No.	Parts Name
2-7	F90-5601	SPOOL
46	F90-5501	BODY

<b>EM-Z5500A Special Parts</b>		
Key No.	Parts No.	Parts Name
2-7	F90-6301	SPOOL
46	F90-6201	BODY