


JUPITER-Z1550

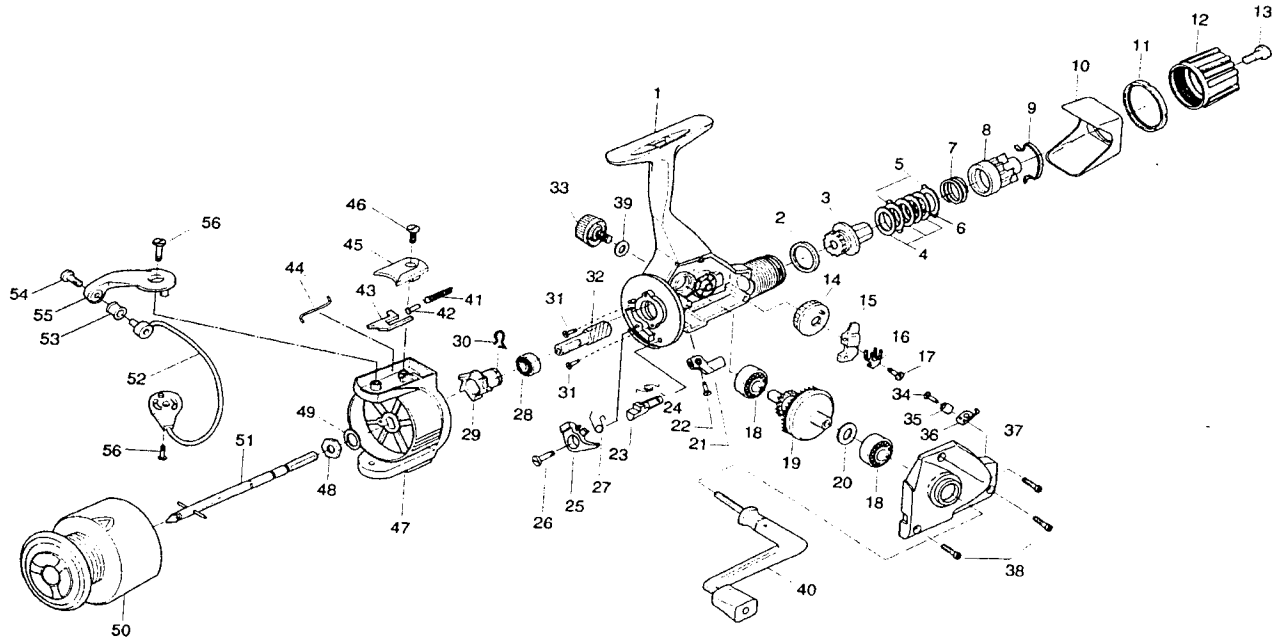

Key No.	Parts No.	Parts Name
1	W00-0101	BODY
2	W00-0201	DRAG WASHER
3	W00-0301	CLICK GEAR
4	W00-0401	KEY WASHER A
5	W00-0501	EARED WASHER
6	W00-0601	KEY WASHER B
7	W00-0701	DRAG COIL SPRING
8	W00-0801	DRAG COLLAR
9	W00-0901	DRAG WASHER SPRING
10	W00-1001	REAR COVER
11	W00-1101	REAR COVER SCREW
12	W00-1201	DRAG KNOB
13	W00-1301	DRAG KNOB SCREW
14	W00-1401	OSC GEAR
15	W00-1501	OSC SLIDER
16	W00-1601	OSC SLIDER RET
17	W00-1701	OSC SLIDER SCREW
18	W01-5701	BALL BEARING A
19	W00-1901	DRIVE GEAR
20	W00-2001	DRIVE GEAR WASHER
21	W00-2101	A/R LEVER
22	W00-2201	A/R LEVER SCREW
23	W00-2301	A/R CAM
24	W00-2401	A/R CAM SPRING
25	W00-2501	A/R PAWL
26	W00-2601	A/R PAWL SCREW
27	W00-2701	A/R PAWL SPRING
28	W00-2801	BALL BEARING B
29	W00-2901	A/R RATCHET

Key No.	Parts No.	Parts Name
30	W00-3001	SPRING HOLDER
31	W00-3101	BEARING RET SCREW
32	W00-3201	PINION GEAR
33	W00-3301	HANDLE LOCK SCREW
34	W00-3401	CLICK SPRING SCREW
35	W00-3501	COLLAR
36	W00-3601	CLICK SPRING
37	W00-3701	SIDE COVER
38	W00-3801	SIDE COVER SCREW
39	W00-3901	HANDLE COLLAR
40	W00-4001	HANDLE
41	W00-4101	BAIL SPRING
42	W00-4201	BAIL SPRING SHAFT
43	W00-4301	BAIL SPRING HOLDER
44	W00-4401	BAIL TRIP LEVER
45	W00-4501	BAIL SPRING COVER
46	W00-4601	BAIL SPRING COVER SCREW
47	W00-4701	ROTOR
48	W00-4801	ROTOR NUT
49	W00-4901	ROTOR NUT WASHER
50	W01-5901	SPOOL
50	W00-5003	SPOOL (EXTRA)
51	W00-5101	MAIN SHAFT
52	W00-5201	BAIL
53	W01-5801	LINE ROLLER
54	W00-5501	LINE ROLLER SCREW
55	W00-5601	BAIL ARM
56	W00-5701	BAIL ARM SCREW