


## SPINNING REEL SS4000

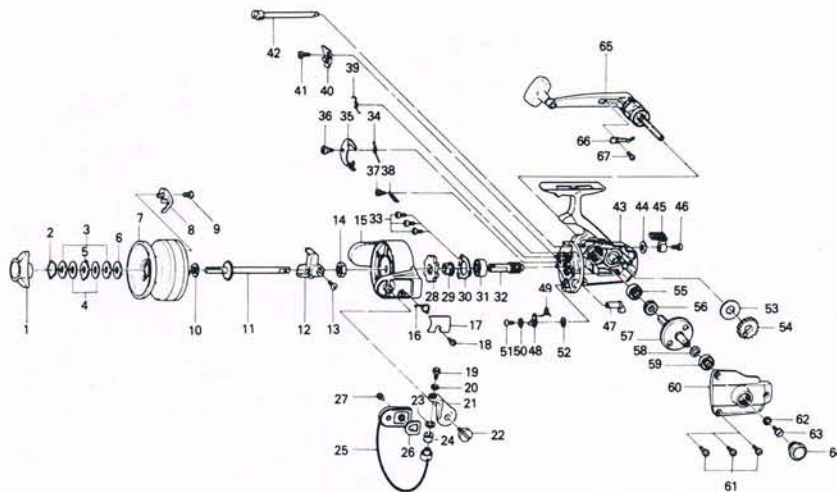

For Parts & Service  
Call 1-888-404-1119  
[www.mikesrelrepair.com](http://www.mikesrelrepair.com)

LINE CAPACITY: 300 YDS., 15 LB. TEST (270m. 6.8kg)

Key No. 2 ~ 9

6-732-0602 Spool assembly

Key No. 65 ~ 67

6-746-7401 Handle assembly

Key No.	Parts No.	Parts Name
1	6-000-8236	Drag knob
2	6-170-4511	Drag washer retainer
3	6-372-7812	Drag D washer
4	6-372-9011	Disc washer
5	6-375-5401	Drag A washer
6	6-372-7701	Drag washer A
7	6-732-0701	Spool
8	6-030-4411	Spool click claw
9	6-351-6102	Spool click claw screw
10	6-371-2732	Spool washer
11	6-711-1311	Main shaft
12	6-481-1012	Oscillating slider
13	6-351-8901	Oscillating slider screw
14	6-340-8301	Rotor nut
15	6-201-7502	Rotor
16	6-144-2201	Bail spring
17	6-633-0702	Bail spring cover
18	6-350-1931	Bail spring cover screw
19	6-363-3111	Bail screw
20	6-375-1101	Bail washer
21	6-231-1901	Arm lever
22	6-362-3411	Arm lever screw
23	6-501-2001	Roller collar
24	6-250-4301	Line roller
25	6-725-1216	Bail
26	6-210-3501	Balancer
27	6-351-6401	Bail holder screw
28	6-280-5401	Ratchet
29	6-270-7112	Click gear
30	6-050-5101	Ball bearing ret. washer
31	6-635-5001	Ball bearing
32	6-402-4011	Pinion gear
33	6-351-6601	Ball bearing ret. washer screw
34	6-144-0211	Click claw spring

Key No.	Parts No.	Parts Name
35	6-781-3521	Click claw
36	6-363-3012	Click claw screw
37	6-363-3301	Click lever spring screw
38	6-144-1211	Click lever spring
39	6-144-0301	Anti-reverse cam spring
40	6-770-0931	Anti-reverse claw
41	6-363-3601	Anti-reverse claw screw
42	6-461-3101	Anti-reverse cam
43	6-700-6801	Body
44	6-373-2700	Anti-reverse lever washer
45	6-541-2801	Anti-reverse lever
46	6-351-1001	Anti-reverse lever screw
47	6-541-3001	Noiseless lever
48	6-461-3101	Noiseless cam
49	6-144-2101	Noiseless lever spring
50	6-160-3111	Noiseless lever washer A
51	6-350-1931	Noiseless lever screw
52	6-375-3001	Noiseless lever washer B
53	6-374-5400	Oscillating gear washer
54	6-412-3602	Oscillating gear
55	6-636-6001	Ball bearing
56	6-402-3801	Oscillating pinion
57	6-750-3041	Drive gear
58	6-371-2820	Drive gear washer
59	6-636-6001	Ball bearing
60	6-705-9901	Body cover
61	6-353-1504	Body cover screw
62	6-371-9521	Handle washer
63	6-363-3411	Handle screw
64	6-781-3101	Handle screw cap
65	6-746-6801	Handle arm
66	6-151-4401	Handle leaf spring
67	6-352-0401	Handle leaf spring screw