


## SPINNING REEL SS5000

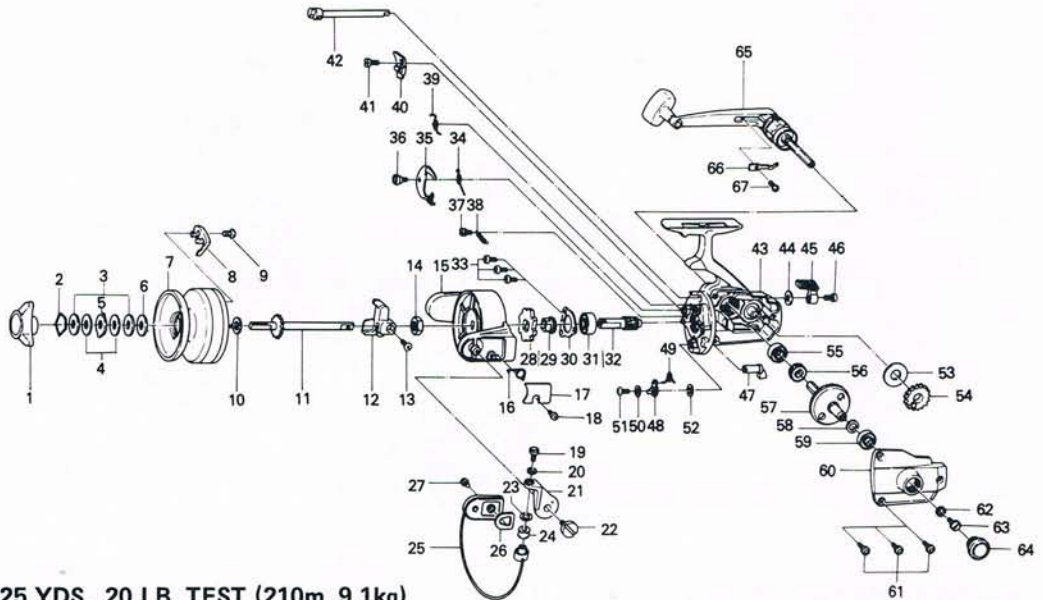

LINE CAPACITY: 225 YDS., 20 LB. TEST (210m. 9.1kg)

Key No. 2 ~ 9  
6-732-0802 Spool assembly  
Key No. 65 ~ 67  
6-746-7401 Handle assembly

| Key No. | Parts No.  | Parts Name                     |
|---------|------------|--------------------------------|
| 1       | 6-000-8236 | Drag knob                      |
| 2       | 6-170-4511 | Drag washer retainer           |
| 3       | 6-372-7812 | Drag D washer                  |
| 4       | 6-372-9011 | Disc washer                    |
| 5       | 6-375-5401 | Drag A washer                  |
| 6       | 6-372-7701 | Drag washer A                  |
| 7       | 6-732-0901 | Spool                          |
| 8       | 6-030-4411 | Spool click claw               |
| 9       | 6-351-6102 | Spool click claw screw         |
| 10      | 6-371-2732 | Spool washer                   |
| 11      | 6-711-1311 | Main shaft                     |
| 12      | 6-481-1012 | Oscillating slider             |
| 13      | 6-351-8901 | Oscillating slider screw       |
| 14      | 6-340-8301 | Rotor nut                      |
| 15      | 6-201-7602 | Rotor                          |
| 16      | 6-144-2201 | Bail spring                    |
| 17      | 6-633-0702 | Bail spring cover              |
| 18      | 6-350-1931 | Bail spring cover screw        |
| 19      | 6-363-3111 | Bail screw                     |
| 20      | 6-375-1101 | Bail washer                    |
| 21      | 6-231-1901 | Arm lever                      |
| 22      | 6-362-3411 | Arm lever screw                |
| 23      | 6-501-2001 | Roller collar                  |
| 24      | 6-250-4301 | Line roller                    |
| 25      | 6-725-1216 | Bail                           |
| 26      | 6-210-3501 | Balancer                       |
| 27      | 6-351-6401 | Bail holder screw              |
| 28      | 6-280-5401 | Ratchet                        |
| 29      | 6-270-7112 | Click gear                     |
| 30      | 6-050-5101 | Ball bearing ret. washer       |
| 31      | 6-635-5001 | Ball bearing                   |
| 32      | 6-402-4011 | Pinion gear                    |
| 33      | 6-351-6601 | Ball bearing ret. washer screw |
| 34      | 6-144-1211 | Click claw spring              |

| Key No. | Parts No.  | Parts Name                |
|---------|------------|---------------------------|
| 35      | 6-781-3521 | Click claw                |
| 36      | 6-363-3012 | Click claw screw          |
| 37      | 6-363-3301 | Click lever spring screw  |
| 38      | 6-144-0211 | Click lever spring        |
| 39      | 6-144-0301 | Anti-reverse cam spring   |
| 40      | 6-770-0931 | Anti-reverse claw         |
| 41      | 6-363-3601 | Anti-reverse claw screw   |
| 42      | 6-461-3101 | Anti-reverse cam          |
| 43      | 6-700-6802 | Body                      |
| 44      | 6-373-2700 | Anti-reverse lever washer |
| 45      | 6-541-2801 | Anti-reverse lever        |
| 46      | 6-351-1001 | Anti-reverse lever screw  |
| 47      | 6-541-3001 | Noiseless lever           |
| 48      | 6-461-3101 | Noiseless cam             |
| 49      | 6-144-2101 | Noiseless lever spring    |
| 50      | 6-160-3111 | Noiseless lever washer A  |
| 51      | 6-350-1931 | Noiseless lever screw     |
| 52      | 6-375-3001 | Noiseless lever washer B  |
| 53      | 6-374-5400 | Oscillating gear washer   |
| 54      | 6-412-3602 | Oscillating gear          |
| 55      | 6-636-6001 | Ball bearing              |
| 56      | 6-402-3801 | Oscillating pinion        |
| 57      | 6-750-3041 | Drive gear                |
| 58      | 6-371-2820 | Drive gear washer         |
| 59      | 6-636-6001 | Ball bearing              |
| 60      | 6-705-9902 | Body cover                |
| 61      | 6-353-1504 | Body cover screw          |
| 62      | 6-371-9521 | Handle washer             |
| 63      | 6-363-3411 | Handle screw              |
| 64      | 6-781-3101 | Handle screw cap          |
| 65      | 6-746-6801 | Handle arm                |
| 66      | 6-151-4401 | Handle leaf spring        |
| 67      | 6-352-0401 | Handle leaf spring screw  |