


SEALINE-X40HA /50HA

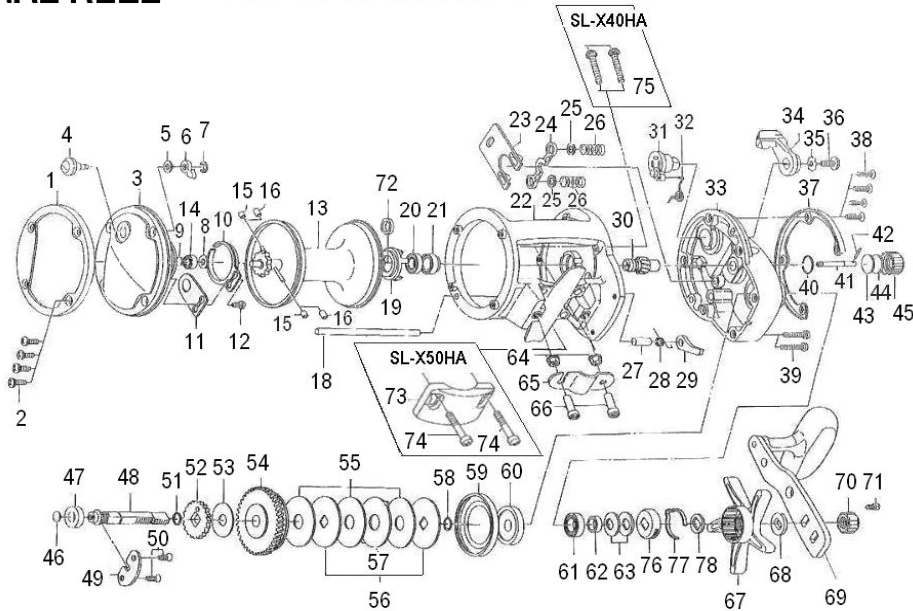

Key No.	Parts No.	Parts Name	Key No.	Parts No.	Parts Name
1	F09-9404	L/S OUTER RING	46	F73-3501	DRIVE SHAFT WASHER A
2	F09-3601	L/S PLT SCREW	47	B73-8001	DRIVE SHAFT BUSH
3	F78-8507	L/S PLT	48	F73-3602	DRIVE SHAFT
4	E36-1301	CLICK BUTTON	49	F09-8401	DRIVE SHAFT RET
5	373-1600	CLICK BUTTON WASHER	50	E31-6701	DRIVE SHAFT RET SCREW
6	030-6222	CLICK PAWL	51	F65-7801	O RING B
7	320-1402	CLICK PAWL RET	52	F55-5101	A/R RATCHET
8	F13-2602	SPACER A	53	F73-3701	DRIVE SHAFT WASHER B
9	375-7403	SPACER B	54	F73-3801	DRIVE GEAR
10	160-7922	CLICK LEAF SPRING	55	E31-6903	DRAG WASHER
11	F13-1801	CLICK SPRING RET	56	E31-7001	KEY WASHER
12	B83-4402	CLICK SPRING SCREW	57	E31-7101	EARED WASHER
13	F78-8602	SPOOL	58	F65-7801	O RING C
14	G42-7701	BALL BEARING A	59	F73-3901	WATER SHIELD
15	B35-2801	BRAKE COLLAR A	60	F73-4001	COLLAR
16	B35-2701	BRAKE COLLAR B	61	G48-1901	BALL BEARING C
18	F73-6802	STABILIZER BAR	62	F73-4201	BEARING WASHER
19	F21-6201	BEARING RET	63	E25-3501	DRAG SPRING WASHER
20	G29-2802	BALL BEARING B	◆ 64	F18-7801	ROD BRACE NUT
21	F73-3201	BUSHING	◆ 65	041-5601	ROD BRACE
22	G78-1902	FRAME	◆ 66	F18-7701	CLAMP NUT
23	F09-7901	YOKE PLT	67	F55-0408	STAR DRAG
24	E25-2102	YOKE	68	E25-3901	SPACING SLEEVE
25	E03-7704	YOKE WASHER	69	G78-1501	HANDLE
26	E33-5301	YOKE SPRING	70	G22-0301	HANDLE NUT
27	F09-8201	A/R PAWL PIN	71	G21-8201	HANDLE NUT SCREW
28	F77-4401	A/R PAWL SPRING	72	F77-4701	BALL BEARING COLLAR
29	F73-3401	A/R PAWL	◆ 75	F18-7601	ROD CLAMP SCREW
30	F73-3301	PINION GEAR	76	F47-0002	CLICK LEAF SPRING HOLDER
31	F09-7301	CLUTCH CAM	77	B74-7702	CLICK SPRING
32	F38-5801	CLUTCH SPRING	78	F47-0101	FRICITION WASHER
33	F09-6921	R/S PLT			
34	E42-6805	CLUTCH LEVER			
35	160-8001	CLUTCH LEVER WASHER			
36	E00-7602	CLUTCH LEVER SCREW			
37	F09-7205	R/S OUTER RING			
38	F09-3601	R/S PLT SCREW A			
39	F73-4302	R/S PLT SCREW B			
40	B05-5201	O RING A			
41	F73-2701	PINION SHAFT			
42	F73-2801	PIN			
43	375-7501	SPACER C			
44	B17-5503	SPACER D			
45	E31-5408	CAST CONTROL CAP			

SL-X50HA SPECIAL PARTS			
Key No.	Parts No.	Parts Name	
	3	F78-8203	L/S PLT
	13	F78-8302	SPOOL
	18	F09-9301	STABILIZER BAR
	22	G78-2601	FRAME
	34	E42-6807	CLUTCH LEVER
	37	F09-7205	R/S OUTER RING
	61	G48-1901	BALL BEARING C
	73	E31-8301	ROD BRACE
	74	E31-8401	CLAMP BOLT

◆PARTS FOR SL-X40HA ONLY