



Part #	Part Name	
1	BODY ASSEMBLY	35
2	N-R PAWL	36
3	"E" WASHER - 1145278	37
4	N-R LEVER	38
5	N-R LEVER SHAFT	39
6	N-R LEVER SCREW	40
7	N-R LEVER SPRING	41
8	PINION	42
9	BALL BEARING 14X8X3.5-1145073	43
10	BEARING COVER	44
11	BEARING COVER SCREW	45
12	N-R SPRING HOLDER	46
13	N-R SPRING	47
14	SPACER	48
15	ROTOR	49
18	TRIP PLUNGER	50
19	BAIL ARM SPRING - 1146792	51
20	BAIL ARM COVER	52
21	SCREW COVER	53
22	BAIL ARM	54
23	BAIL ARM SCREW (2)	55
24	BAIL WIRE ASSEMBLY - 11450456 (435) 1140469 (440)	56
25	LINE ROLLER BUSHING - 1146335	57
26	LINE ROLLER - 1146128	58
27	LINE ROLLER WASHER - 1146856	59
28	LINE ROLLER SCREW	60
29	ROTOR NUT	61
30	ROTOR NUT WASHER	62
31	ROTOR NUT SCREW	
32	O/S SLIDER PLATE	
33	O/S SLIDER PLATE SCREW	
34	BUSHING OR BEARING - 1145076	
		35
		36
		37
		38
		39
		40
		41
		42
		43
		44
		45
		46
		47
		48
		49
		50
		51
		52
		53
		54
		55
		56
		57
		58
		59
		60
		61
		62
		O/S GEAR
		O/S SLIDER
		MAIN SHAFT
		O/S SLIDER SCREW
		DRIVE GEAR
		GEAR WASHER - 1146817
		BUSHING OR BEARING 14X8X3.5-1145073
		BODY COVER ASSEMBLY
		COVER SCREW A
		COVER SCREW B
		CLICK GEAR - 1146029
		SHEET WASHER - 1146805
		SPOOL ASSEMBLY
		DRAG WASHER
		LINING WASHER
		SPOOL WASHER
		STOP RING
		DRAG KNOB
		DRAG NUT
		DRAG SPRING
		DRAG KNOB WASHER
		DRAG KNOB COVER
		DRAG KNOB SCREW
		REAR COVER
		REAR COVER SCREW
		HANDLE ARM ASSEMBLY
		HANDLE LOCK WASHER
		HANDLE LOCK