



H-8/9a PARTS LIST

KEY NO	PARTS NO	PARTS NAME	KEY NO	PARTS NO	PARTS NAME
100	31000692	MAIN BODY	405	34050012	HANDLE KNOB RIVET
101	31010039	MAIN SHAFT	408	34080009	SPOOL RETAINER ASSY.
102	31020151	BODY FOOT	409	34090001	SPOOL RETAINER SPRING
104	31040023	MAIN SHAFT SCREW	410	34100037	SPOOL COVER ASSY.
207	32070003	SCREW MAT	413	34130015	COUNTER WEIGHT
300	33000089	DRAG KNOB	416	34160008	ONEWAY BEARING BUSHING
300-1	33000084	DRAG KNOB RETAINER	910	0910090	BEARING ASSY.
304	33040020	CLICK PIN ASSY.	910	0910099	BALL BEARING
310	33100017	DRAG WASHER	920	0920010	WASHER
310-1	33100015	DRAG WASHER	920	0920127	WASHER
310-2	33100020	DRAG WASHER	930	0930086	SCREW
312	33120008	ROUGH KEY WASHER	930	0930098	SCREW
312-1	33120005	KEY WASHER	930	0930115	SCREW
314	33140002	SPRING WASHER	930	0930897	SCREW
321	33210011	MAIN SHAFT BUSHING	940	0940007	O RING
327	33270003	DRAG KNOB BUSHING	940	0940009	O RING
340	33400003	DRAG WASHER RETAINER	940	0940013	O RING
400	34000600	SPOOL ASSY.	940	0940014	O RING
400-1	34000634	SPOOL	940	0940022	O RING
404	34040023	HANDLE KNOB	940	0940025	O RING