


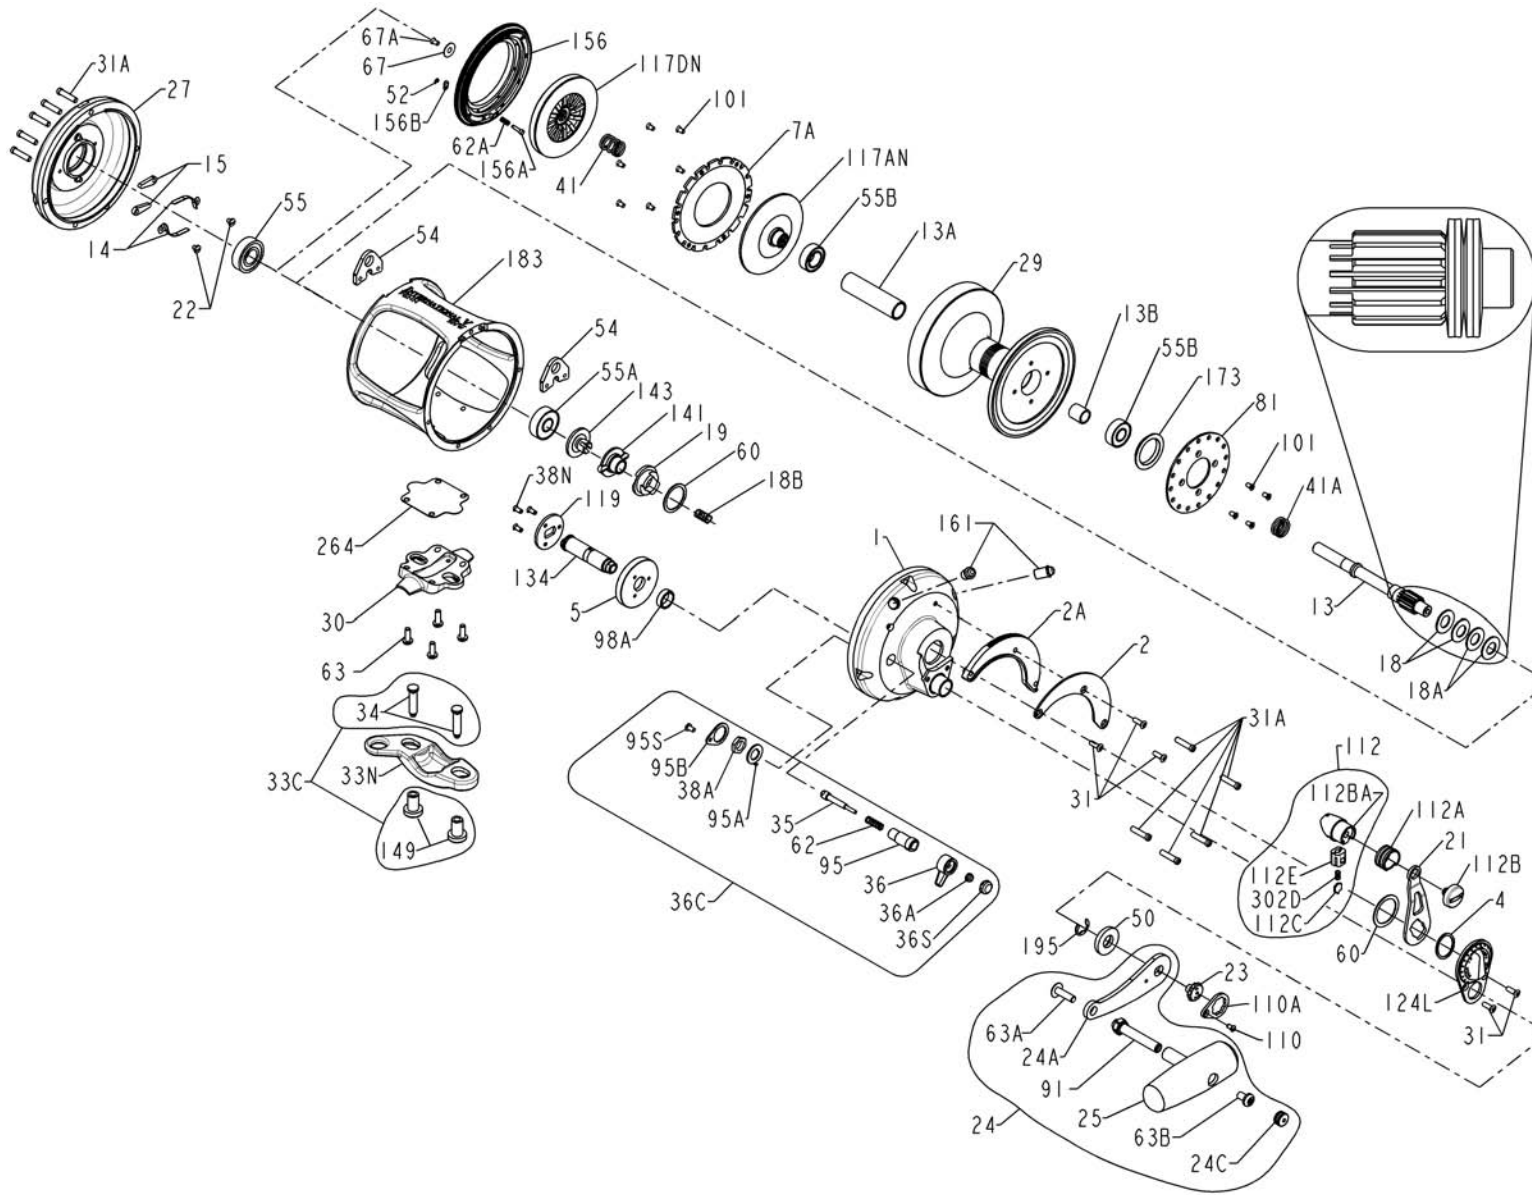

PARTS LIST FOR MODEL 50VW



KEY NO.	DESCRIPTION	PART NO.
30	Stand	030 050VS
31	Screw (5 req)	031T070
31A	Side Plate Screw (10 req)	031 080VS
33C	Rod Clamp Kit	033C070VS
33N	Rod Clamp	033N070
34	Clamp Screw (2 req.)	034 070VS
35	Click Tongue	035 070VS
36	Click Lever	036N050
36A	Click Lever Nut	036 700
36C	Click Assembly	036C050VSW
36S	Click Button Cap	036S080ST
38A	Click Bushing Nut	038 710
38N	Coupling Plate Screw (3 req)	038N007
41	Drive Plate Bearing Spring	041 050
41A	Drag Spring	041 070
50	Gear Stud Shield	050 030VW
52	Drag Cover Lock Retaining Ring	052 910
54	Harness Lug (2 req.)	054 050T
55	Left Side Ball Bearing	055 080
55A	Right Side Ball Bearing	055 050
55B	Spool Ball Bearing (2 req.)	055 080ST
60	Drag Thrust Washer (2 req.)	060 050
62	Click Spring	062 050
62A	Drag Cover Lock Spring	062 545
63	Stand Screw (4 req.)	063 030T
63A	Handle Rivet Screw	063A050
63B	Handle Knob Screw	063 050
67	Pinion Retaining Washer	067 070
67A	Pinion Retaining Screw	067A070
81	Click Ratchet Plate	081 050
91	Handle Rivet	091N050
95	Click Tongue Bushing	095 070
95A	Click Bushing Washer	095A050
95B	Click Retaining Plate	095B070
95S	Click Retaining Plate Screw	023 750
98A	Gear Stud Spacer	098A050VW
101	Screw (10 req.)	101 030
110	Locking Ring Screw	110 050
110A	Handle Screw Locking Ring	110A050
112	Drag Lever Knob Assembly	112 030VS
112A	Drag Knob Sleeve	112A030VS
112B	Drag Knob Screw	112B070
112BA	Drag Lever Knob	112B030VS
112C	Drag Click Plate	112C030VS
112E	Drag Lever Click Plate Housing	112E030VS
117AN	Inner Drive Plate Assembly	117AN070
117DN	Outer Drive Plate Assembly	117DN070VS
119	Main Gear Coupling Plate	119 050
124L	Bridge Cover Assembly	124L050VS
134	Gear Stud	134 050VW
141	Cam Follower	141 050VS
143	Preset Screw	143 050VS
149	Rod Clamp Nut (2 req.)	149 070
156	Drag Cover Assembly	156N050VS
156A	Drag Cover Lock Pin	156A030VS
156B	Drag Cover Lock Plate	156B030VS
161	Drag Locating Pin Asm (2 req.)	161C030VSW
173	Spool Bushing	173 050VS
183	Tube Frame Asm (w/ dowl pins)	183N050VW
195	Gear Stud Retaining Ring	195 040
264	Stand Gasket	264 030VS
302D	Drag Click Plate Spring	302D525MAG

407-50VW Rev 3
E3398 9-9-09

KEY NO.	DESCRIPTION	PART NO.
1	Right Side Plate Assembly	001N050VS
2	Quadrant Ring	002 050VS
2A	Ratchet	002A050VS
4	Teflon Thrust Washer	004 012LT
5	Main Gear	005 050VW
7A	Drag Plate	007A050VS
13	Pinion Gear	013 050VW
13A	Spool Sleeve	013B050VSW
13B	Pinion Gear Sleeve	013B070

KEY NO.	DESCRIPTION	PART NO.
14	Dog Spring (2 req.)	014 050
15	Dog (2 req.)	015 050
18	Clutch Spring (Heavy) (2req.)	018 050TW
18A	Clutch Spring (Light) (2req.)	018 050W
18B	Drag Spring	018 349
19	Drag Cam	019 050VS
21	Drag Lever	021 050VS
22	Dog Spring Screw (2 req)	022 109

KEY NO.	DESCRIPTION	PART NO.
23	Handle Screw Assembly	023 114
24	Handle Assembly	024 050T
24A	Handle Blank	024 050T-1
24C	Handle Knob Cap	024C050M
25	Handle Knob Assembly	025 050M
27	Left Side Plate Assembly	027N050VW
29	Spool	029N050VSW

KEY NO.	DESCRIPTION	PART NO.
23	Handle Screw Assembly	023 114
24	Handle Assembly	024 050T
24A	Handle Blank	024 050T-1
24C	Handle Knob Cap	024C050M
25	Handle Knob Assembly	025 050M
27	Left Side Plate Assembly	027N050VW
29	Spool	029N050VSW