



ITM.	AT300	AT300W	DESCRIPTION	ITM.	AT300	AT300W	DESCRIPTION
1	888-8688		LEFT SIDE COVER ASSEMBLY	33	888-8725		DRIVE GEAR
2	888-8689		SPOOL TENSION SHIM	34	888-8726		DRAG DISC WASHER
3	888-8690		BALL BEARING	35	888-8727		DRAG WASHER
4	888-8691		BRAKE SHOE	36	888-8728		SPRING "D" WASHER
5	888-8692	888-8693	SPOOL ASSEMBLY	37	888-8729		BEARING WASHER
6	888-8694		BALL BEARING	38	888-8730		BALL BEARING
7	888-8695		E-CLIP	39	888-8731		RIGHT HOLDER
8	888-8696		WORM SHAFT BUSHING	40	888-8732		RIGHT SIDE COVER
9	888-8697	888-8698	CARRIER GUIDE	41	888-8733		RIGHT SIDE COVER SCREW
10	888-8699		CARRIER ASSEMBLY	42	888-8734	888-8735	THUMB SCREW
11	888-8700		LINE GUIDE PAWL	43	888-8736		TENSION KNOB O-RING
12	888-8701		PAWL CAP	44	888-8737		TENSION KNOB WASHER
13	888-8702	888-8703	WORM SHAFT	45	888-8738		TENSION KNOB SHIM
14	888-8704		OSCILLATING GEAR	46	888-8739		TENSION KNOB
15	888-8705		E-CLIP	47	888-8740		STAR DRAG
16	888-8706	888-8707	FRAME	48	888-8741		HANDLE SPRING WASHER
17	888-8708		RELEASE SLIDER SPRING	49	888-8742		HANDLE ASSEMBLY
18	888-8709		RELEASE SLIDER	50	888-8743		HANDLE NUT
19	888-8710		RELEASE SLIDER SCREW	51	888-8744		HANDLE NUT LOCK CAP
20	888-8711		KICK LEVER	52	888-8745		HANDLE NUT LOCK SCREW
21	888-8712		KICK LEVER SPRING	53	888-8746	888-8747	THUMB BAR
22	888-8713		PINION YOKE	54		888-8748	CLICKER SHAFT
23	888-8714		PINION ASSEMBLY	55		888-8749	CLICKER
24	888-8715		YOKE SPRING	56		888-8750	E-CLIP
25	888-8716		CRANK SHAFT BUSH	57		888-8751	CLICK SPRING
26	888-8717		E-CLIP	58		888-8752	SOUND LEVER
27	888-8718		CRANK SHAFT RETAINER	59		888-8753	SOUND LEVER SPRING
28	888-8719		CRANK SHAFT RETAINER SCREW	60		888-8754	SOUND LEVER PIN
29	888-8720		IDLE GEAR	61	888-8755		ONE WAY CLUTCH BALL BEARING
30	888-8721	888-8722	CRANK SHAFT	62	888-8756		ONE WAY CLUTCH BALL BEARING BUSH
31	888-8723		RATCHET				
32	888-8724		DRIVE GEAR WASHER				