



Item	number			Description	Item	number			Description
	x200	x400	x500			x200	x400	x500	
1	888-8065	-8124	-8210	LEFT SIDE COVER ASSEMBLY	31	888-8095	-8095	-8214	STAR DRAG
2	888-8094	-8094	-8211	CONTROL DIAL	32	888-8096	-8129	-8215	HANDLE ASSEMBLY
3	888-8066			DIAL FRICTION RING	33	888-8097			HANDLE NUT LOCK CAP
4	888-8067			SLIDE CAM	34	888-8098			HANDLE NUT LOCK SCREW
5	888-8068			SLIDE CAM SPRING	35	888-8099			THUMB SCREW (3)
6	888-8069			SPOOL COVER	36	888-8101			HANDLE SPRING WASHER
7	888-8070			SPOOL TENSION SHIM	37	888-8102			RIGHT SIDE COVER SCREW (2)
8	888-8071	-8125	-8125	SPOOL C/V BUSH (BEARING X500)	38	888-8103			RIGHT SIDE COVER
9	888-8072			MAGNET PLATE ASSEMBLY	39	888-8104			BEARING WASHER (2)
10	888-8073	-8073	-8126	SPOOL ASSEMBLY	40	888-8105			SPRING "D" WASHER (2)
11	888-8074			BEARING	41	888-8106			DRAG WASHER
12	888-8075	-8075	-8212	THUMB BAR	42	888-8107			DRAG DISC WASHER
13	888-8076			THUMB BAR CAM	43	888-8108			STOPPER ASSEMBLY
14	888-8077			RELEASE SLIDER	44	888-8109			CRANK SHAFT
15	888-8078			RELEASE SLIDER SPRING	45	888-8110			CRANK SHAFT RETAINER
16	888-8079			RELEASE SLIDER SCREW	46	888-8111			OSCILLATING GEAR
17	888-8080			E-CLIP	47	888-8112			PAWL CAP
18	888-8081			PINION YOKE	48	888-8113			LINE GUIDE PAWL
19	888-8082			YOKE SPRING	49	888-8114			LINE GUIDE CARRIER ASSEMBLY
20	888-8083			PINION ASSEMBLY	50	888-8115			CARRIER GUIDE
21	888-8084			STAR TRIP LATCH	51	888-8116			WORM SHAFT
22	888-8085			STAR TRIP LATCH	52	888-8117			MAGNET PLATE SCREW (2)
23	888-8086			RATCHET WASHER	53	888-8118			CRANK SHAFT BUSH COLLAR
24	888-8087			RATCHET	54	888-8119			CRANK SHAFT METAL
25	888-8088			DRIVER-GEAR WASHER	55	888-8120			FRAME
26	888-8089			DRIVE GEAR	56	888-8121	-8134	-8134	CRANK SHAFT BUSHING -B
27	888-8090			BALL BEARING	57	888-8122			HANDLE NUT
28	888-8091			TENSION KNOB O-RING	58	888-8135	-8216	-8217	HOOD
29	888-8092			TENSION KNOB WASHER	59	888-8136			THUMB BAR SPRING
30	888-8093	-8128	-8213	TENSION KNOB	60	888-8137	-8137	-8218	FLIPPING LEVER