



MIKE'S REEL REPAIR
 #108 - 31060 Peardonville Road
 Abbotsford, B.C., Canada V2T 6K5
 Toll Free 1-888-404-1119

CN-15D.2+1BB

KEY NO.	PARTS NO.	PARTS NAMES	KEY NO.	PARTS NO.	PARTS NAMES
100	1110004701006	MAIN BODY ASSY.	704	11704017-03001	STABILIZER BAR
105	11105003-01	WORM SHAFT BUSHING	705	11705006-06	WORM SHAFT GEAR
105-1	11105004-01	WORM SHAFT BUSHING	706	11706002-06	IDLE GEAR
117	14117001-03	HANDLE NUT	707	11707008-11	MEDIUM TRANSMISSION GEAR
200	11200055-01006	RIGHT SIDE PLATE	708	11708003-11	TRANSMISSION GEAR
201	11201008-06	ANTI-REVERSE PAWL	709	11709002-03	TRANSMISSION GEAR BUSHING
207	11207017-03001	HOLD PLATE	710	1171001206917	LINE GUIDE ASSY.
211	11211003-03001	ANTI-REVERSE PAWL PIN	712	11712021-03001	WORM SHAFT
212	112120010183	COUNTER COVER ASSY	713	11713001-03907	PAWL CAP
215	11215009-03001	BALL BEARING HOLD PLATE	715	11715003-06	LINE GUIDE PAWL
216	11216001-06	ANTI-REVERSE PAWL SPRING	720	11720002-06001	ONE WAY CLUTCH INNER RING
216-1	11216002-06	CLUTCH CAM SLIDER SPRING	800	11800002-02002	CLUTCH CAM
221	11221001-07	O RING	801	11801001-06	CLUTCH CAM SPRING
224	11224001-02905	ONE WAY CLUTCH BEARING CAP	802	11802005-0183	CLUTCH BAR
300	11300030-01006	LEFT SIDE PLATE	804	11804004-06	CLUTCH CAM SLIDER (MANUAL TRIP)
302	11302002-06001	SPACER	804	11804005-06	CLUTCH CAM SLIDER (AUTO TRIP)
302-3	11302006-03	SPACER	805	11805002-01	PINION GEAR YOKE
303	11303010-03907	CLICK BUTTON	806	11806001-06	YOKE SPRING
304	11304003-06	CLICK PAWL	910	11910001-01	DEPTH COUNTER
305	11305001-01001	CLICK PAWL SPRING	9101	01030625-5	BALL BEARING
311	11311007-06001	SIDE PLATE COVERS	9103	01101612-6	ONE WAY CLUTCH BEARING
400	11400042-04005	ALUMINUM SPOOL ASSY.	9106	01041104-61	BALL BEARING
401	11401001-05002	CLICK GEAR	9201	025.1x8x0.2-6	DRIVE GEAR SHAFT WASHERE
500	1150000504907	DOUBLE HANDLE ASSY.	9202	025.1x10.5x.2-6	LEVEL WIND GUARD WASHER
500	11500013061	BALANCE WEIGHT HANDLE ASSY.	9204	025.9x10x0.2-6	HANDLE NUT WASHER
516	11516001-01	HANDLE NUT HOLDER	9205	028.2x22x1-1	DRIVE GEAR WASHER
600	11600014-03001	CAST CONTROL CAP	9301	03422.6x13-61	RIGHT SIDE PLATE SCREW
608	11608004-06	BALL BEARING RETAINER	9301-1	03412.6x21-61	RIGHT SIDE PLATE SCREW
609	11609003-05907	DRAG SPRING WASHER	9302	03327.52.6x6-61	CLICK PAWL SCREW
610	11610004-006A	DRAG WASHER	9302-1	03327.52.67.561	HOLD PLATE SCREW
610-1	11610003-006	DRAG WASHER	9307	03412.6x4-61	HANDLE NUT HOLDER SCREW
611	11611005-06	EARED WASHER	9311	03222.6x12-61	LEFT SIDE PLATE SCREW
612	11612007-06001	KEY WASHER	9312	03325.2x2x4.561	TRANSMISSION GEAR SCREW
612-1	11612007-06003	KEY WASHER	9314	03212x5-61	CLICK GEAR SCREW
614	11614001-06	TENSION WASHER	9316	03414x5-617	CLUTCH BAR SCREW
615	14615001-04907	STAR DRAG	9319	03312x5-61	CLUTCH CAM SCREW
617	11617007-03	DRAG GEAR SHAFT RETAINER	9320	03122.0x26-61	COUNTER COVER SCREW
700	11700008-03002	DRIVE GEAR	9320-1	03122x8-62	COUNTER COVER SCREW
701	1170102803001A	DRIVE GEAR SHAFT ASSY.(AUTO TRIP)	9322	03412.6x9-61	LINE GUARD SCREW
701	1170102803001	DRIVE GEAR SHAFT ASSY.(MANUAL TRIP)	9323	03222.6x4.5-61	ONE WAY CLUTCH BEARING SCREW
702	1170201103002	PINION GEAR ASSY.	9401	11900001-06	DRIVE GEAR SHAFT "E" RETAINER
703	11703011-03001	LEVEL WIND GUARD	9404	11900002-06	WORM SHAFT "E" RETAINER