



MIKE'S REEL REPAIR
 #108 - 31060 Peardonville Road
 Abbotsford, B.C., Canada V2T 6K6
 Toll Free 1-888-404-1119

CN- 55L. SPARE PARTS LIST

X-MEANS PAINT OR INJ.COLOR

KEY NO	PARTS NO.	PARTS NAMES	KEY NO.	PARTS NO.	PARTS NAMES
100	1110005701006	MAIN BODY ASSY.	709-1	11709007-03001	TRANSMISSION GEAR BUSHING
105	11105006-01	WORM SHAFT BUSHING	710	1171001106917	LINE GUIDE ASSY.
107	11107018-06001	LINE GUARD	712	11712026-03001	WORM SHAFT
108	11108008-0600	HANGER	713	11713001-03907	PAWL CAP
108-1	11108011-06001	HANGER	715	11715002-06	LINE GUIDE PAWL
117	11117005-06	HANDLE NUT	720	11720002-06001	ONE WAY CLUTCH INNER RING
200	11200056-01006	RIGHT SIDE PLATE	724	11724001-06001	CLICK GEAR
201	11201010-06001	ANTI-REVERSE PAWL	800	11800004-02002	CLUTCH CAM
207	11207022-06001	HOLD PLATE	801	11801001-06	CLUTCH CAM SPRING
208	11208012-06001	SIDE PLATE COVERS	802	11802004-0183	CLUTCH BAR
211	11211002-03001	ANTI-REVERSE PAWL PIN	804	11804007-06001	CLUTCH CAM SLIDER
215	11215009-03002	HOLD PLATE BUSHING	805	11805003-06001	PINION GEAR YOKE
216	11216001-06	ANTI-REVERSE PAWL SPRING	806	11806001-06	YOKE BEARING
221	11221001-07	ANTI-REVERSE PAWL PIN	9101	01040725-61	BALL BEARING
224	11224001-02905	ONE WAY CLUTCH BEARING CAP	9103	01101612-62	ONE WAY CLUTCH BEARING
300	11300041-01006	LEFT SIDE PLATE	9106	01041104-61	BALL BEARING
302	11302002-06001	SPACER	9201	025.1x11.5x.5-6	DRIVE GEAR SHAFT WASHER
303	11303004-03907	CLICK BUTTON	9201-1	028x10x0.5-6	DRIVE GEAR SHAFT WASHER
304	11304003-06	CLICK PAWL	9202	025.1x10.5x.2-6	LEVEL WIND GUARD WASHER
305	11305001-01001	CLICK PAWL SPRING	9204	026x13x0.4-8	HANDLE NUT WASHER
311	11311009-06001	SIDE PLATE COVERS	9205	028x36x1-1	DRIVE GEAR WASHER
400	11400043-04005	ALUMINUM SPOOL ASSY.	9206	024.05x10x0.2-8	CLICK BUTTON WASHER
515	11515001-03907	HANDLE NUT HOLDER SCREW	9209	026.05x9x0.2-6	WORM SHAFT WASHER
500	1150002404006	BALANCE WEIGHT HANDLE ASSY.	9301	03223x12-61	RIGHT SIDE PLATE SCREW
600	11600016-03001	CAST CONTROL CAP	9301-1	03223x20-61	RIGHT SIDE PLATE SCREW
608	11608004-06	BALL BEARING RETAINER	9301-2	03122.6x12-61	RIGHT SIDE PLATE SCREW
609	14609003-05907	DRAG SPRING WASHER	9302	03327.52.6x6-61	HOLD PLATE SCREW
610	11610010-01001	DRAG WASHER	9302-1	03222.6x9.5-61	HOLD PLATE SCREW
611	11611005-06	EARED WASHER	9309	03222.6x15-61	HANGER SCREW
612	11612019-06001	KEY WASHER	9309-1	03213x12-61	HANGER SCREW
612-1	11612022-06001	KEY WASHER	9311	03223x12-61	LEFT SIDE PLATE SCREW
614	11614001-06	TENSION WASHER	9311-1	03223x18.5-61	LEFT SIDE PLATE SCREW
615	11615007-04002C	STAR DRAG	9312	03322.6x7.5-61	TRANSMISSION GEAR SCREW
617	11617011-06001	DRIVE GEAR SHAFT BUSHING	9313	03322.6x6-61	CLICK PAWL SPRING SCREW
700	11700028-06002	DRIVE GEAR	9314	03212.0x5.0-61	CLICK GEAR SCREW
701	1170103106001	DRIVE GEAR SHAFT ASSY.(AUTO TRIP)	9316	03414x5-617	CLUTCH BAR SCREW
702	11702030-06002	PINION GEAR	9317	03312x3.5-61	CLUTCH CAM SCREW
703	11703010-03907	LEVEL WIND GUARD	9319	03312x5-61	CLUTCH CAM SCREW
704	11704019-03001	STABILIZER BAR	9323	03222.6x4.5-61	ONE WAY CLUTCH BEARING SCREW
705	11705009-032	WORM SHAFT GEAR	9325	03327x2.6x4.5-61	BALL BEARING SCREW
705-1	11705010-06001	WORM SHAFT GEAR	9401	11900001-06	DRIVE GEAR SHAFT "E" RETAINER
707	11707009-06001	MEDIUM TRANSMISSION GEAR	9404	12900001-06	WORM SHAFT "E" RETAINER
708	11708007-06001	TRANSMISSION GEAR	9404-1	12900002-06	WORM SHAFT "E" RETAINER
709	11709006-03001	TRANSMISSION GEAR BUSHING	9504	12900006-06001	IDLE GEAR"C" RETAINER