



HALOGEN HG - 400LX SPARE PARTS LIST

KEY NO.	PARTS NO.	PARTS NAMES	KEY NO.	PARTS NO.	PARTS NAMES
100	1410001604001	MAIN BODY ASSEMBLY	701	14701003-03002	DRIVE GEAR SHAFT
105	14105001-0114	WORM SHAFT BUSHING	702	14702001-03003	PINION GEAR
117	14117001-03	HANDLE NUT	703	14703003-06001	LEVEL WIND GUARD
200	14200004010	RIGHT SIDE PLATE ASSEMBLY	704	14704003-06	LEVEL WIND GUARD
202	14202001-06	ANTI-REVERSE RATCHET	705	14705002-06	WORM SHAFT GEAR
206	14206001-01001	BRAKE COLLARS(6 PIECES)	708	14708001-0114	MEDIUM TRANSMISSION GEAR
210	14210001-03	MAIN SHIFT BUSHING	709	14709002-03	TRANSMISSION GEAR BUSHING
216	14216001-06	CLICK PAWL SPRING	711	117110010170	LINE GUIDE ASSEMBLY
220	14220001-03914	RIGHT SIDE PLATE BOLTS	712	14712003-03001	WORM SHAFT
221	14221001-07	RIGHT SIDE PLATE BOLTS ORING	713	14713001-0170	PAWL CAP
222	14222002-01001	RIGHT SIDE SET PLATE	715	11715003-06	LINE GUIDE PAWL
300	14300001-04953	LEFT SIDE PLATE	720	11720002-06001	ONE WAY CLUTCH INNER RING
302	14302001-03	MAIN SHAFT LEFT SIDE SPACER	800	14800001-06	CLUTCH BAR SHAFT
303	14303001-0170	CLICK BUTTON	801	14801002-06001	CLUTCH PAWL SPRING
304	14304001-06	CLICK PAWL	802	14802004-01003	CLUTCH BAR
305	14305001-06	CLICK BUTTON SPRING	803	14803003-06	CLUTCH BAR SUPPORT
306	14306001-03	CLICK BUTTON SPRING PIN	804	14804002-06001	CLUTCH PAWL
308	14308002-06001	CLICK PAWL HOLD PLATE	805	14805002-0114	PINNON GEAR YOKE
309	14309001-03907	CLICK PAWL PIN	806	14806001-06	YOKE SPRING
400	14400003-04953	SPOOL	807	14807002-0114	CLUTCH CAM
401	14401001-0114	CLICK GEAR ASSEMBLY	808	14808002-06001	CLUTCH CAM SPRING
500	1450000204005	HANDE ARM	809	14809001-0170	CLUTCH BAR SPACER
513	14513001-06	HANDLE COVER	810	14810001-01001	CLUTCH BAR GUIDE
516	145160010A913	HANDE NUT HOLDER	812	14812001-06	CLUTCH CAM PLATE
600	14600002-04907	CAST CONTROL CAP	9101	01051003-611	BALL BEARING
601	14601001-16	COMPRESSION SPRING	9103	01101612-62	ONE WAY CLUTCH BEARING
603	14603001-01	RIGHT SIDE PLATE BUSHING O RING	9106	01031004-611	BALL BEARING(A)
604	14604001-0170	CONTROL CLICK	9201	025.1x10.5x0.2-3	IDLE GEAR SPACER
608	14608001-06	BEARING RETAINER	9203	023x5x0.2-1	RIGHT SIDE PLATE BOLTS SPACER
609	14609003-06001	DRAG SPRING WASHER	9204	025.9x12x0.2-6	WASHER
609-1	14609004-05907	DRAG SPRING WASHER	9205	0210x20x1-8	DRIVE GEAR WASHER
610	11610004-006A	DRAG WASHER	9206	023.5x6x0.5-3	CLUTCH BAR SHAFT SPACER
610-1	11610003-006	DRAG WASHER	9207	025x6.5x0.2-3	WASHER
611	11611005-061	EARED WASHER	9302	03412.3x10.5-61	RIGHT SIDE SET PLATE SCREW
612	11612007-061	KEY WASHER	9303	03212.6x6-61	LEFT SIDE PLATE SCREW
612-1	11612007-06003	KEY WASHER	9305	03412.6x4-61	CLICK PAWL HOLD PLATE SCREW
614	11614001-06	FRICTION WASHER	9306	03122x5-61	MEDIUM TRANSMISSION GEAR SCREW
615	14615003-04002B	STAR DRAG	9312	03412.6x9-61	TRANSMISSION GEAR SCREW
618	14618001-07	RUBBER SPACER	9402	12900002-06	DRIVE GEAR SHAFT "E"RETAINER
619	14619001-03	MAIN SHAFT RIGHT SIDE SPACER	9403	14900001-06	MEDIUM TRANSMISSION GEAR"E" RETAINER
700	14700002-0321	DRIVE GEAR	9404	12900001-06	WORM SHAFT AND CLUTCH "E" RETAINER