

I - 400 SPARE PARTS LIST

KEY	PARTS NO	PARTS NAME	LOT	KEY	PARTS NO	PARTS NAME	LOT
100	1410000304901	MAIN BODY ASSY.		702	1470200103002	PINION GEAR ASSY.	
105	14105001-0114	WORM SHAFT BUSHING		703	14703003-06001	WORM SHAFT GUARD	
117	14117001-03	CLICK BUTTON RETAINER NUT		704	14704003-16	LINE GUIDE SUPPORT BAR	
200	1420000104702	MAIN SIDE PLATE ASSY.		705	14705002-06	TRANSMISSION GEAR	
202	1420200401	RATCH		708	14708001-0114	TRANSMISSION GEAR	
206	14206003-01001	CONTROL PIN CAP		709	14709002-03	TRANSMISSION GEAR BUSHING	
210	14210001-03	MAIN SHAFT BUSHING		711	1471100111001	GUIDE SLIDE BASE ASSY.	
216	14216001-062	ANTI-RE PAWL SPRING		712	14712003-03001	WORM SHAFT	
220	14220001-03907	MIAN SIDE PLATE HOLD SCREW		713	14713001-01	LINE GUIDE PAWL CAP	
221	14221001-07	"O"RING		715	11715003-06001C	LINE GUIDE PAWL	
222	14222001-01001	MAIN SIDE PLATE HOLDER		720	11720002-06001	DRIVE GEAR SHAFT BUSHING	
300	14300001-04702C	VICE SIDE PLATE		721	14721001-03	DRIVE GEAR SHAFT BUSHING	
302	14302001-03	BUSHING		800	14800001-06	CLUTCH SHAFT	
303	14303001-01	CLICK BUTTON		801	14801001-06001	CLUTCH SPRING	
304	11304009-06001	CLICK PAWL		802	14802003-01	CLUTCH BAR	
304-1	14304001-06	CLICK PAWL		803	14803003-06	CLUTCH BAR SUPPORT	
305	14305001-06	CLICK PAWL SPRING		804	14804001-06	CLUTCH SLIDER	
306	14306001-03	CLICK PAWL SPRING PIN		805	14805001-0114	PINION GEAR YOKE	
308	14308001-06	CLICK BUTTON RETAINER		806	14806001-06	YOKE SPRING	
309	14309001-03907	CLICK PIN		807	14807001-0114	YOKE BRAKED PLATE	
400	1440000304907C	SPOOL ASSY.		808	14808001-06001	YOKE BRAKED PLATE SPRING	
401	14401001-0114	CLICK GEAR		809	14809001-01	CLUTCH BAR WASHER	
500	1450000204005B	HANDLE ASSY.		810	14810001-01001	CLUTCH SHAFT BUSHING	
516	14516001-0A913	HANDLE NUT RETAINER		812	14812001-06	BRAKED PLATE HOLDER	
600	14600001-04907	CAST CONTROL CAP		9103	01101612-62	ONE WAY BEARING	
601	14601001-16	COMPRESSION SPRING		9106	01031004-611	BALL BEARING	
603	14603001-01	O RING		9201	025.1x10.5x.2-6	WASHER	
604	14604003-01001	CLICK PAWL PLATE		9202	025x6.5x0.2-3	WASHER	
604-1	11604002-01001	CLICK PAWL RETAINER		9203	023x5x0.2-1	WASHER	
608	14608001-06001	DRAG WASHER RETAINER		9204	025.9x12x0.2-6	WASHER	
609	14609003-06001	DRAG SPRING WASHER		9205	0210x20x1-8	WASHER	
610	11610004-006A	DRAG WASHER		9206	023.5x6x0.5-3	WASHER	
610-1	11610003-006	DRAG WASHER		9207	022x4.9x0.2-3	WASHER	
611	11611005-061	EARED WASHER		9302	03412.3x10.5-617	SCREW	
612	11612007-06002	KEY WASHER		9303	03212.6x6-61	SCREW	
612-1	14612001-06001	KEY WASHER		9305	03412.6x4-61	SCREW	
615	11615008-01	STAR DARG		9306	03122x5-61	SCREW	
618	14618001-07	SPACER		9312	03412.6x9-617	SCREW	
619	14619001-1	WASHER		9402	12900002-06	E RETAINER	
700	14700002-032	DRIVE GEAR		9403	14900001-06	E RETAINER	
701	14701002-03001	DRIVE GEAR SHAFT		9404	12900001-06	E RETAINER	