



RTX-40s PARTS LIST

KEY NO	PARTS NO	PARTS NAME	KEY NO	PARTS NO	PARTS NAME
100	21003989	MIAN BODY	612-2	26120007	KEY WASHER
105	21050027	PINION BEARING FIXED PLATE	700	27002036	DRIVE GEAR
105-1	21050036	PIN. BEARING FIXED PLATE	702	27020466	PINION GEAR
108	21081457	CAP	703	27030339	PINION GEAR BUSHING
200	22004319	SIDE PLATE	705	27050150	TRANSMISSION GEAR
201	22010296	MAIN BODY DECORATION	708	27080127	OSCILLATING SLIDER
201-1	22010297	SIDE PLATE DECORATION	716	27160007	OSCILLATION SLIDER PLATE
201-2	22010479	MIAN BODY DECORATION	718	27180735	MAIN SHAFT
201-3	22010480	SIDE PLATE DECORATION	719	27190025	CLICK GEAR
300	23004851	ROTOR	722	27220009	CLICK GEAR WASHER
301	23011939	BAIL ARM	725	27250020	TRANSMISSION GEAR BUSHING
304	23042608	BAIL ARM COVER	800	28000241	ANTI-REVERSE/ANTI-RE LEVER
305	23050146	KICK LEVER	800-1	28000322	ANTI-REVERSE/ANTI-RE LEVER
307	23071542	BAIL HOLDER	801	28010024	ANTI-RE LEVER SPRING
309	23090002	BAIL ARM SLIDER	0910041	0910041	BALL BEARING
310	23100031	COMPRESSION SPRING	0910051	0910051	BALL BEARING
313	23131574	BAIL WIRE ASSY.	0910093	0910093	BALL BEARING
315	23150029	LINE ROLLER	0910335	0910335	BALL BEARING
317	23170013	LINE ROLLERWASHER	0910495	0910495	BALL BEARING
317-1	23170014	LINE ROLLERWASHER	0920154	0920154	WASHER
318	23180005	ROTOR NUT	0920376	0920376	WASHER
400	240014357	SPOOL ASSY.	0920540	0920540	WASHER
405	24050042	DRAG WASHER RETAINER	0930045	0930045	SCREW
407	24070006	EXTENSION SPRING	09301278	09301278	SCREW
412-1	24120021	SPOOL BUSHING	09301319	09301319	SCREW
413	24130009	WATERPROOF RETAINER	0930171	0930171	SCREW
500	25005663	HANDLE ASSY.	0930209	0930209	SCREW
504	25040004	HANDLE SCREW CAP WASHER	0930438	0930438	SCREW
513	25130830	HANDLE CAP	0930471	0930471	SCREW
600	26003199	DRAG KNOB ASSY.	0930575	0930575	SCREW
610	26100011	DRAG WASHER	0930639	0930639	SCREW
611	26110005	EARED WASHER	0930643	0930643	SCREW
612	26120006	KEY WASHER	0930839	0930839	SCREW
612-1	26120054	KEY WASHER			