



TG-10L

**TG - 10L SPARE PARTS LIST**

KEY NO.	PARTS NAMES	PARTS NO.	KEY NO.	PARTS NAMES	PARTS NO.
100	MAIN BODY	11100086-04003	702-1	PINION GEAR	11702025-06001
102	BODY FOOT	11102010-06002	703	LEVEL WORM GUARD	11703014-03001
105	WORM SHAFT BUSHING	11105003-01	704	WORM GUIDE SUPPORT BAR	11704021-03001
105-1	WORM SHAFT BUSHING	11105004-01	705	WORM SHAFT TRANSMISSION GEAR	11705008-06
200	RIGHT SIDE PLATE ASSY.	1120003714004	707	MEDIUM TRANSMISSION GEAR	11707003-01
201	ANTI-REVERSE PAWL	11201009-06001	709	TRANSMISSION GEAR BUSHING	11709009-03001
203	CONTROL PIN	11203002-01001	710	LINE GUIDE ASSY.	1171001406X
204	COMPRESSION SPRING	11204002-06	712	WORM SHAFT	11712033-03001
205	DECORATION PLATE	11205005-06004	713	PAWL CAP	11713001-03907
206	LEVER DRAG STOPPER CAP	11206001-03001	715	LINE GUIDE PAWL	11715003-06001
206-1	LEVER DRAG STOPPER CAP	11206002-03907	717	MAIN SHAFT PIN	11717003-06
206-2	LEVER DRAG STOPPER CAP	11206005-03001	718	MAIN SHAFT	11718054-06002
207	HOLD PLATE	11207013-04001	723	SILENT SPRING	11723001-11001
215	HOLD PLATE BUSHING	11215004-03	913	SPRING WASHER	11913001-05907
217	ANTI-REVERSE PAWL SPRING	11217004-06001	913-1	SPRING WASHER	11913002-06001
300	LEFT SIDE PLATE ASSY	1130004604004	9101	BALL BEARING	01081605-615
303	CLICK BUTTON	11303011-03001	9102	BALL BEARING	01071304-615
304	CLICK PAWL	11304003-06	9104	BALL BEARING	01061505-612
305	CLICK PAWL SPRING	11305002-06001	9105	BALL BEARING	01061505-612
400	SPOOL	11400053-04002A	9201	DRIVE GEAR SHAFT WASHER	0212x15x0.5-6
401	CLICK GEAR	11401010-05001	9203	PRESSURE LOAD BLOCK WASHER	026.05x9x0.5-6
405	SPOOL COVER	11405014-11	9206	CLICK BUTTON WASHER	023.95x10.8x0.5-7
405-1	SPOOL COVER	11405013-07001	9207	LINE GUIDE PAWL WASHER	022x4.9x0.2-3
500	HANDLE ARM ASSY.	1150001726003	9208	LEVER DRAG WASHER	0210.1x23.8x1-9
501	HANDLE NUT	11501009-26	9209	WORM SHAFT BUSHING WASHER	025x7x0.5-6
507-1	DRIVE GEAR TRANSMISSION PIN	11507008-05001	9215	SIDE PLATE SCREW WASHER	023.1x5.9x1-1
513	HANDLE COVER	11513009-06	9301	RIGHT SIDE PLATE SCREW	03613x16.5-617
516	HANDLE NUT RETAINER	11516005-06	9301-1	RIGHT SIDE PLATE SCREW	03613.0x18-617
600	CAST CONTROL KNOB	11600013-03X	9302	ANTI-REVERSE PAWL SCREW	03312.6x5-61
601	COMPRESSION SPRING	11601001-06	9304	CONTROL PIN SCREW	03325.2x2x5-61
602	ADJUST BLOCK	11602001-05001	9305	STOPPER CAP SCREW	03112.6x10-61
603	O RING	11603001-07	9306	DECORATION PLATE SCREW	03213x8-61003
605	LEVER DRAG	11605010-04002	9307	HANDLE NUT RETAINER SCREW	03212.6x5.5-61
607	PINION GUARD	11607009-16002	9310	BODY FOOT SCREW	03214.0x9.5-617
608	DRAG WASHER RETAINER	11608003-06	9311	LEFT SIDE PLATE SCREW	03613.0x9-617
609	MAIN SHAFT SPRING WASHER	11609007-05907	9313	CLICK PAWL SPRING SCREW	03312.6x8-61
611	DRAG WASHER	11611013-01001	9314	CLICK PAWL SCREW	03212.6x5.5-61
611-1	DRAG WASHER	11611013-00	9319	CLICK BUTTON SCREW	03312x5-61
612	KEY WASHER	11612010-062	9402	"E" RETAINER FOR MAIN SHAFT	11900001-06
613	COMPRESSION SPRING	11613004-06	9404	"E" RETAINER FOR WORM SHAFT	12900001-06
700	DRIVE GEAR	11700018-26004	9407	"E" RETAINER FOR SUPPORT BAR	13509001-06
701	DRIVE GEAR SHAFT	11701015-06002	9502	"C" RETAINER FOR DRIVE GEAR SHAFT	11901009-06001
702	PINION GEAR	11702024-26004	9503	"C" RETAINER FOR TRANSMISSION GEA	11901004-05907