



T-20L 4BB, ALUM SPL					
KEY NO.	PARTS NO.	PARTS NAMES	KEY NO.	PARTS NO.	PARTS NAMES
100	111000340100Z	MAIN BODY ASSY	700	11700011-0600Z	DRIVE GEAR
102	11102007-04001	BODY FOOT	701	11701015-06001	DRIVE GEAR SHAFT
103	11103002-067	BODY FOOT SCREW	702	11702016-0600Z	PINION GEAR
104	11104001-0E	BODY FOOT SCREW NUT	702-1	11702017-06001	PINION GEAR
105	11105006-01	WORM SHAFT BUSHING	703	11703010-03907	LEVEL WIND GUARD
108	11108004-0681	HANGER	704	11704011-03907	WORMGUIDE SUPPORT BAR
117	11117004-1Z	CLICK PAWL LOCKNUT	705	11705009-03Z	WORM SHAFT GEAR
200	112000360100Z	RIGHT SIDE PLATE ASSY	707	11707009-06001	MEDIUM TRANSMISSION GEAR/A
201	11201009-06001	ANTI-REVERSE PAWL	708	11708007-06001	MEDIUM TRANSMISSION GEAR/B
204	11204002-0E	COMPRESSION SPRING	709	11709001-0Z	TRANSMISSION GEAR BUSHING
204-3	11204005-0600Z	COMPRESSION SPRING	709-1	11709008-03001	TRANSMISSION GEAR BUSHING
205	11205008-061	DECORATION PLATE	710A	1171001106917	LINE GUIDE ASSY
206	11206001-03	LEVER DRAG STOPPER CAP	710	11710011-06917	LINE GUIDE
207	11207008-04001	HOLD PLATE	711	11711003-03907	SILIDE BASE
211	11211004-03907	ANTI-REVERSE PAWL BUSHING	712	11712020-03907	WORM SHAFT
215	11215008-0Z	HOLD PLATE BUSHING	713	11713001-03907	LINE GUIDE PAWL CAF
217	11217004-06001	ANTI-REVERSE PAWL SPRING	715	11715002-0E	LINE GUIDE PAWL
223	11223001-07	WATER PROOF PACKING	717	11717003-0E	STOPPER PIN
300	11300033-018Z	LEFT SIDE PLATE	718	11718033-06001	MAIN SHAFT
303	11303009-0400Z	CLICK BUTTON	723	11723001-01001	SILENT SPRING
304	11304007-0600Z	CLICK PAWL	913	11913001-05907	SPRING WASHER
308	11308002-0600Z	CLICK TONGUE BUSHING	913-1	11913002-06001	SPRING WASHER
309	11309001-261	CLICK PIN	9101	01091705-E	BALL BEARING
310	11310001-0600Z	CLICK PIN SCREW	9104	01081906-E	BALL BEARING
400A	114000390400A	SPOOL ASSY.	9105	01061505-E	BALL BEARING
400	11400039-0400A	SPOOL	9201	0212x15x0.5-Z	WASHER
401	11401007-01	CLICK GEAR	9201-1	0212x15x0.7-Z	WASHER
405	11405010-11	SPOOL COVER	9203	028x10.5x0.8-E	WASHER
405-1	11405013-07001	SPOOL COVER	9207	022x4.9x0.3-Z	LINE GUIDE PAWL WASHER
500A	115000171E	HANDLE ARM ASSY.	9208	0210.1x23.8x1-Z	LEVER DRAG WASHER
500	11500017-1E	HANDLE ARM	9212	027x8x0.3-E	WASHER
501	11501009-2E	HANDLE NUT	9212-1	027.2x10x0.8-Z	WASHER
509	11509016-0400Z	HANDLE KNOB	9216	028.1x12x0.5-1	WASHER
510	11510006-06001	HANDLE KNOB SCREW	9218	024.6x8x0.2-E	WASHER
511	11511007-039071	HANDLE KNOB BUSHING	9301	03423.0x16-61	RIGHT SIDE PLATE SCREW
513	11513009-0E	HANDLE COVER	9301-1	03123.0x12.5-61	RIGHT SIDE PLATE SCREW
516	11516005-0E	HANDLE NUT HOLD PLATE	9302	03322.6x7.5-61	HOLD PLATE SCREW
600	11600013-03907	DRAG KNOB	9303	03327.52.613-61	ANTI-REVERSE PAWL SCREW
601	11601001-0E	COMPRESSION SPRING	9305	03122.6x8-61	SIDE PLATE SCREW
602	11602001-05001	ADJUST BLOCK	9306	03222.6x9.5-61	SIDE PLATE SCREW
603	11603001-07	*O"OIL SEAL	9307	03212.6x5.5-61	HANDLE NUT RETAINER SCREW
605	11605002-018Z	LEVER DRAG	9308	03614x9-617	HANDLE SCREW
606	11606001-0E	DRAG LEVER CLOCK PAWL	9309	03114.0x10-61	HANGER SCREW
607	11607009-0600Z	PINION GUARD	9314	03412.6x5-617	CLICK PAWL SCREW
608	11608003-0E	DRAG WASHER RETAINER	9318	03422x5.5-61	CLICK PAWL SCREW
609	11609006-05907	MAIN SHAFT SPRING WASHER	9402	11900004-0E	"E" RETAINER
611	11611007-067	DRAG WASHER	9404	12900001-0E	"E" RETAINER
612	11612009-061	KEY WASHER	9404-1	12900002-0E	"E" RETAINER
612-1	11612008-06001	KEY WASHER	9502	11901003-06001	"C" RETAINER
613	11613010-0E	COMPRESSION SPRING			