



T-20-2
MIKE'S REEL REPAIR
 #108 - 31060 Peardonville Road
 Abbotsford, B.C., Canada V2T 6K5
 Toll Free 1-888-404-1119

T-20-2 SPARE PARTS LIST

KEY NO.	PARTS NO.	PARTS NAMES	KEY NO.	PARTS NO.	PARTS NAMES
100	1110003401002	MAIN BODY ASSY.	605	11605002-0183	LEVER DRAG
102	11102007-04001	BODY FOOT	606	11606001-06	DRAG LEVER CLOCK PAWL
103	11103002-067	BODY FOOT SCREW	607	11607009-06002	PINION GUARD
104	11104001-06	BODY FOOT SCREW NUT	608	11608003-06	DRAG WASHER RETAINER
105	11105006-01	WORM SHAFT BUSHING	609	11609006-05907	MAIN SHAFT SPRING WASHER
107	11107016-03907	LINE GRARD	611	11611007-067	DRAG WASHER
108	11108004-0681	HANGER	612	11612009-061	KEY WASHER
117	11117004-13	CLICK PAWL LOCKNUT	612-1	11612008-06001	KEY WASHER
200	1120003601002	RIGHT SIDE PLATE ASSY.	613	11613010-06	COMPRESSION SPRING
201	11201009-06001	ANTI-REVERSE PAWL	700	11700009-06005	DRIVE GEAR
204	11204002-06	COMPRESSION SPRING	700-1	11700010-06005	DRIVE GEAR
204-1	11204003-05001	COMPRESSION SPRING	701	11701012-167	DRIVE GEAR SHAFT
204-2	11204004-06	COMPRESSION SPRING	702	11702014-06003	PINION GEAR
204-3	11204005-06002	COMPRESSION SPRING	702-1	11702015-06003	PINION GEAR
205	11205008-061	DECORATION PLATE	704	11704011-03907	WORMGUIDE SUPPOUT BAR
206	11206001-03	LEVER DRAG STOPPER CAP	709	11709001-03	TRANSMISSION GEAR BUSHING
207	11207008-06001	HOLD PLATE	718	11718033-06001	MAIN SHAFT
211	11211004-03907	ANTI-REVERSE PAWL BUSHING	717	11717003-06	STOPPER PIN
215	11215005-03	HOLD PLATE BUSHING	723	11723001-01001	SILENT SPRING
217	11217004-06001	ANTI-REVERSE PAWL SPRING	913	11913001-05907	SPRING WASHER
223	11223001-07	WATER PROOF PACKING	913-1	11913002-06001	SPRING WASHER
300	11300033-01831	LEFT SIDE PLATE	9101	01091705-6	BALL BEARING
303	11303009-04002	CLICK BUTTON	9104	01081906-6	BALL BEARING
304	11304007-06001	CLICK PAWL	9105	01061505-6	BALL BEARING
308	11308002-06002	CLICK TONGUE BUSHING	9201	0212x15x0.5-3	WASHER
309	11309001-261	CLICK PIN	9202-1	0212x15x0.7-3	WASHER
310	11310001-06002	CLICK PIN SCREW	9203	028x10.5x0.8-6	WASHER
400A	1140003904004	SPOOL ASSY.	9208	0210.1x23.8x1-9	LEVER DRAG WASHER
400	11400039-04004	SPOOL	9212	027x8x0.3-6	WASHER
405	11405010-11	SPOOL COVER	9212-1	027.2x10x0.8-7	WASHER
405-1	11405013-07001	SPOOL COVER	9216	028.1x12x0.5-1	WASHER
500A	1150001716	HANDLE ARM ASSY.	9217	0217.2x24x2-1	WASHER
500	11500017-16	HANDLE ARM	9218	24.6x8x0.2-6	WASHER
501	11501008-26	HANDLE NUT	9301	03423.0x16-61	RIGHT SIDE PLATE SCREW
507	11507006-11	CLUCTCH BUTTON	9301-1	03123.0x12.5-61	REGHT SIDE PLATE SCREW
507-1	11507004-05907	DRIVE GEAR TRANSMISSION PIN	9302	03322.6x7.5-61	HOLD PLATE SCREW
508	11508002-06	CLUCTCH BUTTON RETAINER SPRING	9303	03327.52.613-61	ANTI-REVERSE PAWL SCREW
509	11509016-04002	HANDLE KNOB	9305	03122.6x8-61	SIDE PLATE SCREW
510	11510006-06001	HANDLE KNOB SCREW	9306	03222.6x9.5-61	SIDE PLATE SCREW
511	11511007-039071	HANDLE KNOB BUSHING	9307	03212.6x13-61	HANDLE NUT RETAINER SCREW
513	11513009-06	HANDLE COVER	9308	03614x9-617	HANDLE SCREW
516	11516004-01	HANDLE NUT RETAINER	9309	03114.0x10-61	HANGER SCREW
517	11517003-06001	CONTROL PIN	9314	03412.6x5-61	CLICK PAWL SCREW
517-1	11517004-23907	CONTROL PIN	9318	03422x5.5-61	CLICK PAWL SCREW
600	11600013-03907	DRAG KNOB	9402	11900004-06	"E" RETAINER
601	11601001-06	COMPRESSION SPRING	9403	12900001-06	"E" RETAINER
602	11602001-05001	ADJUST BLOCK	9404	12900002-06	"E" RETAINER
603	11603001-07	"O"OIL SEAL	9502	11901003-06001	"C" RETAINER