

VS - 200 SPARE PARTS LIST

KEY NO.	PARTS NEMAS	PARTS NO.	KEY NO.	PARTS NEMAS	PARTS NO.
100	MAIN BODY	14100018-04004	702	PINION GEAR	14702008-03002
105	WORM SHAFT BUSHING	14105002-01002	703	WORM SHAFT GUARD	14703005-01001
117	CLICK BUTTON RETAINER NUT	14117001-03	705	TRANSMISSION GEAR	14705003-01002
119	BODY COVERS	14119001-01P19	705-1	TRANSMISSION GEAR	14705004-01002
200	MAIN SIDE PLATE ASSY	1420000704004	711	GUIDE SLIDE BASE	1471100201003A
202	RATCHET	14202002-06001	712	WORM SHAFT	14712004-03001
206	LEVER DRAG STOPPER CAP	14206002-01002	713	LINE GUIDE PAWL CAP	14713002-03001
207	HOLD PLATE	14207001-01001	715	LINE GUIDE PAWL	14715002-06001
220	MIAN SIDE PLATE HOLD SCREW	14220002-06001	720	DRIVE GEAR BUSHING	14720002-06001
226	CONTROL FIXED PIN	14226001-03001	725	TRANSMISSION GEAR PIN	14725001-06001
300	VICE SIDE PLATE	14300003-0A102	800	CLUTCH SHAFT	14800002-06001
302	BUSHING	14302001-1	801	CLUTCH SPRING	14801003-06001
304	CLICK PAWL	14304003-06001	804	CLUTCH SLIDER	14804003-06001
306	CLICK PAWL SPRING PIN	14306002-03001	804-1	CLUTCH SLIDER	14804005-02001
313	LEFT SIDE PLATE TIMER	14313001-06001	805	PINION GEAR YOKE	14805003-01002
314	LEFT SIDE PLATE PIN	14314001-06001	806	YOKE SPRING	14806002-06001
315	LEFT SIDE HOLD PLATE	14315001-01003	807	YOKE BRAKED PLATE	14807003-01001
316	HOLD PLATE COVERS	14316002-01003	808	YOKE BRAKED PLATE SPRING	14808003-06001
317	LEFT SIDE PLATE PIN SPRING	14317001-06001	809	CLUTCH BAR WASHER	14809002-01003
318	LEFT SIDECONTROL PIN SPRING	14318001-03001	812	BRAKED PLATE HOLDER	14812003-06001
400	SPOOL ASSY	1440000904002	813	CLUTCH BAR CAP	14813001-07003
400-1	SPOOL ASSY	1440001004002	9101	BALL BEARING	01030804-615
401	CLICK GEAR	1440100201001	9102	BALL BEARING	01050903-601
500	DOUBLE HANDLE ASSY	1450000404002	9103	ONE WAY BEARING	01101612-62
516	HANDLE NUT RETAINER	14516002-0A003	9106	BALL BEARING	01031004-601
600	CAST CONTROL CAP	14600003-04005	9108	BALL BEARING	01040725-615
603	RIGHT SIDE BUSHING O RING	14603002-07	9201	DRIVE GEAR SHAFT WASHER	025.1x10.5x.2-6
604	DRAG CLICK	14604002-02001	9201-1	DRIVE GEAR SHAFT WASHER	028x10x0.5-6
608	DRAG WASHER RETAINER	14608002-06001	9201-2	DRIVE GEAR SHAFT WASHER	028.1x12x0.5-0
608-1	DRAG WASHER RETAINER	14608001-06001	9204	HANDEL NUT WASHER	028x10.5x0.5-6
609	DRAG SPRING WASHER	14609003-06001	9205	RATCHET WASHER	028.2x20x1-9
609-1	DRAG SPRING WASHER	14609004-06001	9207	LINE GUIDE PAWL WASHER	022x4.9x0.2-3
610	DRAG WASHER	11610004-006A	9301	MAIN SIDE PLATE SCREW	03112x8-61
610-1	DRAG WASHER	11610003-006	9301-1	MAIN SIDE PLATE SCREW	03112.6x10-617
611	EARED WASHER	11611005-061	9309	HANGER SCREW	03412x4-61
612	KEY WASHER	11612007-06001	9314	CLICK GEAR SCREW	03212x8-617
612-1	KEY WASHER	11612007-06004	9314-1	SCREW	03212x3.2-61
615	STAR DARG KNOB	14615004-04002	9316	CLUTCH PLATE SCREW	03422.6x6.5-61
618	SPACER	14618002-07	9319	CLICK BUTTON SCREW	03412.6x4-61
619	WASHER	14619002-01001	9401	E RETAINER FOR MAIN SHAFT	12900001-06
700	DRIVE GEAR	14700006-03002	9407	E RETAINER	11900002-06
701	DRIVE GEAR SHAFT	14701005-03001	9407-1	E RETAINER	14900001-06