



**X-400 SPARE PARTS LIST**

KEY NO.	PARTS NAMES	PARTS NO.	KEY NO.	PARTS NAMES	PARTS NO.
100	MAIN BODY ASSEMBLY	1410000304949	702	PINION GEAR	14702001-03002
105	WORM SHAFT BUSHING	14105001-0114	703	LEVEL WIND GUARD	14703003-06001
117	HANDLE NUT	14117001-03	704	LEVEL WIND GUARD	14704003-03907
200	RIGHT SIDE PLATE ASSEMBLY	1420000104950	705	WORM SHAFT GEAR	14705002-06
202	ANTI-REVERSE RATCHET	14202001-06	708	MEDIUM TRANSMISSION GEAR	14708001-01
206	BRAKE COLLARS(6 PIECES)	14206001-01001	709	TRANSMISSION GEAR BUSHING	14709002-03
216	CLICK PAWL SPRING	14216001-06	711	LINE GUIDE ASSEMBLY	1171100101
220	RIGHT SIDE PLATE BOLTS	14220001-03907	712	WORM SHAFT	14712003-03001
221	RIGHT SIDE PLATE BOLTS ORING	14221001-07	713	PAWL CAP	14713001-0170
222	RIGHT SIDE SET PLATE	14222001-01001	715	LINE GUIDE PAWL	11715003-06
300	LEFT SIDE PLATE	14300001-04949	720	ONE WAY CLUTCH INNER RING	11720002-06001
302	MAIN SHAFT LEFT SIDE SPACER	14302001-03	800	CLUTCH BAR SHAFT	14800001-06
303	CLICK BUTTON	14303001-0170	801	CLUTCH PAWL SPRING	14801001-06
304	CLICK PAWL	14304001-06	802	CLUTCH BAR	14802003-0170
305	CLICK BUTTON SPRING	14305001-06	803	CLUTCH BAR SUPPORT	14803003-06
306	CLICK BUTTON SPRING PIN	14306001-03	804	CLUTCH PAWL	14804001-06
308	CLICK PAWL HOLD PLATE	14308001-06	805	PINNON GEAR YOKE	14805001-0114
309	CLICK PAWL PIN	14309001-03907	806	YOKE SPRING	14806001-06
400	SPOOL	14400003-04907	807	CLUTCH CAM	14807001-0114
401	CLICK GEAR ASSEMBLY	14401001-0114	808	CLUTCH CAM SPRING	14808001-06001
500	HANDE ARM	1450000204005	809	CLUTCH BAR SPACER	14809001-0170
513	HANDLE COVER	14513001-06	810	CLUTCH BAR GUIDE	14810001-01001
516	HANDE NUT HOLDER	145160010AX	812	CLUTCH CAM PLATE	14812001-06
600	CAST CONTROL CAP	14600001-03907	9101	BALL BEARING	01051003-61
601	COMPRESSION SPRING	14601001-16	9103	ONE WAY CLUTCH BEARING	01101612-5
603	RIGHT SIDE PLATE BUSHING O RING	14603001-07	9104	BALL BEARING	01050825-5
604	CONTROL CLICK	14604001-0170	9106	BALL BEARING(A)	01031004-61
608	BEARING RETAINER	14608001-06	9201	IDLE GEAR SPACER	025.1x10.5x0.2-3
609	DRAG SPRING WASHER	14609003-06001	9203	RIGHT SIDE PLATE BOLTS SPACER	023x5x0.2-1
609-1	DRAG SPRING WASHER	14609004-05907	9204	WASHER	025.9x12x0.2-6

610	DRAG WASHER	11610004-006A	9205	DRIVE GEAR WASHER	0210x20x1-8
610-1	DRAG WASHER	11610003-006	9206	CLUTCH BAR SHAFT SPACER	023.5x6x0.5-3
611	EARED WASHER	11611005-061	9207	WORM SHAFT/DRIVE SHAFT SPACER	025x6.5x0.2-3
612	KEY WASHER	11612007-061	9302	RIGHT SIDE SET PLATE SCREW	03412.3x10.5-61
612-1	KEY WASHER	14612001-06	9303	LEFT SIDE PLATE SCREW	03212.6x6-61
614	FRICITION WASHER	11614001-06	9305	CLICK PAWL HOLD PLATE SCREW	03412.6x4-61
615	STAR DRAG	14615003-04002C	9306	MEDIUM TRANSMISSION GEAR SCREW	03412.6x9-61
618	RUBBER SPACER	14618001-07	9402	DRIVE GEAR SHAFT "E"RETAINER	12900002-06
619	MAIN SHAFT RIGHT SIDE SPACER	14619001-03	9403	MEDIUM TRANSMISSION GEAR"E" RETAINER	14900001-06
700	DRIVE GEAR	14700002-032	9404	WORM SHAFT AND CLUTCH "E" RETAINER	12900001-06
701	DRIVE GEAR SHAFT	14701002-03002	9504	MAIN SHAFT C RETAINER	11901001-06
702	PINION GEAR	14702001-03002	9504	MAIN SHAFT C RETAINER	11901001-06

