


# PROCASTER-Z103HA

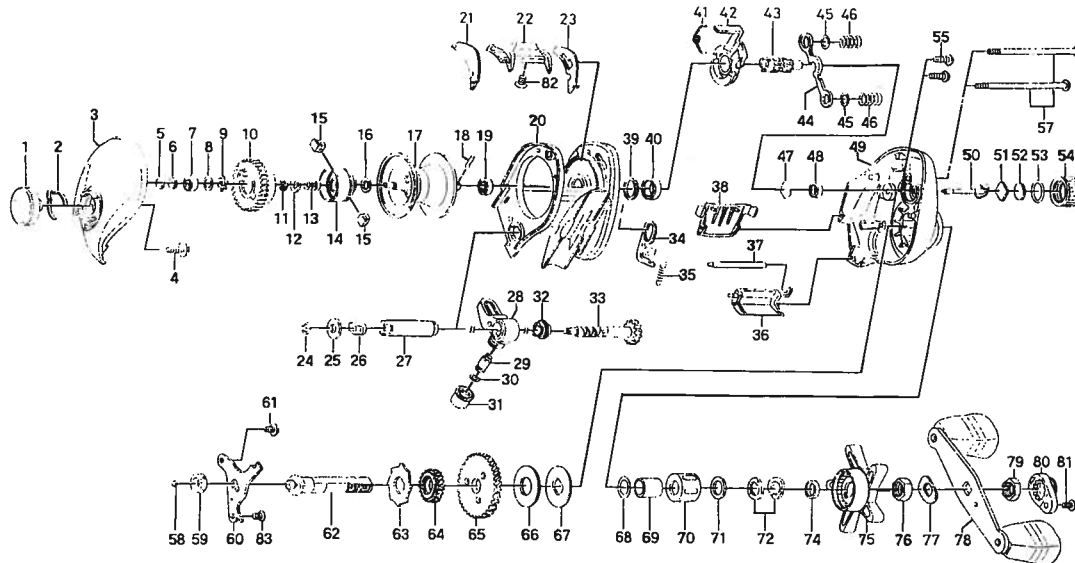

Key No.	Parts No.	Parts Name	Key No.	Parts No.	Parts Name
1	F87-6901	BRAKE ADJ KNOB	46	F86-4101	YOKE SPRING
2	F05-1701	BRAKE CLICK SPRING	47	E21-9701	BEARING RET B
3	F87-6201	L/S PLT	48	F05-5601	BALL BEARING C
4	B84-2102	BRAKE ADJ KNOB SCREW	49	F87-5806	R/S PLT
5	374-9103	SPACER A	50	F80-0501	PINION SHAFT
6	374-9105	SPACER B	51	B17-5402	SPOOL ADJ CAP METAL A
7	E08-8003	BALL BEARING A	52	B17-5503	SPOOL ADJ CAP METAL B
8	375-3003	SPACER C	53	171-5201	O RING
9	F41-2301	BEARING RET A	54	F64-9803	CAST CONTROL CAP
10	F87-6601	MAGNET HOLDER	55	B67-9304	R/S PLT SCREW A
11-19	Z01-1535	SPOOL	57	F93-8201	R/S PLT SCREW B
20	F87-4002	FRAME	58	F64-7201	DRIVE SHAFT WASHER
21	F87-4301	CLUTCH LEVER PLT A	59	B55-0301	BUSHING
22	F87-4501	CLUTCH LEVER	60	F87-4701	DRIVE SHAFT RET
23	F87-4201	CLUTCH LEVER PLT B	61	F50-5701	DRIVE SHAFT RET SCREW A
24	320-5901	WORM SHAFT RET	62	F93-8501	DRIVE SHAFT
25	F65-5501	WORM SHAFT WASHER	63	F76-1701	A/R RATCHET
26	B71-5601	WORM SHAFT HOLDER A	64	F87-5601	WORM DRIVE GEAR
27	F90-5001	LEVEL WIND GUARD	65	F87-5701	DRIVE GEAR
28	F87-5101	LINE GUIDE	66	375-9405	DRAG WASHER A
29	121-4212	LINE GUIDE PAWL	67	E20-0201	KEY WASHER
30	373-1303	LINE GUIDE WASHER	68	E42-5401	DRAG WASHER B
31	F40-2801	PAWL CAP	69	F82-1301	GEAR SHAFT COLLAR
32	F90-5101	WORM SHAFT HOLDER B	70	F58-0601	ROLLER CLUTCH
33	F87-5301	WORM SHAFT	71	373-7810	BEARING WASHER
34	F42-8801	CLUTCH TRIP PLT	72	150-8901	DRAG SPRING WASHER
35	F87-7901	CLUTCH TRIP PLT SPRING	74	B97-4901	HANDLE COLLAR
36	F87-5901	FRONT PLT	75	F40-3202	STAR DRAG
37	F91-5601	STABILIZER BAR	76	B43-3601	DRAG NUT
38	F87-6001	PALMING PLT	77	150-9001	FRICTION WASHER
39	F79-3401	CLUTCH CAM RET	78	F93-8301	HANDLE
40	B86-1702	BALL BEARING B	79	B43-3601	HANDLE NUT
41	F87-4801	CLUTCH CAM SPRING	80	F05-4402	HANDLE NUT PLT
42	F87-4401	CLUTCH CAM	81	351-1803	HANDLE NUT PLT SCREW
43	F87-5001	PINION GEAR	82	F21-1103	CLUTCH LEVER SCREW
44	F87-4901	YOKE	83	F21-1101	DRIVE SHAFT RET SCREW B
45	E03-7706	YOKE WASHER			