



# PARTS LIST FOR MODEL CV2 5000



| KEY NO | DESCRIPTION                       | PART NO      |
|--------|-----------------------------------|--------------|
| 1      | Housing                           | 001 5000CV2  |
| 1A     | Housing Insert                    | 001A5000CV2  |
| 8      | Main Gear Assembly                | 008 5000CV2  |
| 8A     | Main Gear Shim                    | 008A4000CV2  |
| 15     | Handle Assembly                   | 015 5000CV2  |
| 19     | Pinion                            | 019 5000CV2  |
| 20     | Housing Ball Bearing              | 020 5000CV2  |
| 20A    | Housing Cover Ball Bearing        | 020A4000CV2  |
| 20B    | Pinion Ball Bearing               | 020B5000CV2  |
| 21     | Bearing Retainer                  | 021 5000CV2  |
| 21A    | Bearing Retainer Screws (3 req.)  | 021A2000CV2  |
| 22     | Collar                            | 022 5000CV2  |
| 23     | Side Cover Screws (2 req.)        | 023 2000CV2  |
| 24     | Bail Wire                         | 024 5000CV2  |
| 27     | Rotor                             | 027 5000CV2  |
| 27A    | Bail Pivot Cover                  | 027A5000CV2  |
| 27W    | Rotor Washer                      | 027W5000CV2  |
| 28     | Trip Lever                        | 028 5000CV2  |
| 28A    | Trip Lever Link                   | 028A5000CV2  |
| 29     | Spring                            | 029 2000CV2  |
| 31     | Bail Arm Screw                    | 031 2000CV2  |
| 31A    | Bail Wire Screw                   | 031A 2000CV2 |
| 32     | Bail Spring                       | 032 5000CV2  |
| 34     | Bail Arm                          | 034 5000CV2  |
| 34C    | Pivot Arm                         | 034C 5000CV2 |
| 35     | Line Roller                       | 035 4000CV2  |
| 35A    | Line Roller Ball Bearing (2 req.) | 035A2000CV2  |
| 36     | Bail Stud Screw                   | 036 4000CV2  |
| 38     | Rotor Nut                         | 038 5000CV2  |
| 38A    | Rotor Nut Screw                   | 038A2000CV2  |
| 39     | Spool Shaft                       | 039 5000CV2  |
| 40A    | Spool Shaft Washer                | 040A 5000CV2 |
| 40B    | Click Ratchet                     | 040B5000CV2  |
| 43     | Crosswind Block                   | 043 5000CV2  |
| 43A    | Crosswind Block Plate             | 043A5000CV2  |
| 43B    | Crosswind Plate Screw             | 043B 2000CV2 |
| 44     | Crosswind Block Screw             | 044 5000CV2  |
| 45     | Housing Cover                     | 045 5000CV2  |
| 46     | Housing Cover Screws              | 046 5000CV2  |
| 47     | Spool Assembly                    | 047 5000CV2  |
| 51     | Retaining Ring                    | 051 5000CV2  |
| 52     | Drag Knob                         | 052 5000CV2  |
| 56     | Friction Drag Washer (3 Req.)     | 056 5000CV2  |
| 57     | Keyed Washer (2 Req.)             | 057 5000CV2  |
| 58     | Drag Washer Eared                 | 058 5000CV2  |
| 60     | Thrust Washer                     | 060 5000CV2  |
| 98     | Clutch Bearing & Sleeve           | 098 5000CV2  |
| 132    | Line Roller Bushing               | 132 4000CV2  |
| 132A   | Line Roller Washer                | 132A2000CV2  |
| 226    | Rear Cap                          | 226 5000CV2  |
| 226A   | Rear Cap Screw                    | 226A 5000CV2 |
| 227    | Bail Cam Cover                    | 227 5000CV2  |
| 231    | Crosswind Gear                    | 231 5000CV2  |
| 231A   | Crosswind Gear Ball Bearing       | 231A5000CV2  |
| 233    | Bearing Cover                     | 233 5000CV2  |