



PARTS LIST FOR MODEL CV8000

KEY

KEY NO.	Description
1	Housing
8	Main Gear Assembly
8A	Main Gear Shim
15	Handle Assembly
15A	Handle Retaining Bushing
19	Pinion Gear
20	Main Gear Ball Bearing (2 req.)
20B	Pinion Ball Bearing (2 req.)
21	Collar
21A	Bearing Mounting Screw (3 req.)
22	Cover Screw (2 req.)
24	Bail Wire
27	Rotor Cup
27A	Bail Pivot Cover
27E	Balance Weight
27F	Balance Weight Screw
28	Trip Lever
31	Arm Screw (2 req.)
31A	Bail Wire Screw
32	Bail Spring
34	Bail Arm
34C	Pivot Arm
35	Line Roller
35A	Line Roller Ball Bearing (2 req.)
36	Bail Stud Screw
37	Rotor Washer
38	Rotor Nut
38A	Rotor Nut Screw
39	Spool Shaft
40B	Click Ratchet
43	Crosswind Block
43A	Crosswind Block Plate
43B	Crosswind Block Plate Screw
44	Crosswind Block Screw
45	Housing Cover
46	Housing Cover Screw (4 req.)
47	Spool Assembly
47A	Spool Ball Bearing (2 req.)
49	Spool Click Spring
51	Retaining Ring
52	Drag Knob
56	Friction Drag Washer (3 req.)
57	Keyed Washer (2 req.)
58	Drag Washer Earred
60	Thrust Washer
60A	"0" Ring
60B	Spool Shaft Bushing
98	Clutch Retainer
98A	Clutch Shim
132	Roller Washer
132A	Roller Washer (Plastic) (2req.)
226	Rear Cap
226A	Rear Cap Screw
227	Cam Cover
231	Crosswind Gear
231A	Crosswind Gear Ball Bearing
231B	Ball Bearing Screw
233	Bearing Cover
233A	Bearing Cover Washer
233A	Bearing Cover Washer

PART NO.

001-NT-8000CV
008 8000CV
008A8000CV
015N 8000CV
015A8000CV
019 8000CV
020 8000CV
020 8000CV
021 8000CV
021A8000CV
022 5000CV
024 8000CV
027 8000CV
027A8000CV
027E8000CV
027F2000CV
028 8000CV
031 8000CV
031A8000CV
032 8000CV
034 8000CV
034C8000CV
035 8000CV
231A2000CV
231A2000CV
036 2000CV
037 8000CV
038 8000CV
038A2000CV
039 8000CV
040B8000CV
043 8000CV
043A8000CV
022 5000CV
044 8000CV
045-NT-8000CV
046 8000CV
047 8000CV
020 5000CV
049 8000CV
051 8000CV
052 8000CV
056 8000CV
057 8000CV
058 8000CV
060 8000CV
060A8000CV
060B8000CV
098 8000CV
098A8000CV
132 8000CV
132A8000CV
226 8000CV
226A8000CV
227 8000CV
231 8000CV
020 5000CV
231B5000CV
233N 8000CV
233A 8000CV

