



PARTS LIST FOR MODEL SV5000

KEY

NO. DESCRIPTION

PART

NO.

1	HOUSING	001 5000SV
8	Main Gear Assembly	008 5000SV
8A	Main Gear Shim	008A 5000CV
15	Handle Assembly	015 5000SV
19	Pinion Gear	019 5000SV
20	Ball Bearing(3req.)	020 5000CV
21	Collar	021 5000SV
21A	Bearing Mounting Screw(3 req.)	021A2000SV
21B	Ball Bearing Fixed Washer	021B5000SV
22	Bail Arm Cover Screw	022 2000SV
22A	Side Cover Screw	022A2000SV
22B	Side Cover Screw	022B2000SV
24	Bail Wire	024 5000SV
27	Rotor Cup	027 5000SV
27A	Bail Pivot Cover	027A5000SV
27E	Balance Weight	027E5000SV
28	Trip Lever	028 5000SV
29	Spring	029 4000SV
31	Bail Arm Screw	031 2000SV
31A	Bail Wire Screw	031A 2000SV
32	Bail Spring	032 5000SV
34	Bail Arm	034 5000SV
34B	Pivot Guide	034B5000SV
34C	Pivot Arm	034C5000SV
35	Line Roller	035 4000SV
35A	Line Roller Ball Bearing	035A2000CV
35B	Line Roller Bushing	035B2000SV
36	Bail Stud Screw	036 4000SV
38	Rotor Nut	038 5000CV
38A	Rotor Nut Screw	038A2000CV
39	Spool Shaft	039 5000SV
40B	Click Ratchet	040B5000CV
43	Crosswind Block	043 5000SV
44	Crosswind Block Screw	044 2000SV
45	Housing Cover	045 5000SV
46	Housing Cover Screw(3 req.)	046 2000SV
47	Spool Assembly	047 5000SV
49	Spool Click Spring	049 2000CV
51	Retaining Ring	051 2000CV
52	Drag Knob	052 5000SV
56	Friction Drag Washer(3req.)	056 2000CV
57	Keyed Washer(2 req.)	057 2000CV
58	Drag Washer Earred	058 2000CV
60	Thrust Washer	060 5000CV
98	Clutch Retainer	098 5000SV
132	Roller Washer	132 2000CV
226	Rear Cap	226 5000SV
226A	Rear Cap Screw	226A2000SV
227	Cam Cover	227 5000SV
231	Crosswind Gear	2315000SV
231B	Crosswind Gear Screw	231B5000SV
233	Bearing Cover	233 2000SV
233A	Bearing Cover Washer	233A2000SV

