




PARTS LIST FOR MODELS TRQ30B & TRQ30G & TRQ30BEU

REEL ASM NOS. 1206074 & 1236679 & 1207744

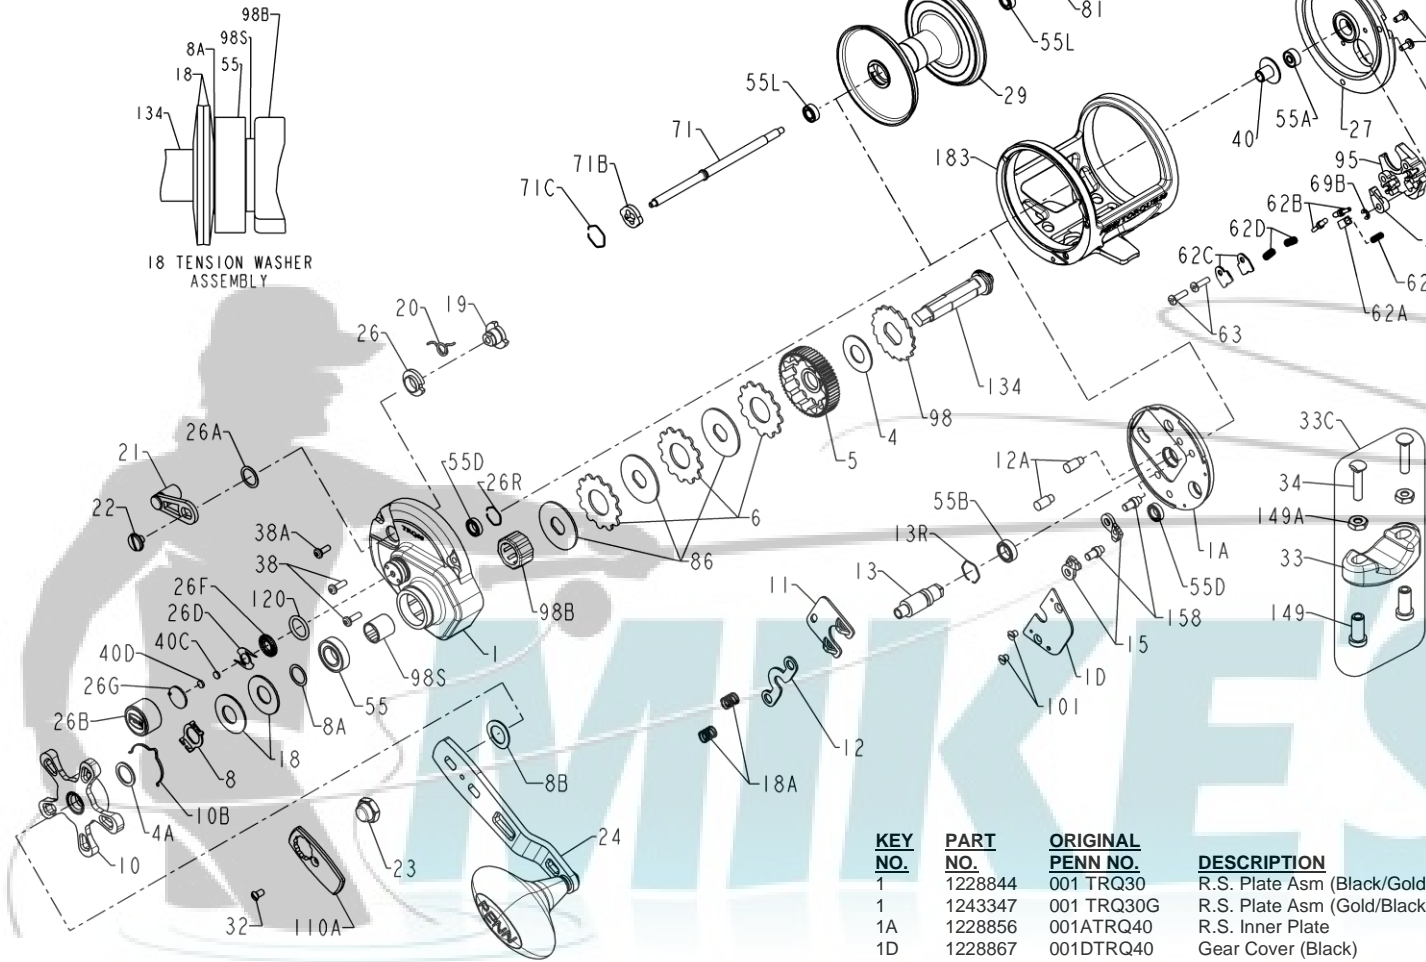

18 TENSION WASHER ASSEMBLY

KEY NO.	PART NO.	ORIGINAL PENN NO.	DESCRIPTION
1	1228844	001 TRQ30	R.S. Plate Asm (Black/Gold)
1	1243347	001 TRQ30G	R.S. Plate Asm (Gold/Black)
1A	1228856	001ATRQ40	R.S. Inner Plate
1D	1228867	001DTRQ40	Gear Cover (Black)
1D	1243354	001DTRQ40S	Gear Cover (Silver)
4	1180755	004 060	Graphite Washer
4A	1180770	004 300T	Graphite Washer
5	1229005	005 TRQ15	Main Gear Asm
6	1237037	006 TRQ40	Drag Washer, Tab (3 req)
8	1229041	008 TRQ40	Detent Spring Retainer
8A	1229050	008ATS7-8	Shim
8B	1181056	008 060	Tension Washer
10	1229306	010 TRQ40	Drag Star Asm (Black)
10	1243355	010 TRQ40G	Drag Star Asm (Gold/Silver)
10B	1181218	010B2.5FR	Detent Spring
11	1229316	011 TRQ40	Jack
12	1181271	012 555	Yoke
12A	1229319	012ATRQ40	Yoke Pin (2 req)
13	1229339	013 TRQ15	Pinion
13R	1229364	013RTRQ40	Retaining Ring
15	1229374	015 TRQ40	Dog Asm (2 req)
18	1181623	018 505	Tension Washer (2 req)
18A	1181624	018 525	Yoke Spring (2 req)
19	1229430	019 TRQ40	Eccentric

KEY NO.	PART NO.	ORIGINAL PENN NO.	DESCRIPTION
20	1181785	020 525	Eccentric Spring
21	1229450	021 TRQ40	Lever Asm (Black/Gold)
21	1243362	021 TRQ40G	Lever Asm (Gold/Silver)
22	1229457	022 TRQ40	8-32 Sems Screw (Black)
22	1181908	022 060CH	8-32 Sems Screw (Silver)
23	1229462	023 TRQ40	Handle Nut (Black)
23	1243364	023 TRQ40S	Handle Nut (Silver)
24	1229501	024 TRQ40	Handle Asm (Black/Gold)
24	1241383	024 TRQ40G	Handle Asm (Gold/Silver)
26	1229579	026 TRQ25	Eccentric Bushing
26A	1229583	026ATRQ40	Lever Washer
26B	1214706	026B525MAG2	Spool Tension Cap
26D	1125769	026D525MAG2	Click Spring
26F	1125768	026F525MAG2	Click Plate A
26G	1125772	026G525MAG2	Click Plate B
26R	1214654	026R525MAG2	Retaining Ring
27	1229716	027 TRQ30	Plate, L.S. (Black/Gold)
27	1243380	027 TRQ30G	Plate, L.S. (Gold/Black)
29	1229807	029 TRQ30	Spool (Black/Gold)
29	1243388	029 TRQ30G	Spool (Gold/Silver)
32	1214707	032 525MAG2	5-40 Screw (Black)
32	1184436	110 050	5-40 Screw (Silver)
33	1182754	033 113	Rod Clamp
33C	1229936	033CTRQ40	Rod Clamp Kit
34	1182788	034 045	10-24 Screw (2 req)
35	1229949	035 TRQ40	Click Tongue
36	1229953	036 TRQ40	Click Button (Black)
36	1243392	036 TRQ40S	Click Button (Silver)
38	1229971	038 TRQ40	Screw (Black) (2 req)
38	1243393	038 TRQ40S	Screw (Silver) (2 req)
38A	1229973	038ATRQ40	Screw (Black)
38A	1243394	038ATRQ40S	Screw (Silver)
39	1229994	039 TRQ40	Screw (Black) (3 req)
39	1243395	039 TRQ40S	Screw (Silver) (3 req)
40	1230004	040 TRQ40	Bushing, L.S. Spool
40C	1208115	040C525MAG2	Washer, Metal Thrust
40D	1125771	040D525MAG2	Washer, Rubber Thrust
55	1183873	055 012H	Ball Bearing
55A	1183880	055 113H	Ball Bearing
55B	1214665	055 525MAG2	Ball Bearing (12X8X3.5)
55D	1214666	055A525MAG2	Ball Bearing (2 req)
55L	1192031	055L965	Ball Bearing (2 req)
62	1236596	062 TRQ40	Click Locator Spring
62A	1230189	062ATRQ40	Click Button Locator
62B	1184036	062B310	Click Pin (2 req)
62C	1184041	062C321LH	Spring Cover (2 req)
62D	1184033	062A310	Click Spring (2 req)
63	1230192	063 TRQ40	Screw, Pan Hd (2 req)
69B	1184125	069B050	Retaining Ring
71	1230216	071 TRQ30	Spool Spindle
71B	1230226	071BTRQ40	Spool Driver
71C	1230227	071CTRQ40	Retaining Ring
81	1230303	081 TRQ40	Click Ratchet
86	1184251	086 049L	Drag Washer, Keyed (3 req)
95	1230373	095 TRQ40	Click Housing
98	1230412	098 TRQ40	Anti-Reverse Ratchet
98B	1200401	098B750M	Anti-Reverse Bearing
98S	1230425	098STRQ40	Bearing Sleeve
101	1184404	101 050S	5-40 Screw (2 req)
110A	1230439	110ATRQ40	Handle Nut Lock (Black/Gold)
110A	1242335	110ATRQ40G	Handle Nut Lock (Gold/Silver)
120	1184522	120 113H	O-Ring
134	1230592	134 TRQ40	Gear Stud
149	1184702	149 045	Rod Clamp Nut (2 req)
149A	1184706	149 200	Hex Nut (2 req)
158	1230647	158 TRQ40	Dog Pin (2 req)
183	1230754	183 TRQ30	Frame Asm (Black/Gold)
183	1243411	183 TRQ30G	Frame Asm (Gold/Black)
183	1243409	183 TRQ30BEU	Frame Asm (Blk/Gld Euro)