


# QUANTUM<sup>®</sup>

## AN10F

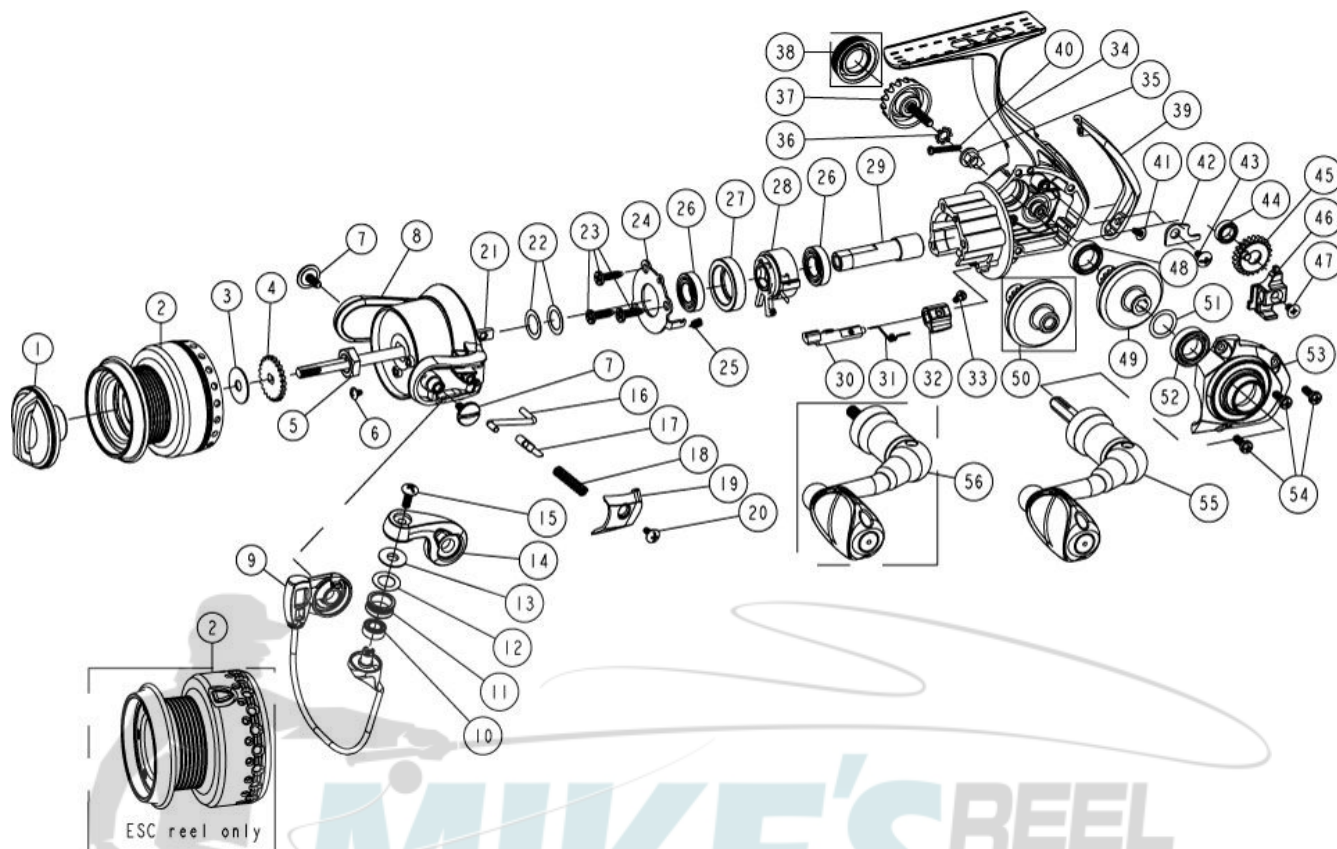

**Quantum AN10F Spinning Reel Part List**

Key #	Description	Part No.	Key #	Description	Part No.
1	Drag Knob Assembly	AAA332-02	28	Clutch Unit	AAA363-01
2	Spool Aassembly	AAA320-02	29	Pinion	AAA011-01
3	Spool Adjust Washer	BAA030-01	30	Stopper Cam	BAA090-01
4	Click Gear	BAA037-01	31	Stopper Cam Spring	AAA089-01
5	Rotor Nut	AAA006-01	32	Stopper Lever	BAA059-01RW
6	Rotor Nut Lock Screw	BAA094-01	33	Stopper Lever Screw	BAA135-01
7	Arm Lever Screw	BAA042-01	34	Body Assembly	AAA301-02
8	Rotor	AAA009-02	35	Handle Screw Holder	BAA138-01
9	Bail Assembly	AAA346-01	36	Toothed lock washer	BAA075-01
10	Line Roller Ball Bearing	GH202-01	37	Handle Screw Assembly	BAA373-01
11	Line Roller	BAA004-01	39	Body Rear Cap	AAA140-01
12	Line Roller Washer	BAA102-01	40	Rear Cap Screw (Front)	CAA168-01
13	Line Roller Collar	CAA102-01	41	Tapping Screw	CAA094-01
14	Arm Lever	AAA007-02	42	O/S Slider Retainer	AAA078-01
15	Line Roller Screw	BAA108-01	43	Screw	BAA077-01
16	Kick Lever	AAA019-01	44	O/S Gear Ball Bearing	CT157-02
17	Acuator	AAA031-01	45	O/S Gear	AAA053-01
18	Actuator Spring	AAA022-01	46	O/S Slider	AAA025-01
19	Arm Lever Cover	AAA087-01	47	Main Shaft Screw	BAA100-01
20	Arm Lever Cover Screw	CW125-01	48	Body Ball Bearing	BAA157-01
21	Main Shaft	AAA015-01	50	Drive Gear	AAA014-01
22	Rotor Adjust Washer	AAA110-01	51	Drive Gear Adjust Wahser	BAA105-01
23	Tapping Screw (Flat head)	CAA057-01	52	Side Cover Ball Bearing	CAA157-01
24	Clutch Stack Retainer	AAA040-01	53	Side Cover Assembly	AAA323-02
25	Clutch Spring	AAA216-01	54	Side Cover Screw	AAA057-01
26	Clutch Retainer Ball Bearing	AAA028-01	55	Handle Assembly	AAA418-02
27	Clutch Bearing Adapter	AAA190-01			