


# QUANTUM<sup>®</sup>

## AN20F

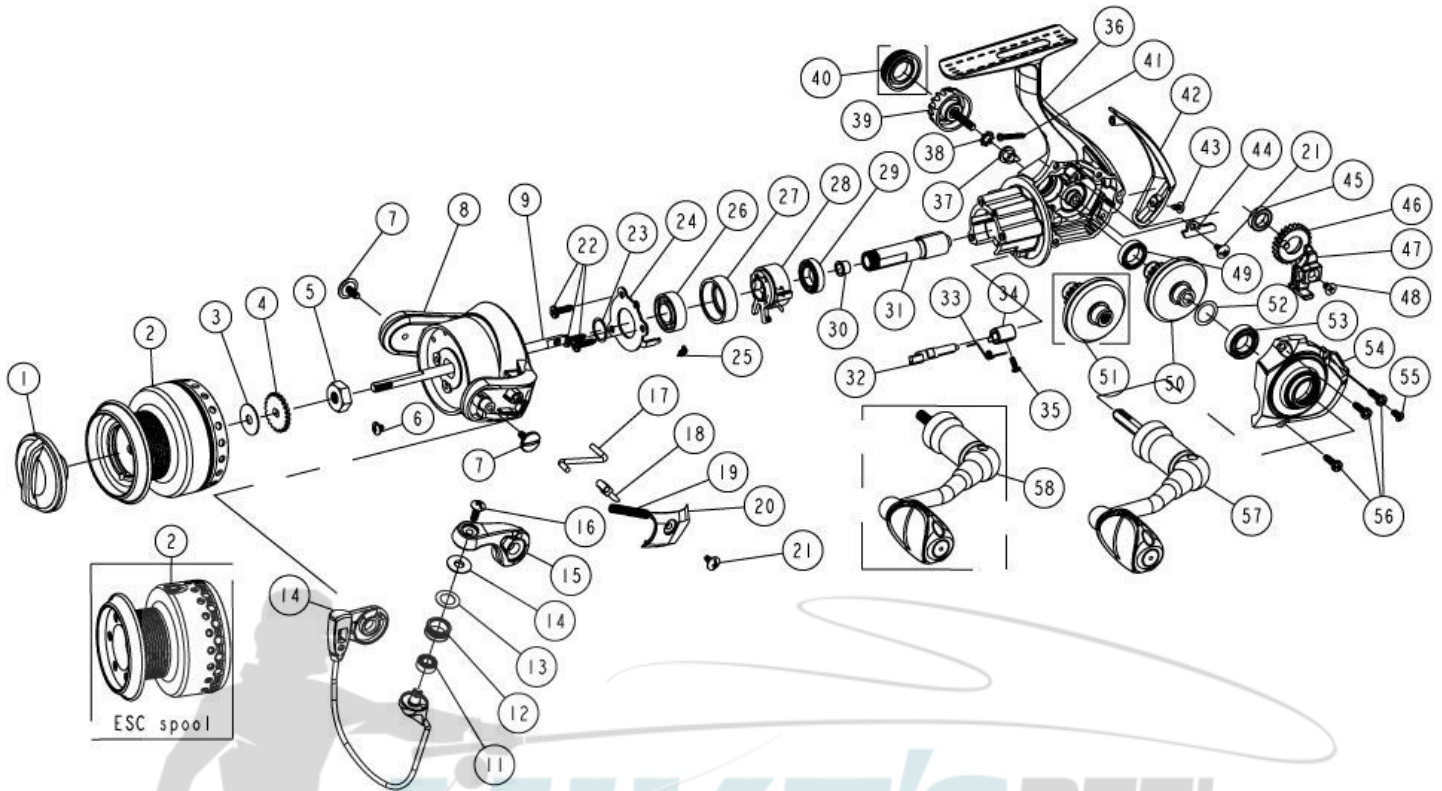

**Quantum AN20F Spinning Reel Part List**

Key #	Description	Part No.	Key #	Description	Part No.
1	Drag Knob Assembly	BAA332-02	30	Pinion Bushing	BAA213-01
2	Spool Assembly	BAA320-02	31	Pinion	BAA011-01
3	Spool Adjust Washer	BAA030-01	32	Stopper Cam	BAA090-01
4	Click Gear	BAA037-01	33	Stopper Cam Spring	BAA089-01
5	Rotor Nut	BAA006-01	34	Stopper Lever	BAA059-01RW
6	Rotor Nut Lock Screw	BAA094-01	35	Stopper Lever Screw	BAA135-01
7	Arm Lever Screw	BAA042-01	36	Body Assembly	BAA301-02
8	Rotor	BAA009-02	37	Handle Screw Holder	BAA138-01
9	Main Shaft	BAA015-01	38	Toothed lock washer	BAA075-01
10	Bail Assembly	BAA346-01	39	Handle Screw Assembly	BAA373-01
11	Line Roller Ball Bearing	GH202-01	40	Handle Screw Assembly	N/A
12	Line Roller	BAA004-01	41	Rear Cap Screw (Front)	CAA168-01
13	Line Roller Washer	BAA102-01	42	Body Rear Cap	BAA140-01
14	Line Roller Collar	CAA102-01	43	Tapping Screw	CAA094-01
15	Arm Lever	BAA007-02	44	O/S Slider Retainer	BAA078-01
16	Line Roller Screw	BAA108-01	45	O/S Gear Ball Bearing	BAA158-01
17	Kick Lever	BAA019-01	46	O/S Gear	BAA053-01
18	Acuator	BAA031-01	47	O/S Slider	BAA025-01
19	Actuator Spring	BAA022-01	48	Main Shaft Screw	BAA100-01
20	Arm Lever Cover	BAA087-01	49	Body Ball Bearing	BAA157-01
21	Arm Lever Cover Screw	BAA077-01	50	Drive Gear	N/A
22	Tapping Screw (Flat head)	CAA057-01	51	Drive Gear	CAA012-01
23	Rotor Adjust Washer	BAA110-01	52	Drive Gear Adjust Wahser	BAA105-01
24	Clutch Stack Retainer	CAA040-01	53	Side Cover Ball Bearing	CAA157-01
25	Clutch Spring	BAA216-01	54	Side Cover Assembly	BAA323-02
26	Clutch Retainer Ball Bearing	CAA028-01	55	Side Cover Screw (Flat head)	BAA057-01
27	Clutch Bearing Adapter	BAA190-01	56	Side Cover Screw	BAA085-01
28	Clutch Unit	BAA363-01	57	Handle Assembly	BAA418-04
29	Pinion Ball Bearing	BAA028-01	58	Handle Assembly	N/A