


QUANTUM

Aruba ALD30W

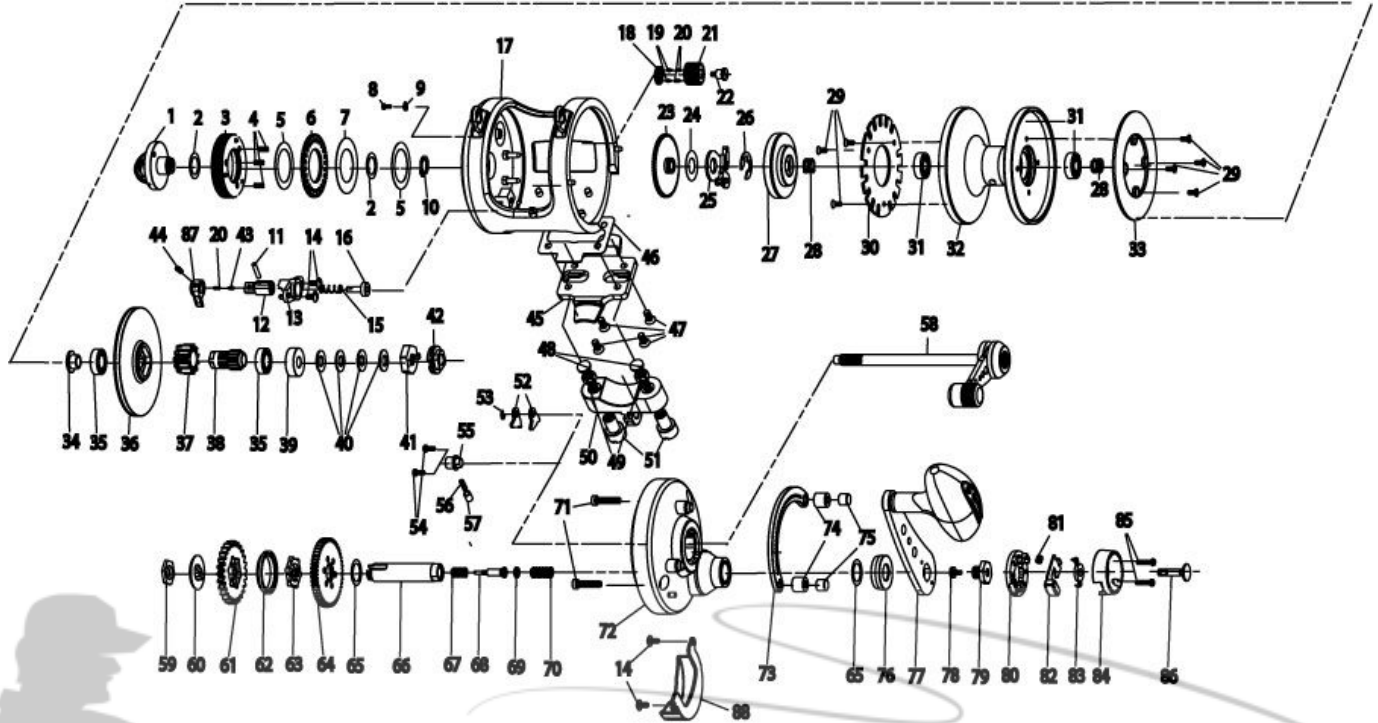

Quantum Aruba

		Part No.		Part No.	
Key No.	Description	ALD 30W	Key No.	Description	ALD 30W
1	Clamp Nut Assembly	JF319-01	45	Reel Foot	KF106-01
2	Clamp Nut Washer	KF121-01	46	Reel Foot Gasket	JF155-01
3	Pre Set Knob Assembly	KF329-01	47	Reel Foot Screw	JF057-01
4	Pre Set Knob Spring	JF096-01	48	Rod Clamp Bolt	JF125-01
5	Pre Set Gear Washer - B	KF038-01	49	Rod Clamp Bolt Holder Nut	JF003-01
6	Pre Set Gear - A	JF029-01	50	Rod Clamp	JF154-01
7	Pre Set Gear Washer - A	JF035-01	51	Rod Clamp Nut	KF003-01
8	Pre Set Knob Locking Screw	KF050-01	52	Anti Reverse Pawl	JF063-01
9	Pre Set Knob Locking Plate	KF010-01	53	E-Clip	NX092-01
10	Clamp Nut Retainer	JF075-01	54	Anti Reverse Spring Holder Screw	BV123-01A
11	Bait Click Acuator Pin	JF102-01	55	Anti Reverse Spring Holder	KF129-01
12	Bait Click Acuator	JF157-01	56	Anti Reverse Spring	JF070-01
13	Bait Click Cam	JF156-01	57	Anti Reverse Spring Post	JF103-01
14	Bait Click Cam Screw	CW107-02	58	Spool Shaft Assembly	AF315-01
15	Bait Click Spring	JF110-01	59	Crank Shaft Nut	KF019-01
16	Bait Click Pawl	JF114-01	60	Spacer - A	JF160-01
17	Frame Assembly	AF301-01	61	Low Speed Drive Gear	JF012-01
18	Pre Set Idle Gear Click Plate	KF113-01	62	Spacer - B	KF160-01
19	Pre Set Idle Gear Click Pin	JF108-01	63	Gear Shifting Plate	JF036-01
20	Pre Set Idle Gear Click Spring	KF070-01	64	High Speed Drive Gear	KF012-01
21	Pre Set Idle Gear	JF112-01	65	Washer	JF032-01
22	Pre Set Idle Gear Screw	KF057-01	66	Crank Shaft	JF008-01
23	Pre Set Gear - B	JF085-01	67	Gear Shifting Plate Spring	KF096-01
24	Drag Stopper Plate Washer	KF032-01	68	Shifting Pin	KF093-01
25	Drag Stopper Plate Assembly	JF310-01	69	Bushing	JF132-01
26	E-Clip	KF020-01	70	Gear Shifting Spring	KF165-01
27	Left Drag Plate Assembly	KF348-01	71	Quadrant Anchor Screw	KF053-01
28	Pressure Release Spring	KF040-01	72	Gear Side Cover Assembly	JF324-01
29	Screw	TW107-02	73	Quadrant	JF152-01
30	Bait Click Ratchet	JF113-01	74	Quadrant Spacer	KF094-01
31	Ball Bearing	KF017-01	75	Quadrant Anchor	KF088-01
32	Spool Assembly	AF321-01	76	Handle Collar	JF081-01
33	Drag Washer	JF045-01	77	Handle Assembly	KF318-01
34	Bushing	JF067-01	78	Button Screw	JF053-01
35	Ball Bearing	CP058-01	79	Handle Nut	KF125-01
36	Right Drag Plate Assembly	JF348-01	80	Handle Nut Retainer	JF034-01
37	Low Speed Pinion Gear	JF011-01	81	Shifting Button Spring	JF071-01
38	High Speed Pinion Gear	KF011-01	82	High Speed Shifting Button Assembly	KF362-01
39	Bearing Pocket	KF067-01	83	Button Cover	JF131-01
40	Drag Spring Washer	JF046-01	84	Handle Nut Cap	JF145-01
41	Drag Cam - B	JF153-01	85	Handle Nut Cap Screw	KF123-01
42	Drag Cam - A	JF028-01	86	Low Speed Shifting Button	JF062-01
43	Bait Click Lever Spring Pin	KF108-01	87	Bait Click Lever	JF109-01
44	Bait Click Lever Screw	JF107-01	88	Gear Cover	N/A