


# QUANTUM

## BR20F

For parts and service  
 call toll free: 1-888-404-1119  
 www.mikesreelrepair.com

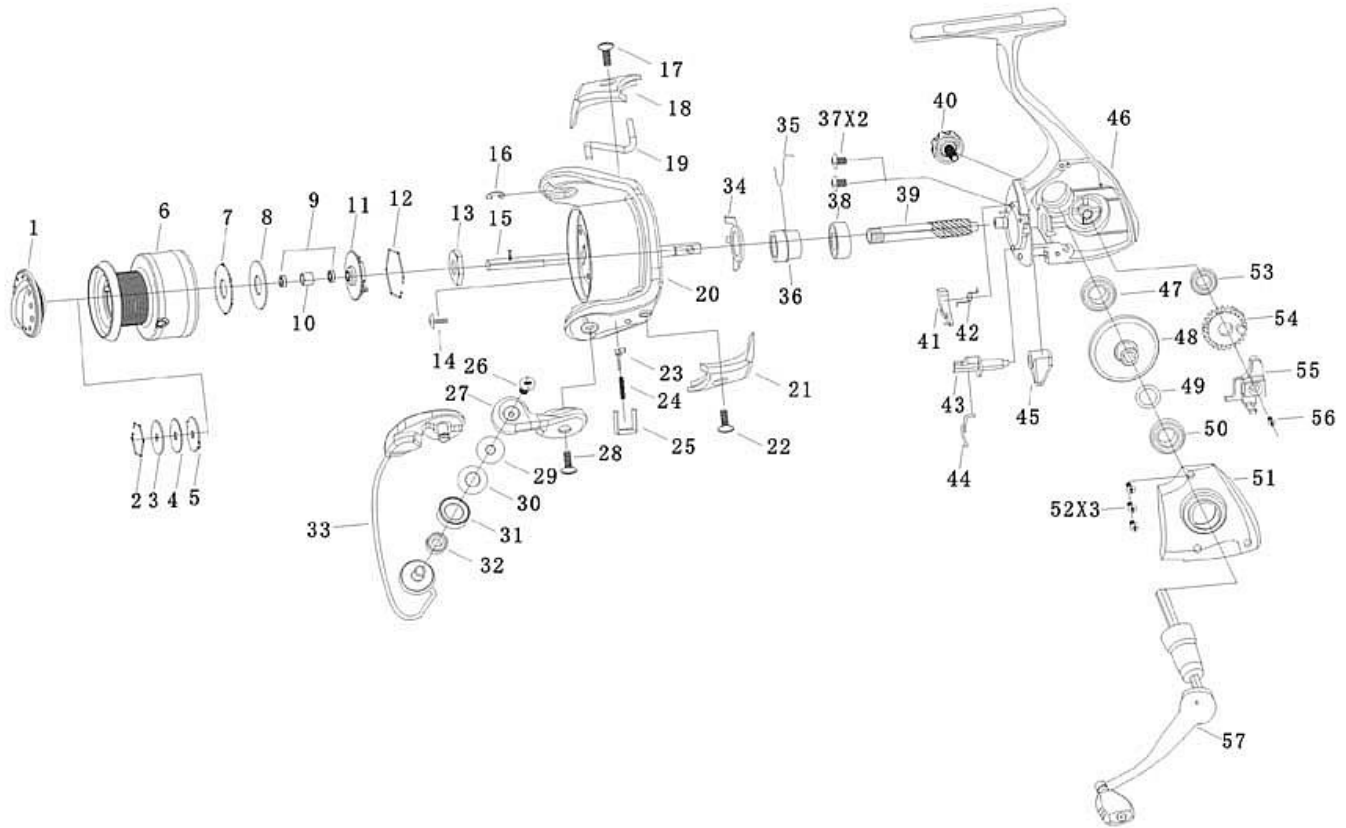

Quantum BR20F Part List

Key #	Description	IBR20F	Key #	Description	BR20F
1	DRAG KNOB ASSEMBLY	AS332-01	30	LINE ROLLER WASHER	DH102-01
2	DRAG KNOB RETAINER - TOP	RQ038-02	31	LINE ROLLER	CH004-02
3	DRAG WASHER "D"	ES080-01	32	LINE ROLLER BEARING	GH202-02
4	DRAG WASHER "B"	RQ033-01	33	BAIL ASSEMBLY	AS347-01
5	DRAG WASHER "A"	RQ081-01	34	A/R PAWL ACTUATOR	AS218-01
6	SPOOL ASSEMBLY	AS321-01	35	SILENT SPRING	AS086-01
7	DRAG WASHER "E"		36	SLEEVE	AS110-01
8	SPOOL WASHER	AT309-01	37	SCREW - BEARING RETAINER	GS077-01
9	SPOOL BUSHING	AT160-01	38	PINION BALL BEARING	BH028-01
10	SPOOL SPACER	AT105-01	39	PINION GEAR	RQ011-01
11	DRAG CLICK ASSEMBLY	AT459-01	40	HANDLE SCREW CAP	ES073-01
12	SPOOL RETAINER - BOTTOM	CH038-01	41	ANTI-REVERSE PAWL	AS063-01
13	ROTOR NUT	SH006-01	42	ANTI-REVERSE PAWL SPRING	AS061-01
14	ROTOR NUT LOCK SCREW	RQ094-01	43	ANTI-REVERSE CAM	GS090-01
15	MAIN SHAFT ASSEMBLY	AS315-01	44	ANTI-REVERSE CAM SPRING	GS089-01
16	E-CLIP - BAIL ASSEMBLY	GH034-01	45	A/R LEVER	RQ059-01
17	A/L/BAIL HOLDER COVER SCREW	GU077-02	46	BODY ASSEMBLY	AS301-01
18	BAIL HOLDER COVER	AS024-01	47	BODY BALL BEARING	CH028-02
19	KICK ASSEMBLY	AS019-01	48	DRIVE GEAR	RQ012-01
20	ROTOR ASSEMBLY	AS309-01	49	DRIVE GEAR ADJUST WASHER	GU105-13
21	BAIL ARM SSEMBLY	AS087-01	50	BODY BALL BEARING	CH028-02
22	A/L/BAIL HOLDER COVER SCREW	GU077-02	51	BODY COVER	AS023-01
23	PIN	GS031-01	52	BODY COVER SCREW	AT057-01
24	SPRING	GS022-01	53	O/S GEAR BUSHING	RQ158-01
25	PIN HOLDER	GS020-01	54	O/S GEAR BUSHING	RQ053-01
26	SCREW - LINE SLIDER	AQ108-01	55	O/S SLIDER	RQ025-01
27	ARM LEVER	AS007-01	56	MAIN SHAFT SCREW	RQ100-01
28	ARM LEVER SCREW	GS044-01	57	HANDLE ASSEMBLY	AS318-01
29	LINE ROLLER COLLAR	CH102-01			