


# Catalyst PTi-A Parts Diagram - CT10PTi-A / CT20PTi-A

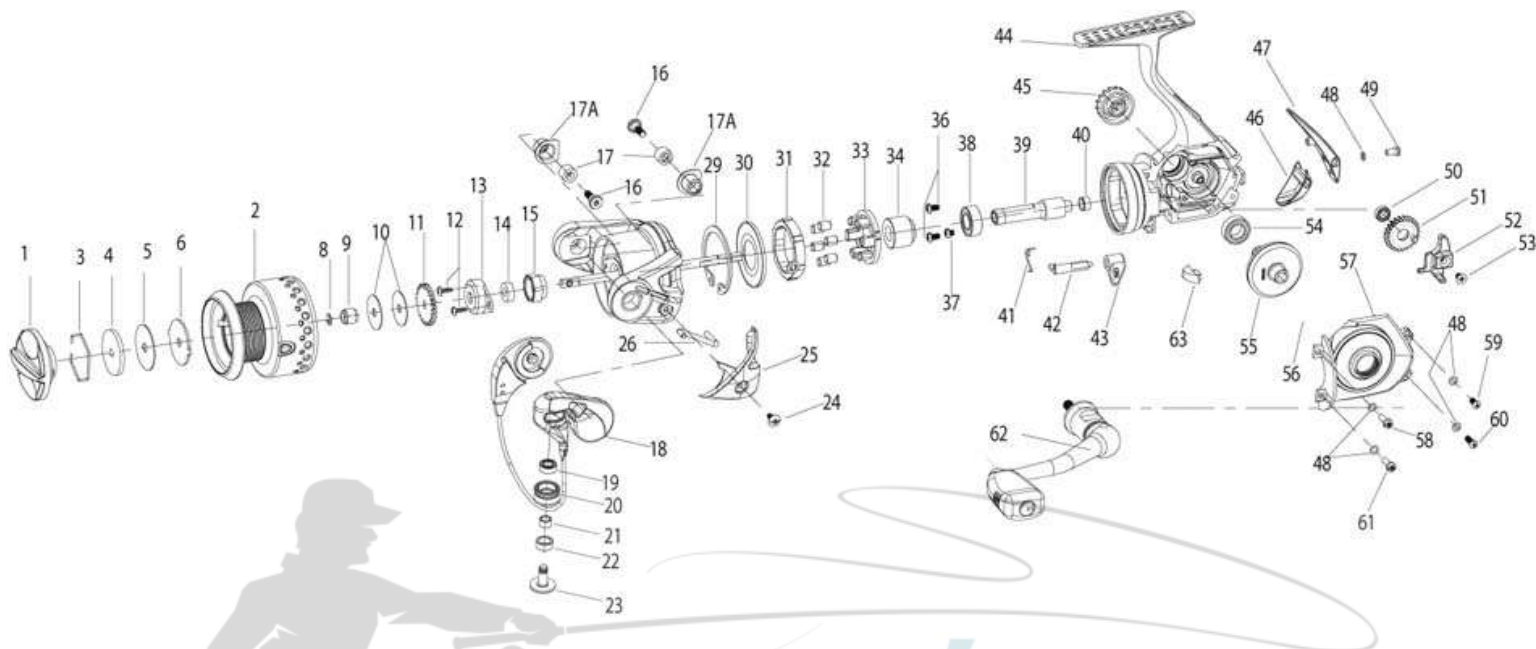

KEY #	DESCRIPTION	Catalyst 10	Catalyst 20
1	Drag Knob Assembly	RK332-03	SK332-03
2	Spool	RK021-01	SK021-01
3	Drag Retainer	RQ038-01	RQ038-01
4	Drag Washer "D"	SQ080-01	SQ080-01
5	Drag Washer "B"	RQ033-01	RQ033-01
6	Drag Washer "A"	RQ081-01	RQ081-01
7	Drag Washer "C"	N/A	N/A
8	Retainer Clip	TK034-01	TK034-01
9	Spool Sleeve	RK121-01	SK121-01
9A	Spool Bearing	N/A	N/A
10	Spool Adjust Washer	RK030-01	RK030-01
11	Click Gear	RQ037-01	RQ037-01
12	Rotor Nut Lock Screw	RQ094-01	RQ094-01
13	Rotor Nut Cover	RK214-01	SK214-01
14	Main Shaft Bushing	SK213-01	SK213-01
15	Rotor Nut	SK006-01	SK006-01
16	Bail Pivot Screw	TK111-01	TK111-01
17	Bail Pivot Bushing	RK109-01	RK109-01
17A	Bail Pivot Insert	TK112-01	TK112-01
18	Bail Assembly	RK347-01	SK347-01
19	Line Roller Bearing	GH202-01	GH202-01
20	Line Roller	RK004-01	TK004-01
21	Line Roller Sleeve	TK114-01	TK114-01
22	Line Roller Bushing	TK104-01	TK104-01
23	Line Roller Screw	RK108-01	TK108-01
24	Arm Lever Cover Screw	GU077-01	GU077-01
25	Arm Lever Cover	RK087-02	SK087-02
26	Kick Lever	RK019-01	SK019-01
27	Rotor Sub-Assembly	RK209-02	SK209-02
28	Main Shaft	RQ015-01	RQ015-01
29	Clutch Retaining Ring	RK060-01	TK060-01
30	Clutch Seal Plate	RK166-01	TK166-01
31	Clutch Lock Ring	RK063-01	TK063-01

KEY #	DESCRIPTION	Catalyst 10	Catalyst 20
32	Clutch Roller	RK165-01	TK165-01
33	Clutch Roller Retainer	RK040-01	TK040-01
34	Clutch Sleeve	RK139-01	SK139-01
35	Pinion Washer	AT110-01	AT110-01
36	Pinion Bearing Screw "A"	TK057-21	TK057-01
37	Pinion Bearing Screw "B"	N/A	TK057-11
38	Pinion Ball Bearing	CH028-01	BH028-01
39	Pinion Gear	PQ011-01	RQ011-01
40	Pinion Bushing	PQ141-01	RQ141-01
41	Stopper Cam Spring	RK089-01	TK089-01
42	Stopper Cam	RK090-01	TK090-01
43	Stopper Lever	RQ059-01	RQ059-01
44	Body Sub-Assembly	RK201-03	SK201-03
45	Handle Cap	AT073-76	AT073-76
46	Body Rear Cover - Top	RK140-02	SK140-02
47	Body Rear Cover - Bottom	RK140-52	SK140-52
48	Body Cover Screw Washer	RQ142-01	RQ142-01
49	Body Rear Cover Screw	RQ057-11	RQ057-11
50	O/S Gear Ball Bearing	EH158-01	EH158-01
51	O/S Gear	PQ053-51	RQ053-51
52	Oscillation Slider	RQ025-01	RQ025-01
53	Main Shaft Screw	RQ100-01	RQ100-01
54	Body Ball Bearing	CH027-01	CH028-01
55	Drive Gear Assembly	PT312-01	QT012-01
56	Body Cover Ball Bearing	CH028-01	CH028-01
57	Body Cover Assembly	RK123-03	SK123-03
58	Body Cover Screw "A"	RQ057-04	RQ057-04
59	Body Cover Screw "B"	N/A	SK057-11
60	Body Cover Screw "C"	SK057-11	SK057-01
61	Body Cover Screw "D"	RQ057-11	RQ057-04
62	Handle Assembly	RK318-51	SK318-51
63	Trip Ramp	RK119-01	SK119-01