


Catalyst PTi-A Parts Diagram - CT30PTi-A / CT40PTi-A

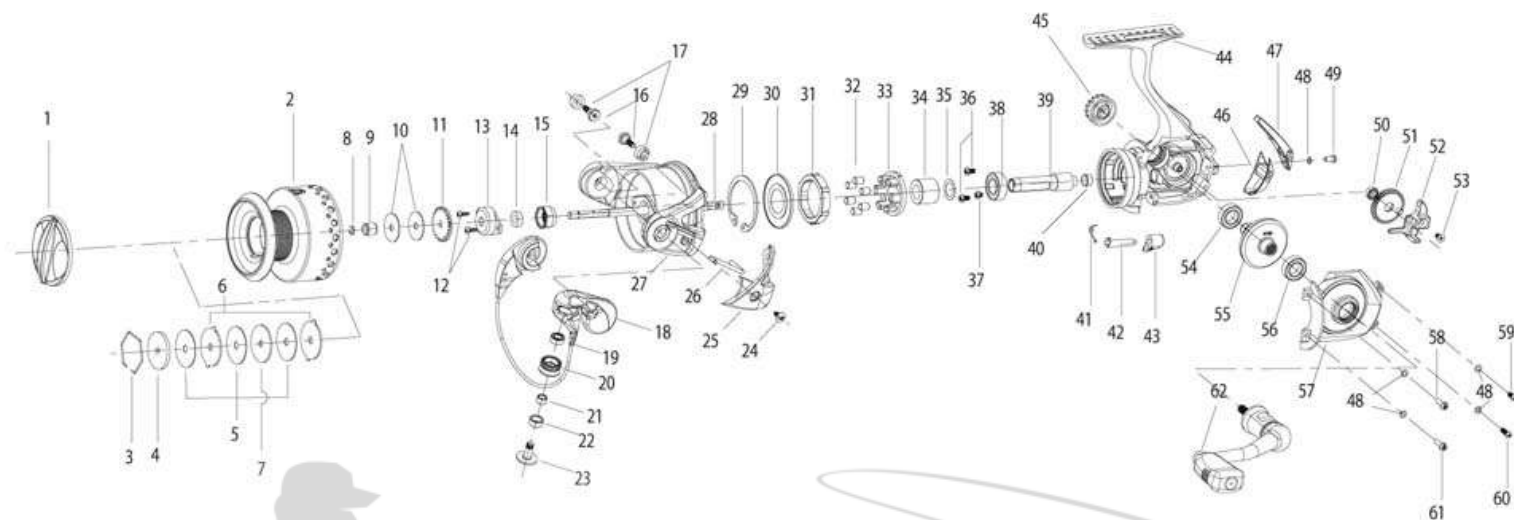

KEY #	DESCRIPTION	Catalyst 30	Catalyst 40	KEY #	DESCRIPTION	Catalyst 30	Catalyst 40
1	Drag Knob Assembly	TK332-03	TK332-03	32	Clutch Roller	TK165-01	TK165-01
2	Spool	TK021-01	TK021-51	33	Clutch Roller Retainer	TK040-01	TK040-01
3	Drag Retainer	RQ038-01	RQ038-01	34	Clutch Sleeve	TK139-01	TK139-01
4	Drag Washer "D"	SQ080-01	SQ080-01	35	Pinion Washer	AT110-01	AT110-01
5	Drag Washer "B"	RQ033-01	RQ033-01	36	Pinion Bearing Screw "A"	TK057-01	TK057-01
6	Drag Washer "A"	RQ081-01	RQ081-01	37	Pinion Bearing Screw "B"	TK057-11	TK057-11
7	Drag Washer "C"	RQ080-01	RQ080-01	38	Pinion Ball Bearing	UK028-01	UK028-01
8	Retainer Clip	TK034-01	TK034-01	39	Pinion Gear	SQ011-01	SQ011-01
9	Spool Sleeve	TK121-01	TK121-01	40	Pinion Bushing	SQ141-01	SQ141-01
9A	Spool Bearing	N/A	N/A	41	Stopper Cam Spring	TK089-01	TK089-01
10	Spool Adjust Washer	RK030-01	RK030-01	42	Stopper Cam	TK090-01	TK090-01
11	Click Gear	RQ037-01	RQ037-01	43	Stopper Lever	RQ059-01	RQ059-01
12	Rotor Nut Lock Screw	RQ094-01	RQ094-01	44	Body Sub-Assembly	TK201-03	TK201-53
13	Rotor Nut Cover	TK214-01	TK214-01	45	Handle Cap	AT073-76	AT073-76
14	Main Shaft Bushing	TK213-01	TK213-01	46	Body Rear Cover - Top	TK140-02	TK140-02
15	Rotor Nut	TK006-01	TK006-01	47	Body Rear Cover - Bottom	TK140-52	TK140-52
16	Bail Pivot Screw	TK111-01	TK111-01	48	Body Cover Screw Washer	RQ142-01	RQ142-01
17	Bail Pivot Bushing	TK109-01	TK109-01	49	Body Rear Cover Screw	RQ057-11	RQ057-11
17A	Bail Pivot Insert	N/A	N/A	50	O/S Gear Ball Bearing	EH158-01	EH158-01
18	Bail Assembly	SK347-01	SK347-01	51	O/S Gear	TQ053-51	TQ053-51
19	Line Roller Bearing	GH202-01	GH202-01	52	Oscillation Slider	TK025-01	TK025-01
20	Line Roller	TK004-01	TK004-01	53	Main Shaft Screw	RQ100-01	RQ100-01
21	Line Roller Sleeve	TK114-01	TK114-01	54	Body Ball Bearing	BL157-01	BL157-01
22	Line Roller Bushing	TK104-01	TK104-01	55	Drive Gear Assembly	AT312-51	AT312-51
23	Line Roller Screw	TK108-01	TK108-01	56	Body Cover Ball Bearing	BL157-01	BL157-01
24	Arm Lever Cover Screw	GU077-01	GU077-01	57	Body Cover Assembly	TK123-03	TK123-03
25	Arm Lever Cover	TK087-02	TK087-02	58	Body Cover Screw "A"	RQ057-04	RQ057-04
26	Kick Lever	TK019-01	TK019-01	59	Body Cover Screw "B"	SK057-11	SK057-11
27	Rotor Sub-Assembly	TK209-02	TK209-02	60	Body Cover Screw "C"	SK057-01	SK057-01
28	Main Shaft	TQ015-02	TQ015-02	61	Body Cover Screw "D"	RQ057-04	RQ057-04
29	Clutch Retaining Ring	TK060-01	TK060-01	62	Handle Assembly	TK318-51	TK318-51
30	Clutch Seal Plate	TK166-01	TK166-01	63	Trip Ramp	TK119-01	TK119-01
31	Clutch Lock Ring	TK063-01	TK063-01				