


QUANTUM[®]

Catalyst Inshore

CI10PTs

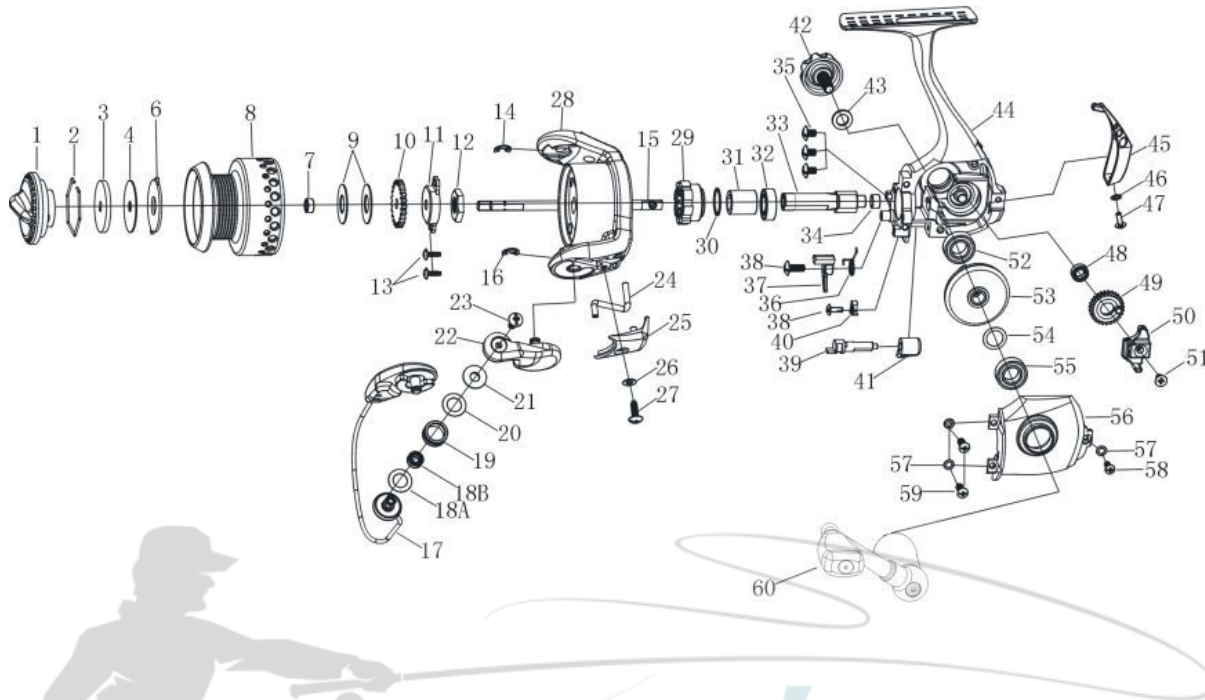

KEY #	DESCRIPTION	CI10PTs	KEY #	DESCRIPTION	CI10PTs
1	DRAG KNOB ASSEMBLY	PT332-02	31	CLUTCH SLEEVE	RQ139-01
2	DRAG RETAINER	RQ038-01	32	PINION BALL BEARING	CH028-01
3	DRAG WASHER - CERAMIC	SQ080-01	33	PINION GEAR	PQ011-01
4	DRAG WASHER - FIBER	RQ033-01	34	PINION BUSHING	PQ141-03
5	DRAG WASHER "D"	N/A	35	BEARING SCREW	RQ077-01
6	DRAG WASHER "A"	PT081-01	36	ANTI REVERSE PAWL SPRING	PQ061-01
7	SPOOL SLEEVE	PQ160-01	37	ANTI-REVERSE PAWL	PQ063-01
8	SPOOL ASSEMBLY	PQ321-53	38	ANTI-REVERSE PAWL SCREW	RQ077-01
9	SPOOL WASHER	RQ030-01	39	ANTI REVERSE CAM	PQ090-01
10	CLICK GEAR	RQ037-01	40	ANTI REVERSE CAM SPRING	PQ089-01
11	MAIN SHAFT BUSHING	RQ214-01	41	ANTI REVERSE LEVER	RQ059-01
12	ROTOR NUT	SH006-01	42	HANDLE CAP SCREW ASSY	FT373-01
13	ROTOR NUT LOCK SCREW	RQ094-01	42	HANDLE SCREW	RQ041-01
14	E-CLIP	GH034-01	43	HANDLE SCREW WASHER	PT029-01
15	MAIN SHAFT	PQ015-01	44	BODY ASSEMBLY	N/A
16	E-CLIP	GH034-01	45	BODY REAR COVER	PQ140-51
17	BAIL ASSEMBLY	PQ347-51	46	BODY REAR COVER WASHER	RQ142-01
18A	LINE ROLLER WASHER	PQ102-51	47	BODY REAR COVER SCREW	RQ062-01
18B	LINE ROLLER BEARING	GH202-01	48	O/S GEAR BALL BEARING	EH158-01
19	LINE ROLLER	CH004-04	49	OSCILLATOR GEAR	PQ053-51
20	LINE ROLLER WASHER	PQ102-51	50	OSCILLATOR SLIDER	PQ025-01
21	LINE ROLLER COLLAR	PQ102-01	51	MAIN SHAFT SCREW	RQ100-01
22	ARM LEVER ASSEMBLY	PQ307-01	52	GEAR SHAFT BALL BEARING	CH027-01
23	LINE SLIDER SCREW	AQ108-01	53	DRIVE GEAR ASSY	PT312-01
24	KICK LEVER	PQ019-01	54	ADJUST WASHER	GU105-08
25	ARM LEVER COVER	N/A	55	GEAR SHAFT BALL BEARING	CH028-01
26	ARM LEVER COVER WASHER	SQ142-01	56	BODY COVER	PQ023-53
27	ARM LEVER COVER SCREW	GU077-15	57	BODY COVER SCREW WASHER	RQ142-01
28	ROTOR ASSEMBLY	N/A	58	BODY COVER SCREW	SQ057-01
29	CLUTCH ASSEMBLY	RQ360-01	59	BODY COVER SCREW	PQ057-01
30	CLUTCH WASHER	RQ167-01	60	HANDLE ASSEMBLY	PT318-02