


# Energy PTi-A Parts Diagram - E10PTi-A / E20PTi-A

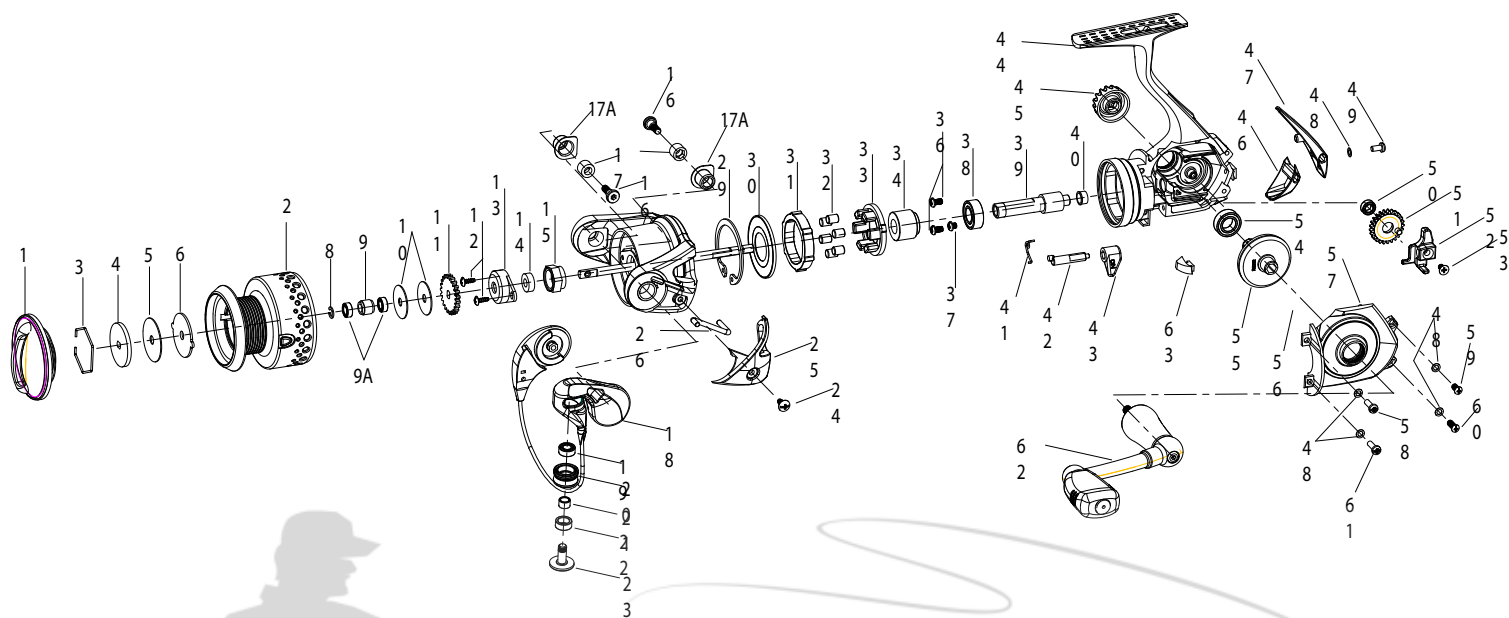

KEY#	DESCRIPTION	Energy 10	Energy 20	KEY#	DESCRIPTION	Energy 10	Energy 20
1	Drag Knob Assembly	RK332-01	SK332-01	32	Clutch Roller	RK165-01	TK165-01
2	Spool	RK021-03	SK021-03	33	Clutch Roller Retainer	RK040-01	TK040-01
3	Drag Retainer	RQ038-01	RQ038-01	34	Clutch Sleeve	RK139-01	SK139-01
4	Drag Washer "D"	SQ080-01	SQ080-01	35	Pinion Washer	AT110-01	AT110-01
5	Drag Washer "B"	RQ033-01	RQ033-01	36	Pinion Bearing Screw "A"	TK057-01	TK057-01
6	Drag Washer "A"	RQ081-01	RQ081-01	37	Pinion Bearing Screw "B"	N/A	TK057-11
7	Drag Washer "C"	N/A	N/A	38	Pinion Ball Bearing	CH028-01	BH028-01
8	Retainer Clip	TK034-01	TK034-01	39	Pinion Gear	PQ011-01	RQ011-01
9	Spool Sleeve	RK121-01	SK121-01	40	Pinion Bushing	PQ141-01	RQ141-01
9A	Spool Bearing	EH158-01	EH158-01	41	Stopper Cam Spring	RK089-01	TK089-01
10	Spool Adjust Washer	RK030-01	RK030-01	42	Stopper Cam	RK090-01	TK090-01
11	Click Gear	RQ037-01	RQ037-01	43	Stopper Lever	RQ059-01	RQ059-01
12	Rotor Nut Lock Screw	RQ094-01	RQ094-01	44	Body Sub-Assembly	RK201-01	SK201-01
13	Rotor Nut Cover	RK214-01	SK214-01	45	Handle Cap	TK073-01	TK073-01
14	Main Shaft Bushing	SK213-01	SK213-01	46	Body Rear Cover - Top	RK140-01	SK140-01
15	Rotor Nut	SK006-01	SK006-01	47	Body Rear Cover - Bottom	RK140-51	SK140-51
16	Bail Pivot Screw	TK111-01	TK111-01	48	Body Cover Screw Washer	RQ142-01	RQ142-01
17	Bail Pivot Busing	TK109-01	TK109-01	49	Body Rear Cover Screw	RQ057-11	RQ057-01
17A	Bail Pivot Insert	TK112-01	TK112-01	50	O/S gear Ball Bearing	EH158-01	EH158-01
18	Bail Assembly	RK347-01	RK347-01	51	O/S Gear	PQ053-51	PQ053-01
19	Line Roller Bearing	GH202-01	GH202-01	52	Oscillation Slider	PQ025-01	RQ025-01
20	Line Roller	RK004-01	TK004-01	53	Main Shaft Screw	RQ100-01	RQ100-01
21	Line Roller Sleeve	TK114-01	TK114-01	54	Body Ball Bearings	CH027-01	CH028-01
22	Line Roller Bushing	TK104-01	TK104-01	55	Drive Gear Assembly	PQ012-01	RQ012-01
23	Line Roller Screw	RK108-01	TK108-01	56	Body Cover Ball Bearing	CH028-01	CH028-01
24	Arm Lever Cover Screw	GU077-01	GU077-01	57	Body Cover Assembly	RK123-01	SK123-01
25	Arm Lever Cover	RK108-01	TK108-01	58	Body cover Screw "A"	RQ057-04	RQ057-04
26	Kick Lever	RK019-01	SK019-01	59	Body Cover Screw "B"	N/A	SK057-11
27	Rotor Sub-Assembly	RK209-01	SK209-01	60	Body Cover Screw "C"	SK057-11	SK057-01
28	Main Shaft	PQ015-02	RQ015-02	61	Body Cover Screw "D"	RQ057-11	RQ057-04
29	Clutch Retaining Ring	RK060-01	TK060-01	62	Handle Assembly	PT318-02	SK318-01
30	Clutch Seal Plate	RK166-01	TK166-01	63	Trip Ramp	RK119-01	SK119-01
31	Clutch Lock ring	RK063-01	TK063-01				