


# Energy PTi-A Parts Diagram - E30PTi-A / E40PTi-A

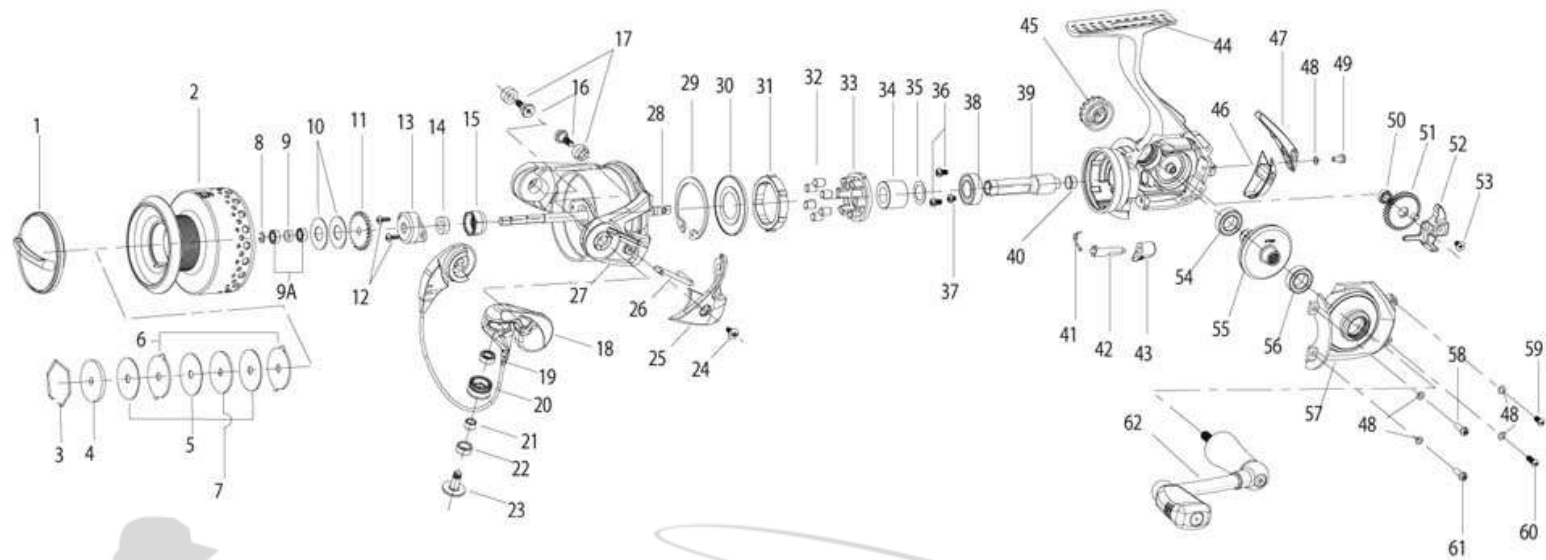

KEY#	DESCRIPTION	Energy 30	Energy 40	KEY#	DESCRIPTION	Energy 30	Energy 40
1	Drag Knob Assembly	TK332-01	TK332-01	32	Clutch Roller	TK165-01	TK165-01
2	Spool	TK321-05	TK 321-55	33	Clutch Roller Retainer	TK040-01	TK040-01
3	Drag Retainer	RQ038-01	RQ038-01	34	Clutch Sleeve	TK139-01	TK139-01
4	Drag Washer "D"	SQ080-01	SQ080-01	35	Pinion Washer	AT110-01	AT110-01
5	Drag Washer "B"	RQ033-01	RQ033-01	36	Pinion Bearing Screw "A"	TK057-01	TK057-01
6	Drag Washer "A"	RQ081-01	RQ081-01	37	Pinion Bearing Screw "B"	TK057-11	TK057-11
7	Drag Washer "C"	RQ080-01	RQ080-01	38	Pinion Ball Bearing	UK028-01	UK028-01
8	Retainer Clip	TK034-01	TK034-01	39	Pinion Gear	SQ011-01	SQ011-01
9	Spool Sleeve	TK121-01	TK121-01	40	Pinion Bushing	SQ141-01	SQ141-01
9A	Spool Bearing	EH158-01	EH158-01	41	Stopper Cam Spring	TK089-01	TK089-01
10	Spool Adjust Washer	RK030-01	RK030-01	42	Stopper Cam	TK090-01	TK090-01
11	Click Gear	RQ037-01	RQ037-01	43	Stopper Lever	RQ059-01	RQ059-01
12	Rotor Nut Lock Screw	RQ094-01	RQ094-01	44	Body Sub-Assembly	TK201-01	TK201-01
13	Rotor Nut Cover	TK214-01	TK214-01	45	Handle Cap	TK073-01	TK073-01
14	Main Shaft Bushing	TK213-01	TK213-01	46	Body Rear Cover - Top	TK140-01	TK140-01
15	Rotor Nut	TK006-01	TK006-01	47	Body Rear Cover - Bottom	TK140-51	TK140-51
16	Bail Pivot Screw	TK111-01	TK111-01	48	Body Cover Screw Washer	RQ142-01	RQ142-01
17	Bail Pivot Busing	TK109-01	TK109-01	49	Body Rear Cover Screw	RQ057-01	RQ057-01
17A	Bail Pivot Insert	N/A	N/A	50	O/S gear Ball Bearing	EH158-01	EH158-01
18	Bail Assembly	RK347-01	RK347-01	51	O/S Gear	TQ053-01	TQ053-01
19	Line Roller Bearing	GH202-01	GH202-01	52	Oscillation Slider	TQ025-01	TQ025-01
20	Line Roller	TK004-01	TK004-01	53	Main Shaft Screw	RQ100-01	RQ100-01
21	Line Roller Sleeve	TK114-01	TK114-01	54	Body Ball Bearings	BL157-01	BL157-01
22	Line Roller Bushing	TK104-01	TK104-01	55	Drive Gear Assembly	AT312-51	AT312-51
23	Line Roller Screw	TK108-01	TK108-01	56	Body Cover Ball Bearing	BL157-01	BL157-01
24	Arm Lever Cover Screw	GU077-01	GU077-01	57	Body Cover Assembly	TK123-01	TK123-01
25	Arm Lever Cover	TK108-01	TK108-01	58	Body cover Screw "A"	RQ057-04	RQ057-04
26	Kick Lever	TK019-01	TK019-01	59	Body Cover Screw "B"	SK057-11	SK057-01
27	Rotor Sub-Assembly	TK209-01	TK209-01	60	Body Cover Screw "C"	SK057-01	SK057-01
28	Main Shaft	TQ015-02	TQ015-02	61	Body Cover Screw "D"	RQ057-04	RQ057-04
29	Clutch Retaining Ring	TK060-01	TK060-01	62	Handle Assembly	TK318-01	TK318-01
30	Clutch Seal Plate	TK166-01	TK166-01	63	Trip Ramp	TK119-01	TK119-01
31	Clutch Lock ring	TK063-01	TK063-01				