



Quantum ICON IC300C Bait Cast Reel Part List					
Key #	Description	Part No.		Key #	Description
		IC300C	IC300C		
1	Palm Side Cover Assembly	EX323-02	38	Release Slider	EX039-01
2	Magnet Dial	EX026-01	39	Thumb Bar Screw	ZW053-01
3	Magnet Dial Friction Ring	NX105-01	40	Release Slider Guide Washer	EX121-01
4	Slide Cam	EX028-01	41	Release Slider Screw	QW125-02
5	Slide Cam Spring	EX071-01	42	Release Slider Spring	EX104-01
6	Spool Cover	EX051-01	43	Crank Shaft Bushing	ZW017-02
7	Spool Cover Screw	QW125-02	43	Crank Shaft Bearing	N/A
8	Spool Shaft Washer	QW032-04	44	E-Clip	QW120-01
9	Spool Shaft Bushing (Palm)	N/A	45	Crank Shaft Retainer	EX002-01
9	Spool Shaft Bearing (Palm)	QV017-01	46	Crank Shaft Retainer Screw	EX076-01
10	Clip Ring	HV080-01	47	Crank Shaft	EX008-01
11	Magnet Assembly	EX330-01	48	O/S Drive Gear	EX112-01
12	Magnet Plate Screw	QW076-01	49	Trip Ratchet	EX083-01
13	Spool Assembly	EX321-01	50	Trip Ratchet Washer	QW111-01
14	Clip Ring	EX080-01	51	Drive Gear	FX012-01
15	Spool Shaft Bearing (Gear)	EX017-01	52	Drag Disc	JX059-01
16	Frame Assembly	EX301-01	53	Drag "D" Washer	EX045-01
17	E-Clip	NX092-01	54	One Way Bearing Sleeve	EX052-01
18	Worm Shaft Bushing (Palm)	EX067-01	55	One Way Bearing	EX063-01
19	Worm Shaft	EX072-01	56	Gear Side Cover	EX024-02
20	Stablizer Bar	CX061-02	57	Gear Side Cover Screw	JX050-02
21	Side Cover Locking Lever	EX119-01	58	Spool Tension Knob O-Ring	QW101-01
22	Side Cover Locking Spring	ZW096-01	59	Spool Tension Knob Bushing	EX117-01
23	Front Support	EX099-02	60	Spool Tension Washer	QW032-04
24	Line Guide Carrier	EX047-01	61	Spool Tension Knob Washer	EX038-01
25	Line Guide Pawl	ZW006-01	62	Spool Cushion Washer	EX082-01
26	Line Guide Carrier Washer	BV035-01	63	Spool Tension Knob	EX033-01
27	Line Guide Carrier Screw	ZW007-01	64	Spring "D" Washer	JX046-01
28	Worm Shaft Guide	EX016-01	65	Star Drag Washer	EX032-01
29	Worm Shaft Washer	EX035-01	66	Star Drag	EX055-01
30	O/S Pinion Gear	EX085-01	67	Handle Washer	NX054-01
31	E-Clip	NX090-01	68	Handle Assembly	EX318-01
32	Thumb Bar	EX009-01	69	Handle Nut	QW003-01
33	Pinion Yoke	EX025-01	70	Handle Nut Cap	JX034-01
34	Pinion Yoke Spring	QW040-01	71	Handle Nut Cap Screw	QW123-01
35	Pinion Gear Assembly	FX311-01	72	Hood	EX027-02
36	Kick Lever Spring	EX097-01	73	Hood Screw	EX107-01
37	Kick Lever	EX077-01			