




# Catalyst - CT10PTi & Kinetic - KT10PTi

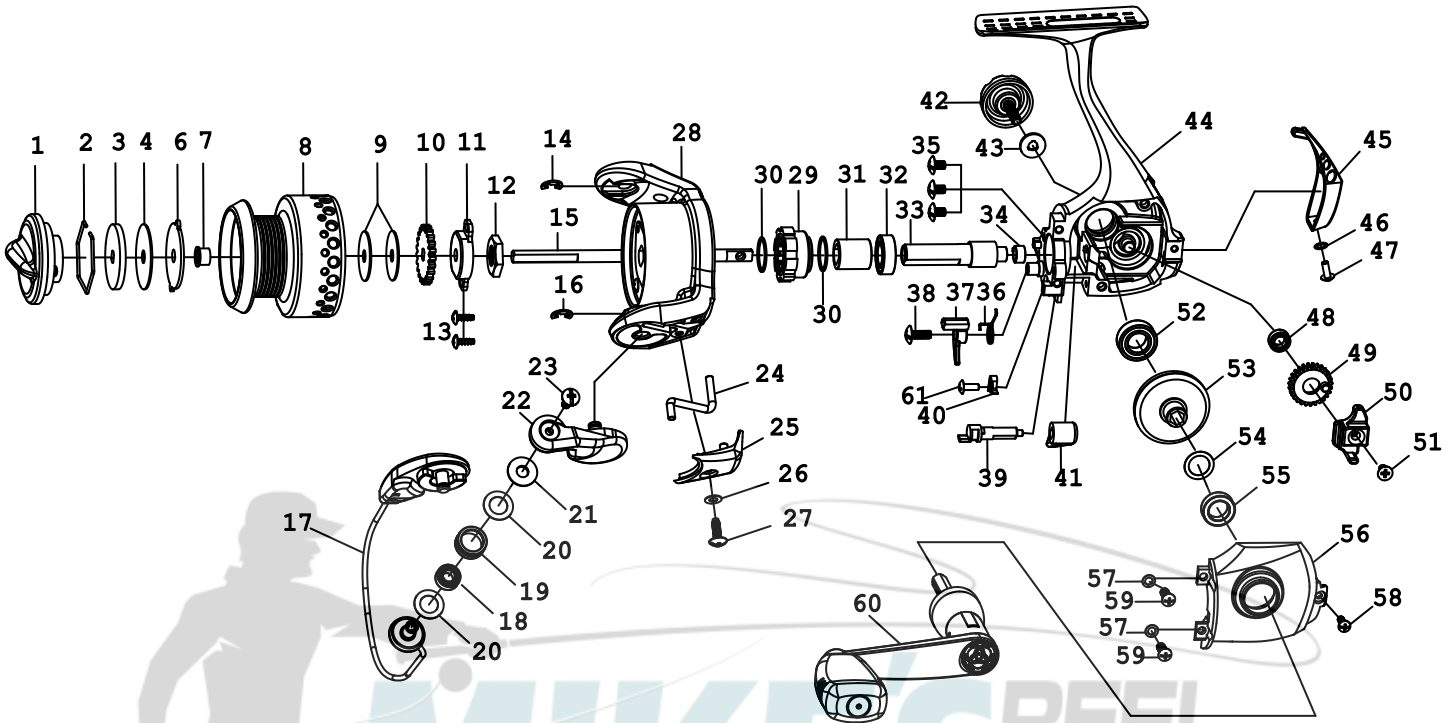

KEY #	DESCRIPTION	CT10PTi	KT10PTi
1	DRAG KNOB ASSEMBLY	PQ332-01	PQ332-03
2	DRAG RETAINER	RQ038-01	RQ038-01
3	DRAG WASHER "D"	SQ080-01	SQ080-01
4	DRAG WASHER "B"	RQ033-01	RQ033-01
5	DRAG WASHER "D"	N/A	N/A
6	DRAG WASHER "A"	RQ081-01	RQ081-01
7	SPOOL SLEEVE	PQ160-01	PQ160-01
8	SPOOL ASSEMBLY	PQ321-52	PQ321-51
9	SPOOL WASHER	RQ030-01	RQ030-01
10	CLICK GEAR	RQ037-01	RQ037-01
11	MAIN SHAFT BUSHING	RQ214-01	RQ214-01
12	ROTOR NUT	SH006-01	SH006-01
13	ROTOR NUT LOCK SCREW	RQ094-01	RQ094-01
14	E-CLIP	GH034-01	GH034-01
15	MAIN SHAFT	PQ015-01	PQ015-01
16	E-CLIP	GH034-01	GH034-01
17	BAIL ASSEMBLY	PQ347-51	PQ347-51
18	LINE ROLLER BEARING	GH202-01	GH202-01
19	LINE ROLLER	PQ004-51	PQ004-51
20	LINE ROLLER WASHER	PQ102-51	PQ102-51
21	LINE ROLLER COLLAR	PQ102-01	PQ102-01
22	ARM LEVER ASSEMBLY	PQ307-01	PQ307-03
23	LINE SLIDER SCREW	AQ108-01	AQ108-01
24	KICK LEVER	PQ019-01	PQ019-01
25	ARM LEVER COVER	PQ087-01	PQ087-01
26	ARM LEVER COVER WASHER	SQ142-01	SQ142-01
27	ARM LEVER COVER SCREW	GU077-15	GU077-15
28	ROTOR ASSEMBLY	PQ309-52	PQ309-51
29	CLUTCH ASSEMBLY	RQ360-01	RQ360-01
30	CLUTCH WASHER	RQ167-01	RQ167-01
31	CLUTCH SLEEVE	RQ139-01	RQ139-01

KEY #	DESCRIPTION	CT10PTi	KT10PTi
32	PINION BALL BEARING	CH028-01	CH028-01
33	PINION GEAR	PQ011-01	PQ011-01
34	PINION BUSHING	PQ141-01	PQ141-01
35	BEARING SCREW	RQ041-01	RQ041-01
36	ANTI REVERSE PAWL SPRING	PQ061-01	PQ061-01
37	ANTI-REVERSE PAWL	PQ063-01	PQ063-01
38	ANTI-REVERSE PAWL SCREW	RQ077-01	RQ077-01
39	ANTI REVERSE CAM	PQ090-01	PQ090-01
40	ANTI REVERSE CAM SPRING	PQ089-01	PQ089-01
41	ANTI REVERSE LEVER	RQ059-01	RQ059-01
42	HANDLE CAP SCREW	RQ073-01	RQ073-01
43	HANDLE SCREW WASHER	TH105-01	TH105-01
44	BODY ASSEMBLY	PQ301-52	PQ301-51
45	BODY REAR COVER	PQ140-51	PQ140-51
46	BODY REAR COVER WASHER	RQ142-01	RQ142-01
47	BODY REAR COVER SCREW	RQ062-01	RQ062-01
48	O/S GEAR BALL BEARING	EH158-01	EH158-01
49	OSCILLATOR GEAR	PQ053-51	PQ053-51
50	OSCILLATOR SLIDER	PQ025-01	PQ025-01
51	MAIN SHAFT SCREW	RQ100-01	RQ100-01
52	GEAR SHAFT BALL BEARING	CH027-01	CH027-01
53	DRIVE GEAR	PQ012-01	PQ012-01
54	ADJUST WASHER	GU105-08	GU105-08
55	GEAR SHAFT BALL BEARING	CH028-01	CH028-01
56	BODY COVER	RQ023-52	RQ023-51
57	BODY COVER SCREW WASHER	RQ142-01	RQ142-01
58	BODY COVER SCREW	PQ057-01	PQ057-01
59	BODY COVER SCREW	SQ057-01	SQ057-01
60	HANDLE ASSEMBLY	PQ318-52	PQ318-51
61	CAM SPRING SCREW	RQ062-01	RQ062-01