




# Catalyst - CT30PTi & CT40PTi

## Kinetic - KT30PTi & KT40PTi

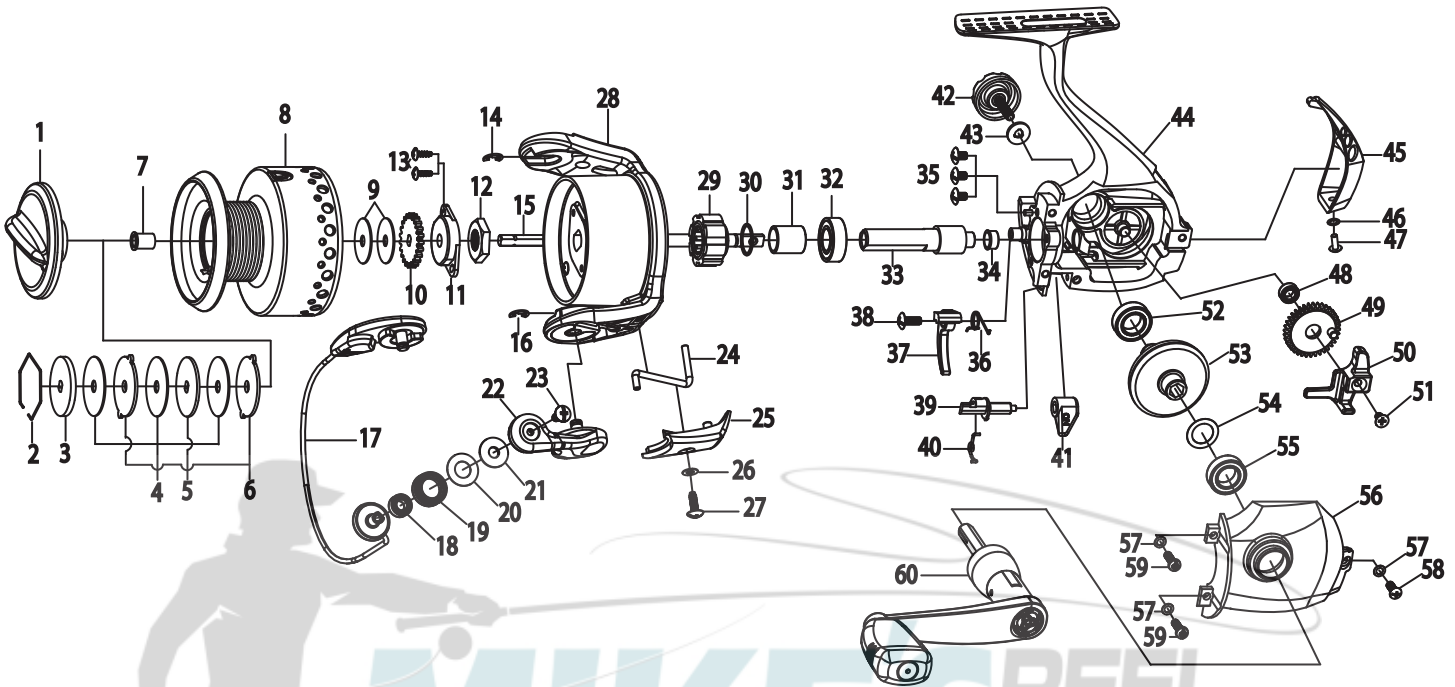

KEY No.	DESCRIPTION	CT30PTi	CT40PTi	KT30PTi	KT40PTi
1	DRAG KNOB ASSEMBLY	SQ332-01	TQ332-01	SQ332-03	TQ332-03
2	DRAG RETAINER	RQ038-01	RQ038-01	RQ038-01	RQ038-01
3	DRAG WASHER "D"	SQ080-01	SQ080-01	SQ080-01	SQ080-01
4	DRAG WASHER "B"	RQ033-01	RQ033-01	RQ033-01	RQ033-01
5	DRAG WASHER "D"	RQ080-01	RQ080-01	RQ080-01	RQ080-01
6	DRAG WASHER "A"	RQ081-01	RQ081-01	RQ081-01	RQ081-01
7	SPOOL SLEEVE	SQ160-01	TQ160-01	SQ160-01	TQ160-01
8	SPOOL ASSEMBLY	SQ321-52	TQ321-52	SQ321-51	TQ321-51
9	SPOOL WASHER	RQ030-01	RQ030-01	RQ030-01	RQ030-01
10	CLICK GEAR	RQ037-01	RQ037-01	RQ037-01	RQ037-01
11	MAIN SHAFT BUSHING	SQ214-01	SQ214-01	SQ214-01	SQ214-01
12	ROTOR NUT	TH006-01	TH006-01	TH006-01	TH006-01
13	ROTOR NUT LOCK SCREW	RQ094-01	RQ094-01	RQ094-01	RQ094-01
14	E-CLIP	GH034-01	GH034-01	GH034-01	GH034-01
15	MAIN SHAFT	SQ015-01	TQ015-01	SQ015-01	TQ015-01
16	E-CLIP	GH034-01	GH034-01	GH034-01	GH034-01
17	BAIL ASSEMBLY	SQ347-51	TQ347-51	SQ347-51	TQ347-51
18	LINE ROLLER BEARING	GH202-01	GH202-01	GH202-01	GH202-01
19	LINE ROLLER	CH004-01	CH004-01	CH004-01	CH004-01
20	LINE ROLLER WASHER	DH102-01	DH102-01	DH102-01	DH102-01
21	LINE ROLLER COLLAR	CH102-01	CH102-01	CH102-01	CH102-01
22	ARM LEVER ASSEMBLY	SQ307-01	SQ307-01	SQ307-03	SQ307-03
23	LINE SLIDER SCREW	AQ108-01	AQ108-01	AQ108-01	AQ108-01
24	KICK LEVER	SQ019-01	TQ019-01	SQ019-01	TQ019-01
25	ARM LEVER COVER	SQ087-01	TQ087-01	SQ087-01	TQ087-01
26	ARM LEVER COVER WASHER	SQ142-01	SQ142-01	SQ142-01	SQ142-01
27	ARM LEVER COVER SCREW	GU077-15	GU077-15	GU077-15	GU077-15
28	ROTOR ASSEMBLY	SQ309-52	TQ309-52	SQ309-51	TQ309-51
29	CLUTCH ASSEMBLY	SQ360-01	SQ360-01	SQ360-01	SQ360-01
30	CLUTCH WASHER	RQ167-01	RQ167-01	RQ167-01	RQ167-01

KEY No.	DESCRIPTION	CT30PTi	CT40PTi	KT30PTi	KT40PTi
31	CLUTCH SLEEVE	SQ139-01	SQ139-01	SQ139-01	SQ139-01
32	PINION BALL BEARING	UK028-01	UK028-01	UK028-01	UK028-01
33	PINION GEAR	SQ011-01	SQ011-01	SQ011-01	SQ011-01
34	PINION BUSHING	SQ141-01	SQ141-01	SQ141-01	SQ141-01
35	BEARING SCREW	RQ041-01	RQ041-01	RQ041-01	RQ041-01
36	ANTI REVERSE PAWL SPRING	RQ061-01	RQ061-01	RQ061-01	RQ061-01
37	ANTI-REVERSE PAWL	SQ063-01	SQ063-01	SQ063-01	SQ063-01
38	ANTI-REVERSE PAWL SCREW	RQ077-01	RQ077-01	RQ077-01	RQ077-01
39	ANTI REVERSE CAM	RQ090-01	RQ090-01	RQ090-01	RQ090-01
40	ANTI REVERSE CAM SPRING	RQ089-01	RQ089-01	RQ089-01	RQ089-01
41	ANTI REVERSE LEVER	RQ059-01	RQ059-01	RQ059-01	RQ059-01
42	HANDLE CAP SCREW	RQ073-02	RQ073-02	RQ073-02	RQ073-02
43	HANDLE SCREW WASHER	TH105-01	TH105-01	TH105-01	TH105-01
44	BODY ASSEMBLY	SQ301-52	SQ301-54	SQ301-51	SQ301-53
45	BODY REAR COVER	SQ140-51	SQ140-51	SQ140-51	SQ140-51
46	BODY REAR COVER WASHER	RQ142-01	RQ142-01	RQ142-01	RQ142-01
47	BODY REAR COVER SCREW	RQ062-01	RQ062-01	RQ062-01	RQ062-01
48	O/S GEAR BALL BEARING	EH158-01	EH158-01	EH158-01	EH158-01
49	OSCILLATOR GEAR	SQ053-51	TQ053-51	SQ053-51	TQ053-51
50	OSCILLATOR SLIDER	SQ025-01	SQ025-01	SQ025-01	SQ025-01
51	MAIN SHAFT SCREW	RQ100-01	RQ100-01	RQ100-01	RQ100-01
52	GEAR SHAFT BALL BEARING	BL157-01	BL157-01	BL157-01	BL157-01
53	DRIVE GEAR	SQ012-01	SQ012-01	SQ012-01	SQ012-01
54	ADJUST WASHER	GU105-13	GU105-13	GU105-13	GU105-13
55	GEAR SHAFT BALL BEARING	BL157-01	BL157-01	BL157-01	BL157-01
56	BODY COVER	SQ023-52	SQ023-54	SQ023-51	SQ023-53
57	BODY COVER SCREW WASHER	RQ142-01	RQ142-01	RQ142-01	RQ142-01
58	BODY COVER SCREW	SQ057-01	SQ057-01	SQ057-01	SQ057-01
59	BODY COVER SCREW	RQ057-01	RQ057-01	RQ057-01	RQ057-01
60	HANDLE ASSEMBLY	SQ318-52	SQ318-52	SQ318-51	SQ318-51