


# Catalyst PTi-A Parts Diagram - CT10PTi-A / CT20PTi-A

## ORDERING PARTS

Refer to the parts list and diagram for your model. Locate the part you need and identify the key number for the part you wish to order for your model. Always state the model number, part number, part description and quantity on your orders. Parts may be ordered direct from the Factory Service Department (1-800-588-9030), Authorized Warranty / Service Centers, and online at [www.tackleservice.com](http://www.tackleservice.com).

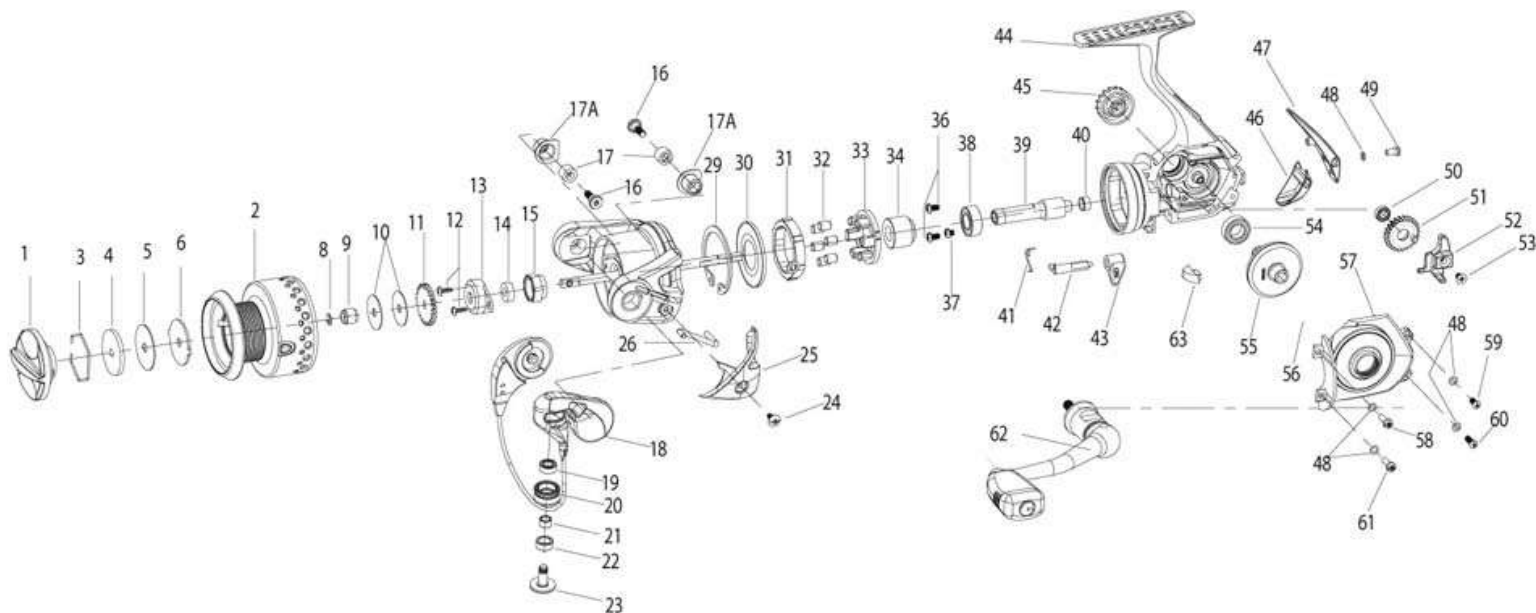

KEY #	DESCRIPTION	Catalyst 10	Catalyst 20
1	Drag Knob Assembly	RK332-03	SK332-03
2	Spool	RK021-01	SK021-01
3	Drag Retainer	RQ038-01	RQ038-01
4	Drag Washer "D"	SQ080-01	SQ080-01
5	Drag Washer "B"	RQ033-01	RQ033-01
6	Drag Washer "A"	RQ081-01	RQ081-01
7	Drag Washer "C"	N/A	N/A
8	Retainer Clip	TK034-01	TK034-01
9	Spool Sleeve	RK121-01	SK121-01
9A	Spool Bearing	N/A	N/A
10	Spool Adjust Washer	RK030-01	RK030-01
11	Click Gear	RQ037-01	RQ037-01
12	Rotor Nut Lock Screw	RQ094-01	RQ094-01
13	Rotor Nut Cover	RK214-01	SK214-01
14	Main Shaft Bushing	SK213-01	SK213-01
15	Rotor Nut	SK006-01	SK006-01
16	Bail Pivot Screw	TK111-01	TK111-01
17	Bail Pivot Bushing	RK109-01	RK109-01
17A	Bail Pivot Insert	TK112-01	TK112-01
18	Bail Assembly	RK347-01	SK347-01
19	Line Roller Bearing	GH202-01	GH202-01
20	Line Roller	RK004-01	TK004-01
21	Line Roller Sleeve	TK114-01	TK114-01
22	Line Roller Bushing	TK104-01	TK104-01
23	Line Roller Screw	RK108-01	TK108-01
24	Arm Lever Cover Screw	GU077-01	GU077-01
25	Arm Lever Cover	RK087-02	SK087-02
26	Kick Lever	RK019-01	SK019-01
27	Rotor Sub-Assembly	RK209-02	SK209-02
28	Main Shaft	RQ015-01	RQ015-01
29	Clutch Retaining Ring	RK060-01	TK060-01
30	Clutch Seal Plate	RK166-01	TK166-01
31	Clutch Lock Ring	RK063-01	TK063-01

KEY #	DESCRIPTION	Catalyst 10	Catalyst 20
32	Clutch Roller	RK165-01	TK165-01
33	Clutch Roller Retainer	RK040-01	TK040-01
34	Clutch Sleeve	RK139-01	SK139-01
35	Pinion Washer	AT110-01	AT110-01
36	Pinion Bearing Screw "A"	TK057-21	TK057-01
37	Pinion Bearing Screw "B"	N/A	TK057-11
38	Pinion Ball Bearing	CH028-01	BH028-01
39	Pinion Gear	PQ011-01	RQ011-01
40	Pinion Bushing	PQ141-01	RQ141-01
41	Stopper Cam Spring	RK089-01	TK089-01
42	Stopper Cam	RK090-01	TK090-01
43	Stopper Lever	RQ059-01	RQ059-01
44	Body Sub-Assembly	RK201-03	SK201-03
45	Handle Cap	AT073-76	AT073-76
46	Body Rear Cover - Top	RK140-02	SK140-02
47	Body Rear Cover - Bottom	RK140-52	SK140-52
48	Body Cover Screw Washer	RQ142-01	RQ142-01
49	Body Rear Cover Screw	RQ057-11	RQ057-11
50	O/S Gear Ball Bearing	EH158-01	EH158-01
51	O/S Gear	PQ053-51	RQ053-51
52	Oscillation Slider	RQ025-01	RQ025-01
53	Main Shaft Screw	RK100-01	RQ100-01
54	Body Ball Bearing	CH027-01	CH028-01
55	Drive Gear Assembly	PT312-01	QT012-01
56	Body Cover Ball Bearing	CH028-01	CH028-01
57	Body Cover Assembly	RK123-03	SK123-03
58	Body Cover Screw "A"	RQ057-04	RQ057-04
59	Body Cover Screw "B"	N/A	SK057-11
60	Body Cover Screw "C"	SK057-11	SK057-01
61	Body Cover Screw "D"	RQ057-11	RQ057-04
62	Handle Assembly	RK318-51	SK318-51
63	Trip Ramp	RK119-01	SK119-01