


# Catalyst PTi-A Parts Diagram - CT30PTi-A / CT40PTi-A

## ORDERING PARTS

Refer to the parts list and diagram for your model. Locate the part you need and identify the key number for the part you wish to order for your model. Always state the model number, part number, part description and quantity on your orders. Parts may be ordered direct from the Factory Service Department (1-800-588-9030), Authorized Warranty / Service Centers, and online at [www.tackleservice.com](http://www.tackleservice.com).

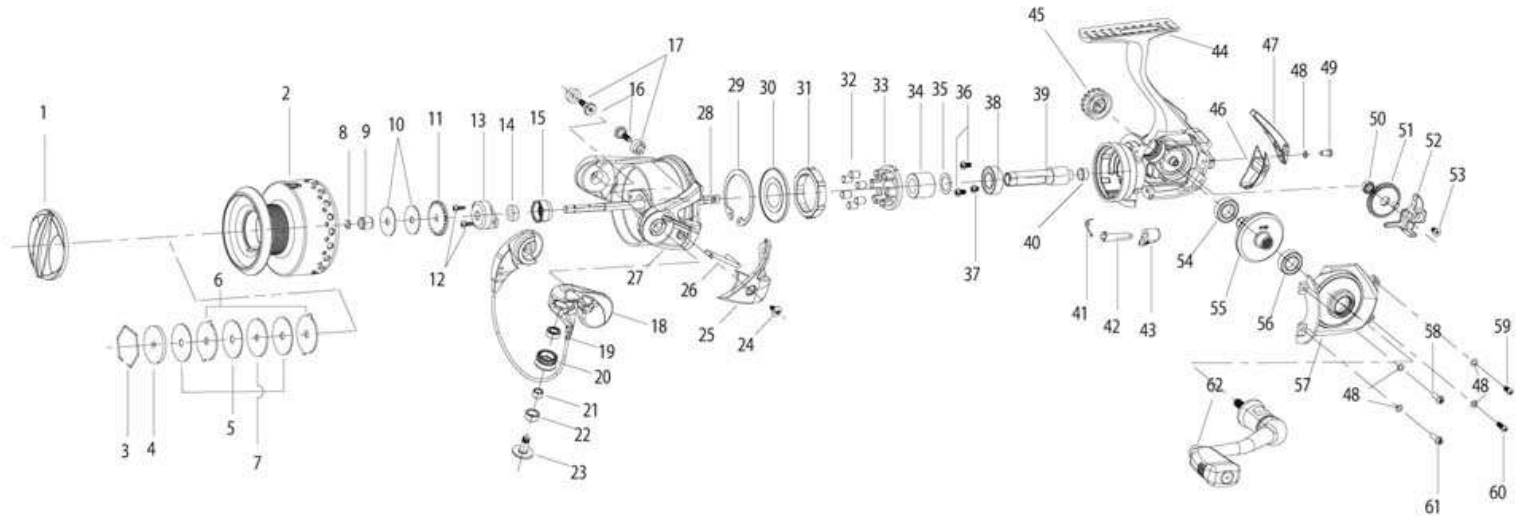

KEY #	DESCRIPTION	Catalyst 30	Catalyst 40
1	Drag Knob Assembly	TK332-03	TK332-03
2	Spool	TK021-01	TK021-51
3	Drag Retainer	RQ038-01	RQ038-01
4	Drag Washer "D"	SQ080-01	SQ080-01
5	Drag Washer "B"	RQ033-01	RQ033-01
6	Drag Washer "A"	RQ081-01	RQ081-01
7	Drag Washer "C"	RQ080-01	RQ080-01
8	Retainer Clip	TK034-01	TK034-01
9	Spool Sleeve	TK121-01	TK121-01
9A	Spool Bearing	N/A	N/A
10	Spool Adjust Washer	RK030-01	RK030-01
11	Click Gear	RQ037-01	RQ037-01
12	Rotor Nut Lock Screw	RQ094-01	RQ094-01
13	Rotor Nut Cover	TK214-01	TK214-01
14	Main Shaft Bushing	TK213-01	TK213-01
15	Rotor Nut	TK006-01	TK006-01
16	Bail Pivot Screw	TK111-01	TK111-01
17	Bail Pivot Bushing	TK109-01	TK109-01
17A	Bail Pivot Insert	N/A	N/A
18	Bail Assembly	SK347-01	SK347-01
19	Line Roller Bearing	GH202-01	GH202-01
20	Line Roller	TK004-01	TK004-01
21	Line Roller Sleeve	TK114-01	TK114-01
22	Line Roller Bushing	TK104-01	TK104-01
23	Line Roller Screw	TK108-01	TK108-01
24	Arm Lever Cover Screw	GU077-01	GU077-01
25	Arm Lever Cover	TK087-02	TK087-02
26	Kick Lever	TK019-01	TK019-01
27	Rotor Sub-Assembly	TK209-02	TK209-02
28	Main Shaft	TQ015-02	TQ015-02
29	Clutch Retaining Ring	TK060-01	TK060-01
30	Clutch Seal Plate	TK166-01	TK166-01
31	Clutch Lock Ring	TK063-01	TK063-01

KEY #	DESCRIPTION	Catalyst 30	Catalyst 40
32	Clutch Roller	TK165-01	TK165-01
33	Clutch Roller Retainer	TK040-01	TK040-01
34	Clutch Sleeve	TK139-01	TK139-01
35	Pinion Washer	AT110-01	AT110-01
36	Pinion Bearing Screw "A"	TK057-01	TK057-01
37	Pinion Bearing Screw "B"	TK057-11	TK057-11
38	Pinion Ball Bearing	UK028-01	UK028-01
39	Pinion Gear	SQ011-01	SQ011-01
40	Pinion Bushing	SQ141-01	SQ141-01
41	Stopper Cam Spring	TK089-01	TK089-01
42	Stopper Cam	TK090-01	TK090-01
43	Stopper Lever	RQ059-01	RQ059-01
44	Body Sub-Assembly	TK201-03	TK201-53
45	Handle Cap	AT073-76	AT073-76
46	Body Rear Cover - Top	TK140-02	TK140-02
47	Body Rear Cover - Bottom	TK140-52	TK140-52
48	Body Cover Screw Washer	RQ142-01	RQ142-01
49	Body Rear Cover Screw	RQ057-11	RQ057-11
50	O/S Gear Ball Bearing	EH158-01	EH158-01
51	O/S Gear	TQ053-51	TQ053-51
52	Oscillation Slider	TK025-01	TK025-01
53	Main Shaft Screw	RQ100-01	RQ100-01
54	Body Ball Bearing	BL157-01	BL157-01
55	Drive Gear Assembly	AT312-51	AT312-51
56	Body Cover Ball Bearing	BL157-01	BL157-01
57	Body Cover Assembly	TK123-03	TK123-03
58	Body Cover Screw "A"	RQ057-04	RQ057-04
59	Body Cover Screw "B"	SK057-11	SK057-11
60	Body Cover Screw "C"	SK057-01	SK057-01
61	Body Cover Screw "D"	RQ057-04	RQ057-04
62	Handle Assembly	TK318-51	TK318-51
63	Trip Ramp	TK119-01	TK119-01