



KEY NO. DESCRIPTION

PART NO.

KEY NO. DESCRIPTION

PART NO.

PREMIER 10

PREMIER 10

1	Space Washer	1195751
2	O-Ring	1195755
3	Bearing Sleeve	1195758
4	Ball Bearing	1195757
5	Seal	1195761
6	Spool Shaft Washer	1195763
7	Spool Shaft	1252579
8	Screw	1195642
9	Screw(2 Req)	1252582
10	Washer(2 Req)	1252583
11	Bail Arm	1252584
12	Ball Bearing(2 Req)	1252587
13	Line Roller	1252588
14	Spacer	1252589
15	O-Ring	1195591
16	Clip	1195592
17	Bail Holder	1252591
18	Bail Wire	1252593
19	Screw	1252594
20	Rotor Locking Plate	1195770
21	Rotor Nut	1195643
22	Screw(2 Req)	1221462
23	Bail Arm Cover	1252595
24	Pivot Lever	1195617
25	Pivot Arm	1195619
26	Bail Spring	1252598
27	Bail Trip Bar	1252599
28	Bushing(2 Req)	1221467
29	Rotor	1252600
30	Bail Holder Cover	1252602
31	Screw(3 Req)	1195572
32	Bearing Holder Cover	1252604
33	Ball Bearing(4 Req)	1181780
34	Bearing Holder	1252605
35	Clutch Assembly	1195773
36	Clutch Spring	1252606
37	Pinion	1252607
38	Screw(4 Req)	1195720
39	Rotor Brake	1252610
40	Handle Screw Cover	1221484

41	Screw(6 Req)	1221488
42	Bearing Retainer(2 Req)	1252612
43	Oscillation Mount	1252615
44	Idler Gear	1195767
45	Screw	1221496
46	Gear Box	1252619
47	Screw(2 Req)	1221499
48	Switch Spring	1221500
49	Switch Lever	1221501
50	IAR Switch	1221502
51	Clip	1221504
52	Screw	1221460
53	Stem Insert	1252622
54	Stem	1252624
55	Guide Bar	1221428
56	Main Gear	1252627
57	Shim	1195560
58	Handle Assembly	1252631
59	Ball Bearing(2 Req)	1195641
60	Oscillation Gear	1252634
61	Spacer	1195778
62	Screw	1195812
63	Screw	1195659
64	Oscillation Slider	1252635
65	Drag Knob	1252636
66	Screw(4 Req)	1221524
67	Spool Top	1252639
68	Spool	1252643
69	Line Clip Spring	1252661
70	Line Clip	1221543
71	Key Washer(2 Req)	1252646
72	Spool Washer	1252647
73	Drag Washer(2 Req)	1252648
74	O-Ring	1252649
75	Spool Click Retainer	1252650
76	Spool Click	1252651
77	Spool Bottom	1252652
78	Clip	1252653
79	Main Spool Assembly	1252654
80	Spare Spool Assembly(Not Shown)	1252658