



Key No.	Parts No.	Parts Name	Key No.	Parts No.	Parts Name
1	E57-8501	L/S OUTER RING	45	E57-4601	YOKE SPRING
2	F73-6202	L/S PLT SCREW	46	E57-1401	CLUTCH CAM
3	E57-7101	L/S PLT	47	E57-1301	CLUTCH SPRING
4	E57-7501	CLICK BUTTON	48	E57-1501	CLUTCH LEVER
5	E57-9901	CLICK PAWL	49	160-8001	CLUTCH LEVER LOCK WASHER
6	373-1602	CLICK PAWL WASHER	50	E00-7602	CLUTCH LEVER SCREW
7	320-1402	CLICK PAWL RET	51	E57-1601	COUNTER ASSEMBLY
8	E57-7601	IDLE GEAR	52	E57-1801	COUNTER PLT
9	B65-6201	IDLE GEAR COLLAR	53	E31-6701	COUNTER SCREW
10	E10-7401	IDLE GEAR SCREW	54	373-1303	COUNTER WASHER
11	375-7405	BALL BEARING WASHER	55	E10-7401	COUNTER GEAR SCREW
12	E57-7201	BALL BEARING A	56	B65-6201	COUNTER GEAR COLLAR
13	E57-7301	CLICK SPRING RET	57	E57-2101	COUNTER GEAR A
14	E57-7401	CLICK SPRING	58	E57-2201	COUNTER GEAR B
15	B83-4402	CLICK SPRING SCREW	59	E57-6801	R/S OUTER RING
16	320-8002	SPOOL GEAR RET	60	F73-6202	R/S PLT SCREW A
17	E57-8401	SPOOL GEAR	61	B93-9601	SPOOL TENSION SPRING
18	E57-8301	CLICK LEVER WASHER	62	375-7405	SPACER A
19	E57-8201	CLICK SPRING WASHER	63	B93-9702	CAST CONTROL CAP
20	E57-8101	CLICK GEAR	64	B00-8602	R/S PLT SCREW B
21	E57-7801	SPOOL	65	G35-2302	R/S PLT SCREW C
22	E57-3001	BEARING RET	66	E57-5301	DRIVE SHAFT BUSH
23	E57-2901	BALL BEARING B	67	E57-5401	DRIVE SHAFT
24	E57-2301	FRAME	68	E57-5501	DRIVE SHAFT RET
25	E57-4201	STABILIZER BAR	69	E57-8601	DRIVE SHAFT RET SCREW
26	320-5901	STABILIZER BAR RET	70	E57-5601	A/R RATCHET
27	E57-3301	WORM SHAFT	71	E57-5901	DRIVE SHAFT WASHER
28	E57-3601	WORM BEARING	72	E57-6001	DRIVE GEAR
29	E57-3701	LEVEL WIND GUARD	73	E57-6101	DRAG WASHER
30	E57-3101	LINE GUIDE	74	E57-6201	KEY WASHER A
31	E57-4001	LINE GUIDE PAWL	75	E57-6301	EARED WASHER
32	F95-0200	LINE GUIDE WASHER	76	E57-6202	KEY WASHER B
33	E57-4101	PAWL CAP	77	E57-6401	DRAG SPRING WASHER
34	E57-3801	COUNTER GEAR	78	E57-6501	SPACER B
35	G47-5002	WORM SHAFT HOLDER WASHER	79	E57-6601	SPACING SLEEVE A
36	320-5901	WORM SHAFT RET	80	E57-6701	BEARING
37	E57-5001	A/R PAWL PIN	81	E57-6901	STAR DRAG
38	E57-5101	A/R PAWL	82	E25-3901	SPACING SLEEVE B
39	E57-5201	A/R PAWL SPRING	83	E57-7001	HANDLE
40	E57-4701	PINION GEAR	84	B86-2101	HANDLE NUT
41	E57-0901	R/S PLT	85	E44-0001	HANDLE NUT PLT
42	E57-4301	YOKE PLT	86	351-1803	HANDLE NUT PLT SCREW
43	E57-4401	YOKE	87	B85-3001	OUTER RING WASHER
44	E57-4501	YOKE WASHER			