



**SLR-30II PARTS LIST**

KEY NO	PARTS NO	PARTS NAME	KEY NO	PARTS NO	PARTS NAME
100	11001519	MAIN BODY	601	16010004	DRAG NUT
101	11010029	BODY LOGO	602	16020036	ADJUST BLOCK
102	11020015	BODY FOOT	605	16050108	LEVER DRAG
103	11030003	BODY FOOT SCREW	605-1	16050094	LEVER DRAG
104	11040001	BODY FOOT NUT	607	16070053	PINION GUARD
107	11070034	LINE GUARD	608	16080004	DRAG WASHER RETAINER
107-1	11070036	LINE GUARD	609	16090012	SPRING WASHER
108	11080018	HANGER	611	16110050	EARED WASHER
114	11140005	CLAMP	612	16120064	KEY WASHER
115	11150006	WUNG SCREW	613	16130007	COMPRESSION SPRING
116	11160003	WING NUT	700	17000094	DRIVE GEAR
200	12001780	MAIN SIDE PLATE	700-1	17000092	DRIVE GEAR
201	12010027	ANTI-RE PAWL	701	17010264	DRIVE GEAR SHAFT
203	12030004	CONTROL PIN	702	17020058	PINION GEAR
204	12040002	COMPRESSION SPRING	702-1	17020070	PINION GEAR
204-1	12040029	COMPRESSION SPRING	717	17170004	MAIN SHAFT PIN
204-2	12040006	COMPRESSION SPRING	718	17180208	MAIN SHAFT
204-3	12040011	COMPRESSION SPRING	723	17230009	SILENT SPRING
205	12050033	DECORATION PLATE	900	19000004	E RETAINER
206	12060002	LEVER DRAG STOPPER CAP	900	29000001	E RETAINER
207	12070075	HOLDED PLATE	910	09100099	BALL BEARING
208	12080082	SIDE PLATE COVER	910	0910385	BALL BEARING
215	12150022	HOLD PLATE BUSHING	910	0910407	BALL BEARING
215-1	12150026	HOLD PLATE BUSHING	910	0910409	BALL BEARING
215-2	12150017	HOLD PLATE BUSHING	913	19130002	SPRING WASHER
217	12170014	ANTI-RE PAWL SPRING	920	0920207	WASHER
217-1	12170018	ANTI-RE PAWL SPRING	920	0920426	WASHER
225	12250002	BUSHING	920	0920411	WASHER
226	12260003	BALL	920	0920319	WASHER
300	13000962	VICE SIDE PLATE	920	0920481	WASHER
303	13030068	CLICK KNOB	920	09201000	WASHER
304	13040019	CLICK PAWL	920	0920490	WASHER
305	13050014	CLICK PAWL SPRING	920	0920154	WASHER
311	13110078	SIDE PLATE COVERS	920	0920005	WASHER
400	14000849	SPOOL	920	0920263	WASHER
401	14010036	CLICK GEAR	930	0930003	SCREW
402	14020008	LINE HOLDER	930	0930044	SCREW
404	14040012	PRESSURE LOAD BLOCK	930	0930402	SCREW
405	14050031	SPOOL COVER	930	0930668	SCREW
406	14060006	BUSHING	930	0930651	SCREW
500	15000347	HANDLE ASSY.	930	0930646	SCREW
501	15010010	HANDLE NUT	930	0930614	SCREW
507	15070013	DRIVE GEAR TRASMISSION PIN	930	0930469	SCREW
507-1	15070035	PUSH BUTTON	930	09301023	SCREW
507-2	15070034	PUSH BUTTON	930	0930211	SCREW
508	15080002	PUSH BUTTON SPRING	930	0930196	SCREW
513	15130025	HANDLE COVER	930	09301133	SCREW
515	15150002	HANDLE SCREW	930	09301130	SCREW
516	15160029	HANDLE NUT RETAINER	930	09301115	SCREW
517	15170015	DRIVE GEAR PIN	930	09301088	SCREW
517-1	15170004	TRANSMISSION PIN	940	0940031	O RING
600	16000101	CAST CONTROL CAP			