



SLV-10/11 PARTS LIST

KEY NO	PARTS NO	PARTS NAME
100	31000721	MAIN BODY
101	31010048	MAIN SHAFT
102	31020048	BODY FOOT
207	32070003	SCREW MAT
300	33000096	DRAG KNOB ASSY.
304	33040025	CLICK PAWL ASSY.
310	33100023	FELT DRAG WASHER
310-1	33100022	CORK DRAG WASHER
310-2	33100025	CORK DRAG WASHER
310-3	33100030	STEEL DRAG WASHER
312	33120006	ROUGH KEY WASHER
400	34000775	SPOOL ASSY.
400-1	34000301	SPOOL
404	34040023	HANDLE KNOB
405	34050013	HANDLE KNOB RIVET
408	34080014	SPOOL RETAINER
409	34090001	SPOOL RETAINER SPRING
410	34100052	SPOOL COVER ASSY.
413	34130009	COUNTER BALANCE
900	19000004	E RETAINER
901	19010012	C RETAINER
910	0910090	ONE WAY BEARING ASSY.
920	0920439	WASHER
930	0930077	SCREW
930	0930081	SCREW
930	0930084	SCREW
930	0930117	SCREW
930	0930920	SCREW