


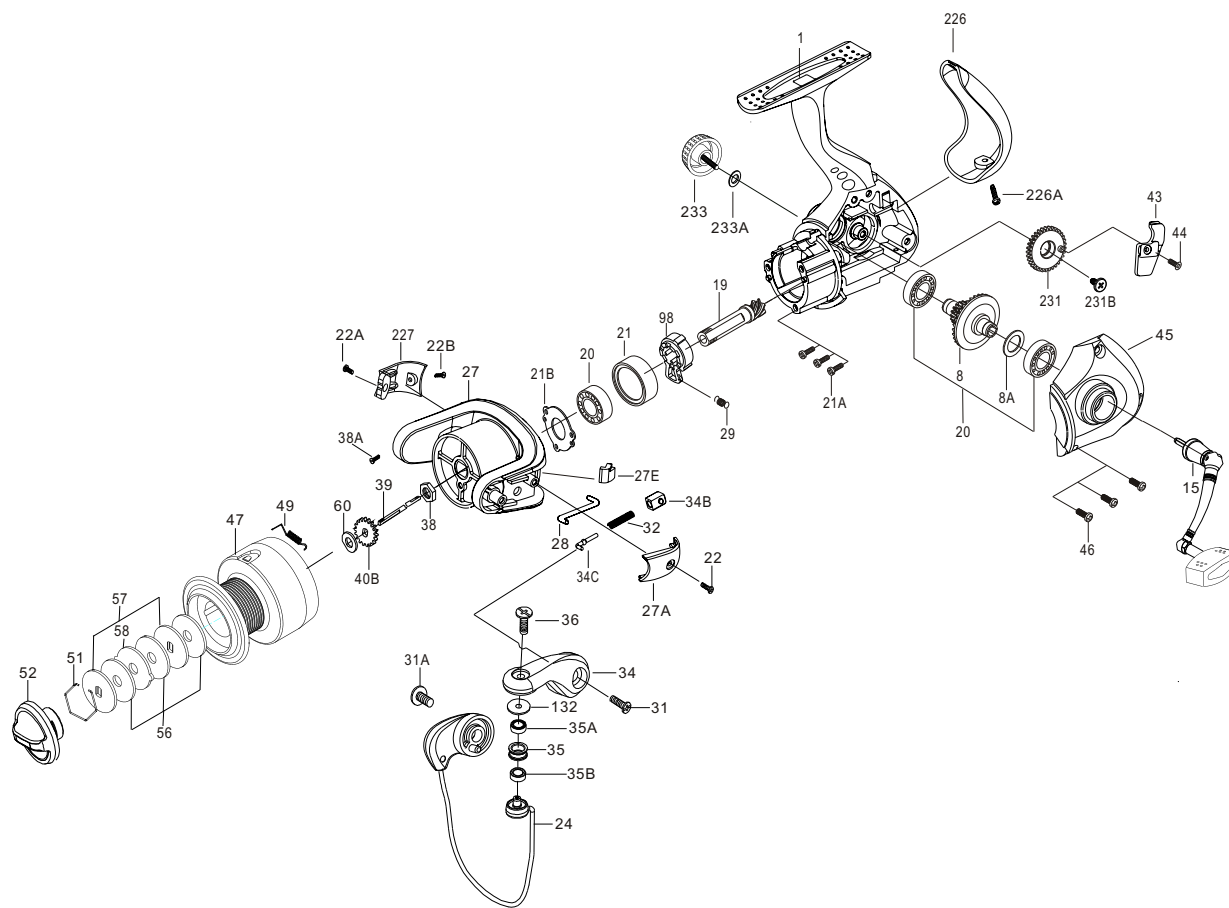

PARTS LIST FOR MODEL SV5000



KEY

NO. DESCRIPTION

1	HOUSING
8	Main Gear Assembly
8A	Main Gear Shim
15	Handle Assembly
19	Pinion Gear
20	Ball Bearing(3req.)
21	Collar
21A	Bearing Mounting Screw(3 req.)
21B	Ball Bearing Fixed Washer
22	Bail Arm Cover Screw
22A	Side Cover Screw
22B	Side Cover Screw
24	Bail Wire
27	Rotor Cup
27A	Bail Pivot Cover
27E	Balance Weight
28	Trip Lever
29	Spring
31	Bail Arm Screw
31A	Bail Wire Screw
32	Bail Spring
34	Bail Arm
34B	Pivot Guide
34C	Pivot Arm
35	Line Roller
35A	Line Roller Ball Bearing
35B	Line Roller Bushing
36	Bail Stud Screw
38	Rotor Nut
38A	Rotor Nut Screw
39	Spool Shaft
40B	Click Ratchet
43	Crosswind Block
44	Crosswind Block Screw
45	Housing Cover
46	Housing Cover Screw(3 req.)
47	Spool Assembly
49	Spool Click Spring
51	Retaining Ring
52	Drag Knob
56	Friction Drag Washer(3req.)
57	Keyed Washer(2 req.)
58	Drag Washer Earred
60	Thrust Washer
98	Clutch Retainer
132	Roller Washer
226	Rear Cap
226A	Rear Cap Screw
227	Cam Cover
231	Crosswind Gear
231B	Crosswind Gear Screw
233	Bearing Cover
233A	Bearing Cover Washer

PART

NO.

001 5000SV
008 5000SV
008A 5000CV
015 5000SV
019 5000SV
020 5000CV
021 5000SV
021A2000SV
021B5000SV
022 2000SV
022A2000SV
022B2000SV
024 5000SV
027 5000SV
027A5000SV
027E5000SV
028 5000SV
029 4000SV
031 2000SV
031 2000SV
032 5000SV
034 5000SV
034B5000SV
034C5000SV
035 4000SV
035A2000CV
035B2000SV
036 4000SV
038 5000CV
038A2000CV
039 5000SV
040B5000CV
043 5000SV
044 2000SV
045 5000SV
046 2000SV
047 5000SV
049 2000CV
051 2000CV
052 5000SV
056 2000CV
057 2000CV
058 2000CV
060 5000CV
098 5000SV
132 2000CV
226 5000SV
226A2000SV
227 5000SV
2315000SV
231B5000SV
233 2000SV
233A2000SV