


Tidewater TW30L

TIDEWATER®

Older

Use this parts list for ordering replacement parts for your Tidewater reel. When ordering parts, please specify whether you are ordering for the 10L, 10LA, 30L, or 30LA.

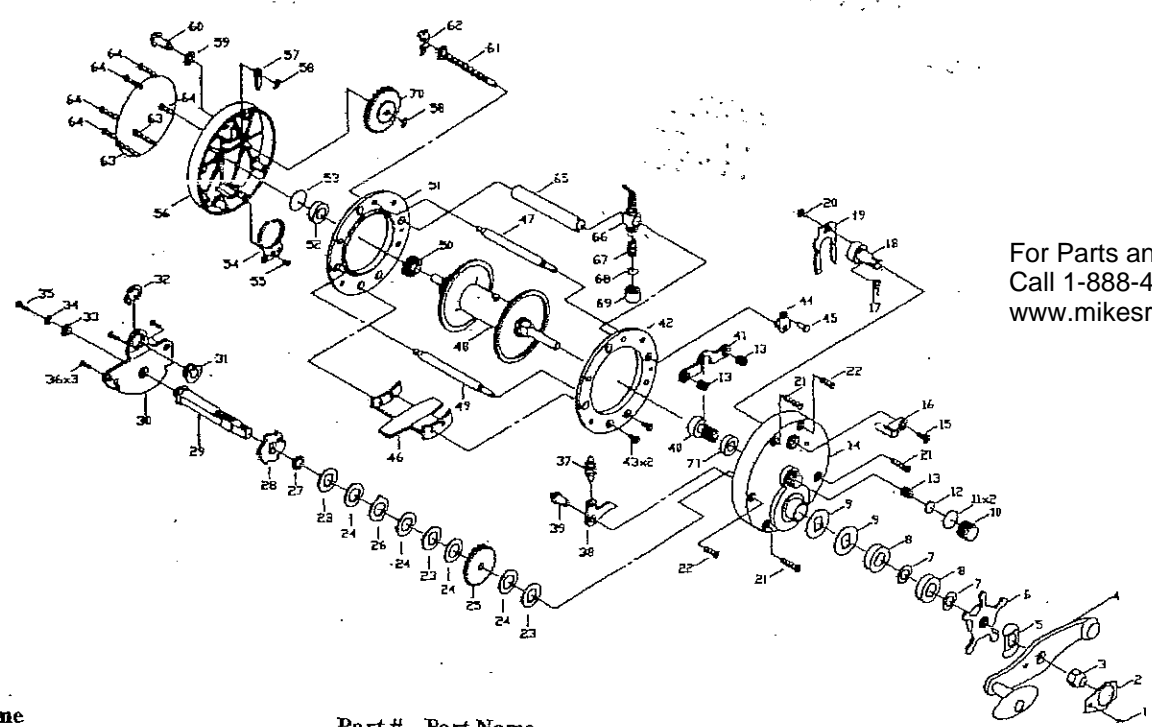

For Parts and Service
 Call 1-888-404-1119
 www.mikesreelrepair.com

Part # Part Name

- 1 Handle Nut Retainer Screw — 1146146
- 2 Handle Nut Retainer
- 3 Handle Nut
- 4 Handle Assembly — 1145394
- 5 Friction Washer — 1146858
- 6 Star Drag — 1146918
- 7 Washer(x2)
- 8 Bushing Or Ball Bearing — 1145104
- 9 Spring Washer(x2)
- 10 Spool Tension Knob — 1145218
- 11 Spacer(x2) — 1146845
- 12 Spacer — 1146336
- 13 Yoke Spring(x3) — 1146711
- 14 Right Side Plate
- 15 Clutch Lever Screw
- 16 Clutch Lever — 1145769
- 17 Clutch Cam Spring
- 18 Clutch Cam
- 19 Clutch Plate
- 20 Clutch Plate Screw
- 21 Screw(x3)
- 22 Screw(x2)
- 23 Key Washer(x3)
- 24 Drag Washer(x4)

Part # Part Name

- 25 Main Gear
- 26 Eared Washer(x2)
- 27 Fiber Washer
- 28 Ratchet Gear
- 29 Drive Shaft
- 30 Support Plate
- 31 Bushing
- 32 E. Clip
- 33 Bushing — 1145174
- 34 Washer
- 35 Screw
- 36 Support Plate Screw(x3)
- 37 Anti-Reverse Spring
- 38 Anti-Reverse Pawl
- 39 Rivet For Anti-Reverse Pawl
- 40 Pinion Gear — 1145971
- 41 Yoke
- 42 Right Side Frame Cover Assembly
- 43 Foot Screw(x2)
- 44 Bushing
- 45 Riveter
- 46 Foot
- 47 Line Carriage Support Shaft
- 48 Spool

Part # Part Name

- 49 Frame Support Shaft
- 50 Drive Gear — 1145583
- 51 Left Side Frame Cover Assembly
- 52 Bushing Or Ball Bearing
- 53 Washer
- 54 Click Power Spring — 1146722
- 55 Click Power Spring Screw
- 56 Left Side Plate Assembly
- 57 Click Pawl — 1145918
- 58 E. Clip(x2) — 1145278
- 59 Plastic Washer
- 60 Click Button
- 61 Worm Shaft — 1146296
- 62 Lock Plate
- 63 Screw(x2)
- 64 Screw(x4)
- 65 Level Wind Guard — 1145719
- 66 Line Carriage Assembly — 1145142
- 67 Pilot Guide — 1145916
- 68 Washer — 1146818
- 69 Pilot Guide Cap
- 70 Medium Gear — 1145582
- 71 Bushing Or Ball Bearing

Red-24A washer-1146855

Tension Knob Assy-1146921